EXTERNAL LINKS

QR of Manual

www.adfweb.com/download/filefold/MN67C09_ENG.pdf

BOX SHEET

Bacnet Slave / MQTT Broker Converter

QR of Box-Sheet

www.adfweb.com/download/filefold/BS67C09-IP-BIP_ENG.pdf

Box Sheet for Order code: HD67C09-IP-B2
Document code: BS67C09-IP-B2
V1.000


QR of Software

www.adfweb.com/download/filefold/SW67C09_ENG.pdf

ADFweb.com srl
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


CONNECTION SCHEME

Order code: HD67C09-IP-B2

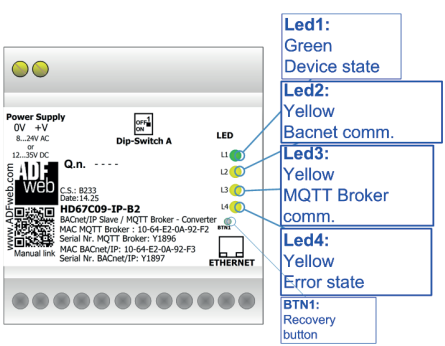



Connector2:
Ethernet Port
(RJ45 Plug)

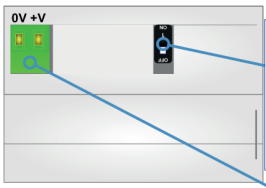

Dip-Switch A:
-Dip1 – Functiong Mode

= Normal Mode

= Boot Mode

Connector1:
Power Supply

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67C09-IP-B2