VOLKTEK

Quick Installation Guide
SEN-8425PL-24V

1. Overview

The SEN-8425PL-24V Lite-Managed PoE+ Switch is designed for semi-harsh environments to withstand vibration, shock, free fall, power surges, and a wide DC power input for factory floor and typical surveillance applications. The switch is easy to set-up and supports the critical software features required in security systems. It includes 4-port 10/100/1000Mbps PoE+ downlink with 30W per port for powered devices (PD) such as wireless access points and IP cameras and 1-port 10/100/1000Mbps RJ45 and 2-port FX/GbE SFP uplink ports for long-distance connectivity and cascading.


2. Package Checklist

The switch is shipped with the following items*.
If any of these are missing or damaged, please contact your customer service representative for assistance.

- The Switch x 1
- DIN-Rail kit x 1
- Quick Installation Guide x 1

* Visit our product webpage to locate your model and download the user manual.
* Contents of the package can be adjusted based on customer demand.

Panel view

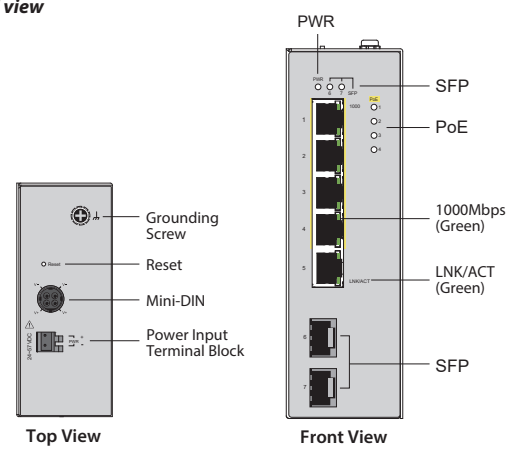

3. Mounting and Dismounting to DIN-Rail


ATTENTION:
The Switch is an open type device and shall be DIN-Rail mounted or wall mounted (optional) in the cabinet and the ambient temperature should not exceed the operating temperature.

Mounting the switch


Place the switch on the DIN rail from above using the slot and push the front of the switch toward the mounting surface until it snaps into place with a click sound.

Dismounting the switch

Press the switch from top and pull out the lower edge of the switch and then remove the switch from the DIN rail.

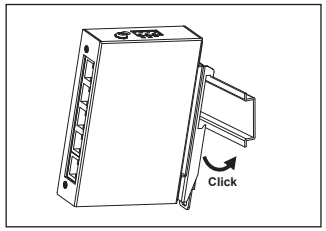

Mounting the Switch (illustration)

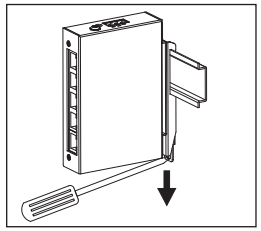
Removing the Switch (illustration)

ATTENTION:
A corrosion-free mounting rail is advisable.
When installing, make sure to allow for enough space between devices to properly install the cabling. And provide ample space for air flow.

4. Grounding the switch

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.

ATTENTION:
This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

5. Wiring requirements

WARNING:
Safety measures should be taken before connecting the power cable. Turn off the power before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct voltage. DO NOT use a voltage greater than what is specified on the product label. Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current exceeds the maximum rating, the wiring can overheat causing serious damage to your equipment.

Please read and follow these guidelines:


- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross make sure the wires are perpendicular at the intersection point.
  NOTE: Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- You should separate input wiring from output wiring.
- We advise that you label the wiring to all devices in the system.

5.1 Wiring Power Input

5.1.1 The Switch with terminal block

You can use either "mini-DIN" or "Terminal Block (PWR)" for primary power and "Terminal Block (RPS)" for secondary power source, to be a Redundant Power Input. Check the polarity while connecting.

Top views of mini-DIN and Terminal Block are shown as picture.



Terminal Block Mini-DIN

Caution:
- Use copper conductors only
- Wiring cable temperature should support at least **105°C**
- Tighten the wire to a torque value **5lb**
- The wire gauge for the terminal block should range between **12~18 AWG**

MISE EN GARDE:
- Utilisez uniquement des conducteurs en cuivre
- La température maximale du câble ne doit pas dépasser **105°C**
- Serrer le fil à une valeur de couple de **5lb**
- Le calibre de fil du bornier doit être compris entre **12 et 18 AWG**

To insert power wire and connect the specified voltage range at a maximum of 6A DC power to the power terminal block, follow the steps below:

1. Use a flat-head screwdriver to loosen the wire-clamp screws
2. Insert the negative/positive DC wires into the PWR-/PWR+ terminals, respectively
3. Tighten the wire-clamp screws to prevent the wires from loosening

ATTENTION:
Please use a power supply from 24~57VDC, the device power shall be supplied by SELV circuit

NOTE: We strongly request that each Industrial PoE switch to connect to individual power supply. Please don't use one power supply to two or more PoE switches at a time.

5.2 Cabling RJ45

Connect one end of an Ethernet cable into the Ethernet port of the switch and the other end to the attached networking device.

- Ports 1-5 supports 10/100/1000Mbps speed
- Ports 6-7 supports 100FX/Gigabit speed
- All the RJ45 ports on the switch support auto-negotiation and auto MDI/MDI-X to eliminate the need for crossover cabling.

* Category 5e cable or above should be used.

6. LED Indicators

PWR (Green)	Illuminated	Primary power on
	Off	Primary power off or failure
PoE (Green) (1~4th RJ45 port)	Illuminated	Supplying power to powered device (PD)
	Off	PoE power feeding is off or not supplied
1000 (Green) (1~5th RJ45 port)	Illuminated	Link speed at 1000Mbps
	Off	Link speed at 10/100Mbps
LNK/ACT (Green) (1~5th RJ45 port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed
SFP (Green) (6~7th Fiber port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed

7. Environmental limits

Operating Temperature	-10°C~60°C (14°F~140°F)
Storage Temperature	-40°C~85°C (-40°F~185°F)
Ambient relative humidity	5 to 95% (non condensing)

ATTENTION:
This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

ATTENTION:
If the equipment is used in a manner not specified by the VOLKTEK, the protection provided by the equipment may be impaired.

ATTENTION:
Please leave at least 5cm of space at the left and right of the unit for ventilation.

8. Configuration

Connect through Web Browser:

- Connect your computer to one of the Ethernet ports.
- Use the default IP-address 192.168.0.254 to login to the switch.

Default Username	admin
Default Password	admin

NOTE: For more details on configuration please refer user manual.

LIMITED WARRANTY

VOLKTEK Corporation warrants this product against defect in materials and workmanship for a period of THREE (3) YEARS to the original purchaser.

If you discover a defect, VOLKTEK will, at its sole option, repair or replace the product at no additional charge, provided that you contact VOLKTEK technical support to obtain a Return Merchandise Authorization Number (RMA) and instruction on how and where repairs can be made. This warranty does not apply if the product has been damaged by accident, abuse, misuse, misapplication, neglect, fire, water, lightning or other acts of nature, failure to follow supplied instructions, installation or removal, have been repaired or have undergone attempted repair by unauthorized personnel without written consent from VOLKTEK, modified, defaced, or has its serial numbers removed. VOLKTEK reserves the right to use remanufactured, refurbished, or used parts and components in making warranty repairs.

All expressed or implied warranties for this product, including the implied warranties of merchantability and fitness for a particular purpose are limited in duration to the warranty period. No warranties expressed or implied will applied after this period. VOLKTEK shall not be liable for lost profits, damage to other property caused by any defects of this product, or damages based upon inconvenience, loss of product use, loss of time, commercial use, incidental and/or consequential damages for the breach of any expressed or implied warranty, including damages to property, and to the extent permitted by law, damages for personal injury, even if VOLKTEK has been advised of the responsibilities of such damages.

If you have any further questions, please contact Customer Support:

Address of the manufacturer.

VOLKTEK CORPORATION
4F, 192 Liancheng Rd, Zhonghe, New Taipei 235038, Taiwan
Email: support@volktek.com
Tel: +886-2-8242-1000
Fax: +886-2-8242-3333