VOLKTEK

Quick Installation Guide
IMC-563P

1. Overview

IMC-563P is an Unmanaged PoE+ Industrial Mini-Media Converter which is designed for reliable network connectivity even in tough environment. The converter supports 1 100/1000Base-T RJ45 port with IEEE802.3af/at PoE standard and 1 100FX/1000Base-X SFP slot. With IP30 protection it exhibits extreme tolerance in harsh temperature environment ranging from -40°C to 75°C. IMC-563P quickly installation with no software or additional configuration needed, proves to be a perfect solution for round the clock surveillance in hard-to-reach locations.

It includes 1-port 10/100/1000Mbps PoE+ with 30W PoE+ port for powered devices.

2. Package Checklist

IMC-563P is shipped with the following items*. If any of these are missing or damaged, please contact your customer service representative for assistance.


- IMC-563P Device
- DIN rail kit
- Quick Installation Guide

** Contents of the package can be adjusted based on customer demand.*

3. Hardware Installation Procedure

STEP 1:
Take out the device from its packing

STEP 2:
Attach the DIN rail kit as shown in picture

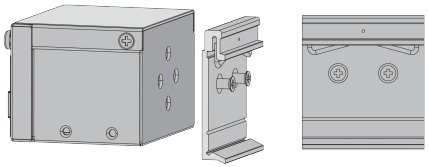

STEP 3:
Connect 48VDC adapter to power input or 48~57VDC input to terminal block of the IMC-563P

· *Please note the "+" & "-" symbols before connecting terminal block.*



Note:
- ***The highest degree of temperature operation certified by UL is -40°C~75°C (-40°F~167°F).***
- ***Two PoE Converters must be installed at least 50 mm apart.***

ATTENTION:
This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

ATTENTION:
Cet appareil est conforme à la partie 15 des règles de la FCC. Le fonctionnement est soumis aux conditions suivantes :
1. Cet appareil ne doit pas causer d'interférences nuisibles.
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

ATTENTION:
If the equipment is used in a manner not specified by the VOLKTEK, the protection provided by the equipment may be impaired.

ATTENTION:
Si l'équipement est utilisé d'une manière non spécifiée par VOLKTEK, la protection fournie par l'équipement peut être altérée.

ATTENTION:
Please use a power supply from 48~57VDC, the device power shall be supplied by SELV circuit.

ATTENTION:
Veuillez utiliser une alimentation de 48 à 57 V CC, l'alimentation de l'appareil doit être fournie par un circuit SELV.

ATTENTION:
Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label.

ATTENTION:
Utilisation en intérieur et degré de pollution II, il doit être essuyé avec un chiffon sec pour nettoyer l'appareil et l'étiquette.

Safety first

Turn the power off before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct voltage. Do NOT use a voltage greater than what is specified on the product label.


Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current go above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Note: Please MUST turn off the power before unplug/plug DC Jack or Terminal block connector

STEP 4:
Connect the Ethernet (RJ45) port to the media converter. See the L/A (Link/Activity) LED to confirm if the connection is established

STEP 5:
Insert the SFP module and connect the fiber cable to the fiber port


Panel view

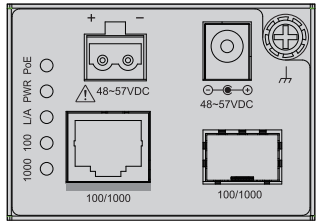

4. Location

The IMC-563P can be DIN-Rail-mounted in the cabinet or enclosure.

DIN-Rail-mounted with IMC-563P

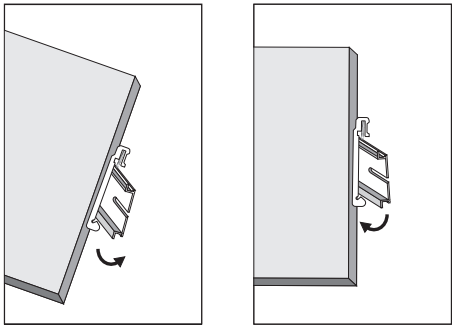

Mounting the Switch Removing the Switch

5. Cabling RJ45

This feature eliminates the worry of using specific cable types.

Note: Category 5e cable or above should be used.

The related PoE pinout of RJ45 is shown in below.

Pin	Power	8-pin RJ45
1	V+	
2	V+	
3	V-	
6	V-	

6. LED Indicators


PoE (Green)	Illuminated	PoE power is delivered to PD device
	Off	No outgoing PoE power
PWR (Green)	Illuminated	Power on
	Off	Power off or failure
L/A Link/Activity (Green)	Illuminated	Ethernet (RJ45) link up
	Blinking	Activity(receiving or transmitting data)
	Off	Port disconnected or link failed
100 (Green)	Illuminated	Both RJ45 and SFP link speed at 100Mbps
	Off	Either SFP or RJ45 is not linking at 100Mbps speed
1000 (Green)	Illuminated	Both RJ45 and SFP link speed at 1000Mbps
	Off	Either SFP or RJ45 is not linking at 1000Mbps speed


7. Configuration diagrams

The Media converters can be used in pair to communicate between copper switch as in diagram 1 or single converter can be used to communicate between fiber and copper switch. Please follow below diagrams and associated table to set up your environment.

■ Diagram I: Converters used in pair


The below diagram illustrates how media converters can be used to increase the distance between two copper switches. To effectively communicate the speeds of copper and fiber ports of media converter must be same. The following table shows the speed user can use between media converter and switches and which LED will glow with respect to that speed.






■ Diagram II: Single Media Converter

The below diagram illustrates how one media converter can be used to increase the distance between copper switch and fiber switch. To effectively communicate the speeds of copper and fiber ports of media converter must be same.





8. Limited Warranty

VOLKTEK Corporation warrants this product against defect in materials and workmanship for a period of FIVE (5) YEARS to the original purchaser.

If you discover a defect, VOLKTEK will, at its sole option, repair or replace the product at no additional charge, provided that you contact VOLKTEK technical support to obtain a Return Merchandise Authorization Number (RMA) and instruction on how and where repairs can be made. This warranty does not apply if the product has been damaged by accident, abuse, misuse, misapplication, neglect, fire, water, lightning or other acts of nature, failure to follow supplied instructions, installation or removal, have been repaired or have undergone attempted repair by unauthorized personnel without written consent from VOLKTEK, modified, defaced, or has its serial numbers removed. VOLKTEK reserves the right to use remanufactured, refurbished, or used parts and components in making warranty repairs.

All expressed or implied warranties for this product, including the implied warranties of merchantability and fitness for a particular purpose are limited in duration to the warranty period. No warranties expressed or implied will applied after this period. VOLKTEK shall not be liable for lost profits, damage to other property caused by any defects of this product, or damages based upon inconvenience, loss of product use, loss of time, commercial use, incidental and/or consequential damages for the breach of any expressed or implied warranty, including damages to property, and to the extent permitted by law, damages for personal injury, even if VOLKTEK has been advised of the responsibilities of such damages.

If you have any further questions, please contact Customer Support:

Address of the manufacturer.

Volktek Corporation,

4F, 192 Liancheng Rd, Zhonghe,

New Taipei 23553, Taiwan

v1.1
M64-0000000-061