SIEMENS

Industrial Controls

Monitoring and control devices SIRIUS 3UG48 / 3RR24 monitoring relays for IO-Link

Equipment Manual

04/2025
A5E03394170020A/RS-AE/006

Introduction 1
Safety information 2
System overview 3
3RR24 current monitoring relays 4
3UG4815 / 3UG4816 line monitoring relays 5
3UG4822 current monitoring relays 6
3UG4825 residual current monitoring relay with 3UL23 transformer 7
3UG4832 voltage monitoring relay 8
3UG4841 cos phi and active current monitoring relay 9
3UG4851 speed monitoring relays 10
Accessories 11
Configuring the IO-Link 12
References A
Parameters B
Dimension drawings C
Menu-based operation D
Process data and data sets E

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

⚠ DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

⚠ WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

⚠ CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

⚠ WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens Aktiengesellschaft. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Siemens Aktiengesellschaft
Smart Infrastructure
Electrical Products
Postfach 10 09 53
93009 Regensburg
GERMANY

℗ 04/2025 Subject to change

Copyright © Siemens 2011.
All rights reserved

Table of contents

1 Introduction 9

1.1 Purpose of the manual 9

1.2 Change documentation 10

1.3 Siemens Industry Online Support 11

1.4 DataMatrix code 13

1.5 Siemens Industry Online Support app 14

1.6 Support Request 15

2 Safety information 17

2.1 Standards 17

2.2 Requirements for switching high-efficiency motors 18

2.3 Voltages 19

2.4 Notes on the protection of device connections 20

2.5 Product-specific safety information 21

2.5.1 Current information about operational safety 22

2.6 Recycling and disposal 23

2.7 Cybersecurity information 24

2.8 Warning notice 25

2.9 Approvals, test certificates, characteristics 26

3 System overview 27

3.1 Product description 27

3.2 Application areas 29

3.3 Application planning 30

3.4 Connection systems 31

3.4.1 Screw connection 31

3.4.2 Spring-loaded connection 33

3.4.3 Making spring-loaded connections (3RR24 IO-Link) 34

3.4.4 Device replacement by means of removable terminals 37

3.4.5 Connection options for IO-Link 39

3.5 Mounting/removal 41

3.5.1 Mounting 3RR24 current monitoring relays 41

3.5.2 Mounting 3UG4 46

3.6 Overview of the functions 48

3.7 Menu-based operation 50

4 3RR24 current monitoring relays 55
4.1 Application areas 55
4.2 Operator controls and connection terminals 57
4.3 Function 59
4.4 Operation 63
4.5 Diagnostics 66
4.5.1 Indications on the display 66
4.5.2 Diagnostics via IO-Link 68
4.5.3 Reset 69
4.6 Circuit diagrams 71
4.6.1 Internal circuit diagrams 71
4.7 Technical data 72
5 3UG4815 / 3UG4816 line monitoring relays 73
5.1 Application areas 73
5.2 Operator controls and connection terminals 74
5.3 Functionality 75
5.4 Operation 78
5.5 Diagnostics 80
5.5.1 Indication on the display 80
5.5.2 Diagnostics via IO-Link 82
5.5.3 Reset 83
5.6 Circuit diagrams 85
5.6.1 Internal circuit diagrams 85
5.6.2 Typical circuit diagrams 86
5.7 Technical data 87
6 3UG4822 current monitoring relays 89
6.1 Application areas 89
6.2 Operator controls and connection terminals 90
6.3 Functionality 91
6.4 Operation 95
6.5 Diagnostics 98
6.5.1 Indication on the display 98
6.5.2 Diagnostics via IO-Link 99
6.5.3 Reset 101
6.6 Circuit diagrams 102
6.6.1 Internal circuit diagrams 102
6.6.2 Typical circuit diagrams 102
6.7 Technical data 104

7 3UG4825 residual current monitoring relay with 3UL23 transformer 105

7.1 Application areas 105

7.2 Operator controls and connection terminals 106

7.3 Function 107

7.4 Operating 114

7.5 Diagnostics 116
7.5.1 Indications on the display 116
7.5.2 Diagnostics via IO-Link 117
7.5.3 Reset 118

7.6 Circuit diagrams 120
7.6.1 Internal circuit diagrams 120
7.6.2 Wiring examples 121

7.7 Technical data 123

8 3UG4832 voltage monitoring relay 125

8.1 Application areas 125

8.2 Operator controls and connection terminals 126

8.3 Functionality 127

8.4 Operation 129

8.5 Diagnostics 131
8.5.1 Indication on the display 131
8.5.2 Diagnostics via IO-Link 132
8.5.3 Reset 134

8.6 Circuit diagrams 135
8.6.1 Internal circuit diagrams 135
8.6.2 Typical circuit diagrams 135

8.7 Technical data 136

9 3UG4841 cos phi and active current monitoring relay 137

9.1 Application areas 137

9.2 Operator controls and connection terminals 138

9.3 Functionality 139

9.4 Operation 144

9.5 Diagnostics 146
9.5.1 Indication on the display 146
9.5.2 Diagnostics via IO-Link 148
9.5.3 Reset 149

9.6 Circuit diagrams 151
9.6.1 Internal circuit diagrams 151
9.6.2 Typical circuit diagrams 151

9.7 Technical data 153

10 3UG4851 speed monitoring relays 155
10.1 Application areas 155
10.2 Operator controls and connection terminals 156
10.3 Functionality 157
10.4 Operation 161
10.5 Diagnostics 163
10.5.1 Indication on the display 163
10.5.2 Diagnostics via IO-Link 164
10.5.3 Reset 166
10.6 Circuit diagrams 167
10.6.1 Internal circuit diagrams 167
10.6.2 Typical circuit diagrams 167
10.7 Technical data 168
11 Accessories 169
11.1 Accessories for 3RR24 current monitoring relays 169
11.1.1 Sealable cover 169
11.1.2 Terminal support for stand-alone assembly 170
11.2 Accessories for 3UG48 monitoring relays 174
11.2.1 Sealable cover 174
11.2.2 Push-in lugs 175
11.2.3 3UL23 residual current transformers for 3UG4825 monitoring relays 175
11.2.3.1 General information 176
11.2.3.2 Installation specifications 178
11.2.3.3 Potential for optimization 181
11.2.3.4 Installation faults 183
11.2.3.5 Internal circuit diagram 186
11.2.3.6 Installing 187
11.2.3.7 Technical specifications in the Siemens SiePortal 188
11.2.3.8 Dimension drawings 189
12 Configuring the IO-Link 193
12.1 Combinations 193
12.2 Configuring with STEP 7 and the S7-PCT Port Configuration Tool 194
12.2.1 Basic procedure and prerequisites 194
12.2.2 Configuration 195
12.3 Configuring with the S7-PCT port configuration tool (stand-alone) 196
12.3.1 Application 196
12.3.2 Basic procedure and prerequisites 196
12.3.3 Configuration 196
12.4 Block library for IO-Link (LIOLink) 198
12.5 Replacing an IO-Link device 199
12.5.1 Replacing an IO-Link device according to the IO-Link communication specification V1.0 199
12.5.1.1 Procedure 199
12.5.1.2 Procedure with PG/PC 199
12.5.1.3 Procedure without PG/PC 199

12.5.2 Replacing an IO-Link device according to the IO-Link communication specification V1.1 200
A References 201
B Parameters 203
C Dimension drawings 213
C.1 Dimension drawings 3RR24 current monitoring relays 213
C.2 Dimension drawings 3UG4 monitoring relays. (3 connecting terminals) 216
C.3 Dimension drawings 3UG4 monitoring relays. (4 connecting terminals) 217
D Menu-based operation 219
E Process data and data sets 233
E.1 Structure of the data sets 233
E.2 IO-Link communication parameters 234
E.3 Analog value coding 235
E.4 3RR24 current monitoring relays 237
E.5 3UG4815 line monitoring relay 253
E.5.1 System commands - data set (index) 2 255
E.6 3UG4816 line monitoring relay 261
E.6.1 System commands - data set (index) 2 263
E.7 3UG4822 current monitoring relays 269
E.7.1 System commands - data set (index) 2 271
E.7.2 Measured values - data set (index) 95 273
E.8 3UG4825 residual current monitoring relay 277
E.8.1 System commands - data set (index) 2 279
E.9 3UG4832 voltage monitoring relay 284
E.9.1 System commands - data set (index) 2 286
E.10 3UG4841 cos phi and active current monitoring relay 291
E.10.1 System commands - data set (index) 2 293
E.11 3UG4851 speed monitoring relays 299
E.11.1 System commands - data set (index) 2 301
Index 307

Introduction

1

1.1 Purpose of the manual

Purpose of the manual

This manual describes the 3UG48/3RR24 monitoring relays for IO-Link.

The manual provides overview information for integrating the monitoring relays into the system environment, and it describes the hardware and software components of the devices.

The information in this manual enables you to commission the monitoring relays.

Required basic knowledge

To understand these operating instructions you should have a general knowledge of automation engineering and low-voltage switchgear.

Scope of the manual

The manual is valid for these monitoring relays. It contains a description of the devices that is valid at the time of publication.

1.2 Change documentation

Release number	Changes
04/2025	Changes and additions to content in individual chapters because of new firmware 3RR24

1.3 Siemens Industry Online Support

Information and service

At Siemens Industry Online Support you can obtain up-to-date information from our global support database:

- Product support
- Application examples
- Forum
- mySupport

Link: Siemens Industry Online Support (https://support.industry.siemens.com/cs/de/en)

Product support

You can find information and comprehensive know-how covering all aspects of your product here:

- **FAQs**
  Answers to frequently asked questions
- **Manuals/operating instructions**
  Read online or download, available as PDF or individually configurable.
- **Certificates**
  Clearly sorted according to approving authority, type and country.
- **Characteristics**
  For support in planning and configuring your system.
- **Product announcements**
  The latest information and news concerning our products.
- **Downloads**
  Here you will find updates, service packs, HSPs and much more for your product.
- **Application examples**
  Function blocks, background and system descriptions, performance statements, demonstration systems, and application examples, clearly explained and represented.
- **Technical data**
  Technical product data for support in planning and implementing your project

Link: Product support (https://support.industry.siemens.com/cs/ww/en/ps)

mySupport

The following functions are available in your personal work area "mySupport":

- **Support Request**
  Search for request number, product or subject
- **My filters**
  With filters, you limit the content of the online support to different focal points.

- **My favorites**
  With favorites you bookmark articles and products that you need frequently.
- **My notifications**
  Your personal mailbox for exchanging information and managing your contacts. You can compile your own individual newsletter in the "Notifications" section.
- **My products**
  With product lists you can virtually map your control cabinet, your system or your entire automation project.
- **My documentation**
  Configure your individual documentation from different manuals.
- **CAx data**
  Easy access to CAx data, e.g. 3D models, 2D dimension drawings, EPLAN macros, device circuit diagrams
- **My IBase registrations**
  Register your Siemens products, systems and software.

Further documentation

To install and connect the monitoring relays, you require the operating instructions of the monitoring relays used.

The Appendix "References (Page 201)" has a list of the operating instructions.

1.4 DataMatrix code

DataMatrix code

A DataMatrix code is lasered onto all 3UG4/3RR2 monitoring relay devices underneath the label.

The DataMatrix codes are standardized in ISO/IEC 16022. The DataMatrix codes on Siemens devices use ECC200 coding for powerful error correction.

The following device information is encoded in the DataMatrix codes as a bit stream:

- Article number
- Serial number
- Where applicable, MAC address

This information is stored in the following format in the DataMatrix code:

1P	Article number	+	S	Location	/	Date	Serial number
Data identifier	User content	Separator	User content		Separator	User content	User content

Note

The information content is displayed without spaces.

This machine-readable information simplifies and accelerates handling of the respective devices.
As well as fast access to the serial numbers of the respective devices for unique identification, the DataMatrix codes simplify communication with Siemens Technical Support.

1.5 Siemens Industry Online Support app

Siemens Industry Online Support app

The Siemens Industry Online Support app provides you access to all the device-specific information available on the Siemens Industry Online Support portal for a particular article number, such as operating instructions, manuals, data sheets, FAQs etc.

The Siemens Industry Online Support app is available for Android and iOS:



Android



iOS

1.6 Support Request

After you have registered, you can use the Support Request form in the online support to send your question directly to Technical Support:

Support Request:	Internet (https://support.industry.siemens.com/My/ww/en/requests)

Safety information

2

2.1 Standards

Applicable standards

The monitoring relays comply with the following standards:

Table 2-1 Standards - monitoring relays

Device standards	• IEC / EN 60947-1 "Low-voltage switchgear and controlgear: General rules" • IEC / EN 60947-4-1 "Contactors and motor-starters: Electromechanical contactors and motor-starters" • IEC / EN 60947-5-1 "Control circuit devices and switching elements: Electromechanical control circuit devices"; VDE 0660 "Low-voltage switchgear" • DIN EN 50042 "Terminal marking" • DIN EN 60044-1 "Instrument transformers - Part 1: Current transformers"
EMC standard[1)]	• IEC / EN 61000-6-2 "Generic standards - Immunity for industrial environments" • IEC / EN 61000-6-4 "Generic standards - Emission standard for industrial environments"
Resistance to extreme climates	• IEC 60721-3-3 "Classification of environmental conditions" The monitoring relays are climate-proof according to IEC 60721-3.
Touch protection	• IEC / EN 60529 "Degrees of protection provided by enclosures" Monitoring relays are safe to touch in accordance with IEC / EN 60529.

1) This is a device of Class A. When used in domestic areas, the device can cause radio interference. Users may have to take suitable measures.

Reference

SIRIUS components have been approved by a whole range of bodies for various sectors (shipbuilding, etc.). An up-to-date list of approvals appears in Chapter 10 of the Catalog IC 10 - SIRIUS "Industrial Controls" (https://support.industry.siemens.com/cs/ww/en/view/109771990), and more information, as well as an option to download certificates, can be obtained on the Internet (https://support.industry.siemens.com/cs/ww/en/ps/16364/cert).

IO-Link



You can find more information about communication via IO-Link, and about the valid standards for monitoring relays for IO-Link, on the Internet (http://www.io-link.com/en).

2.2 Requirements for switching high-efficiency motors

The increased requirements for protection devices and switchgear when switching high-efficiency motors are covered by the new utilization category AC-3e introduced in the IEC 60947-4-1 product standard.
The utilization category AC-3e takes into account the higher switch-on characteristic of efficiency-enhanced motors. This is reflected, for example, in a higher starting current when starting squirrel-cage motors.
All SIRIUS protection devices and switchgear that are subject to the IEC 60947-4-1 product standard meet the increased requirements in accordance with utilization category AC-3e and are suitable for use with high-efficiency motors.

2.3 Voltages

The specifications for 3-phase line supply according to IEC 60947-4-1 are valid for the following line system configurations:

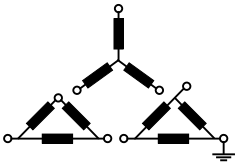Voltage specification Ue in the Equipment Manual	**Line system configurations**	
	Three-phase four-wire systems	**Three-phase three-wire systems**
		
[V]	[V]	[V]
230	--	230
400	230 / 400	400
440	260 / 440	440
500	--	500
690	400 / 690	--

-- not specified

2.4 Notes on the protection of device connections

The specifications for short-circuit protection (fuses, circuit breakers, or miniature circuit breakers) are available for the device connections of the main circuit and the auxiliary circuit. In order to ensure a holistic view for the protection of the device connections, the manufacturer is obliged to provide all relevant information for short-circuit protection and overcurrent protection.
If, for example, device connections for the control supply voltage, the supply voltage, or digital inputs/digital outputs are not connected to self-limiting current sources or energy sources, you can find the relevant information in the Equipment Manual or the technical data sheet.

2.5 Product-specific safety information

Improper use of the monitoring relay

Incorrect use of the monitoring relay and its accessories can lead to a risk of death, serious injury or property damage.

This equipment is only allowed to be used for the applications described in the catalog and in the technical description, and only in conjunction with non-Siemens equipment and components recommended by Siemens.

Correct transport, storage, installation and assembly, as well as careful operation and maintenance, are required to ensure that the product operates safely and without faults.

Before you run any sample programs or programs that you have written yourself, make sure that running the plant cannot cause injury to anyone else or damage to the machine itself.

Hazardous Voltage

⚠ WARNING

Hazardous Voltage.

Will cause death or serious injury.

Turn off and lock out all power supplying this device before working on this device.

Radio interference

Note

The devices have been built as Class A devices.
Use of these devices in domestic areas can result in radio interference!

2.5.1 Current information about operational safety

Important note for maintaining the operational safety of your system

Please take note of our latest information**.** Systems with safety-oriented characteristics are subject to special operational safety requirements on the part of the operator. The supplier is also obliged to comply with certain actions when monitoring the product. By subscribing to the appropriate newsletter, you will ensure that you are always up-to-date and able to make changes to your system, when necessary:

For this purpose, go to the page: SIEMENS newsletter (http://www.siemens.com/sirius/newsletter)

Click "Subscribe to newsletter".

2.6 Recycling and disposal

For environmentally-friendly recycling and disposal of your old device, contact a company certified for the disposal of used electrical and electronic equipment, and dispose of the device as specified in the regulations for your particular country.

2.7 Cybersecurity information

Siemens provides products and solutions with industrial cybersecurity functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial cybersecurity concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial cybersecurity measures that may be implemented, please visit
https://www.siemens.com/cybersecurity-industry.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Cybersecurity RSS Feed under
https://new.siemens.com/cert.

2.8 Warning notice

WARNING

Automatic restart
Can cause death, serious injury, or property damage.

Make sure that no unintended restart takes place after a monitoring relay is replaced.

2.9 Approvals, test certificates, characteristics

Approvals, test certificates, characteristics

You can find an overview of the certifications available for low-voltage controls and distribution products and other technical documentation, updated daily, on the Internet (https://support.industry.siemens.com/cs/ww/en/ps/16364/cert).

You will find further information in the Catalog IC 10 - SIRIUS "Industrial Controls," Chapter 10 (https://support.industry.siemens.com/cs/ww/en/view/109771990).

System overview

3

3.1 Product description

Product description

The tried and tested SIRIUS monitoring relays for electrical and mechanical quantities enable constant monitoring of all important characteristic quantities that provide information about the reliability performance of the plant. Sudden disturbances and gradual changes, which may reveal a maintenance requirement, for example, are both indicated. Through relay outputs, the monitoring relays enable direct shutdown of the affected sections of the plant as well as alarming (e.g. by switching a warning lamp). To respond flexibly to short-term disturbances such as voltage dips or load variation, the monitoring relays have settable delay times. This avoids unnecessary alarming and shutdowns while enhancing plant availability.

The individual monitoring relays provide the following functions in different combinations:

- Phase sequence
- Phase failure, neutral failure
- Phase asymmetry via current or voltage measurement
- Voltage below and / or above thresholds
- Current below and / or above thresholds
- Power factor below and / or above thresholds
- Monitoring of the active current or apparent current
- Monitoring of fault current
- Speed below and / or above thresholds

The SIRIUS 3UG48/3RR24 monitoring relays for IO-Link offer many other performance features in addition to monitoring functions:

- Measured values (including resolution and unit) to the higher-level control.
  Some device versions allow you to set which value is to be transferred cyclically.
- Transmission of alarm flags to the higher-level control.
- Comprehensive diagnostics capability by querying the precise cause of the error in the diagnostic data record.
- Remote parameterization additionally possible (supplementing local parameterization or instead of local parameterization).
- Fast parameterization of identical devices by duplicating the parameter assignment in the higher-level control.
- Parameter transfer by means of Upload to the higher-level control via- IO-Link call or by parameter server[1)] when using an IO-Link master in
  IO-Link Communication Specification V1.1 or higher).

- Local parameter assignment can be disabled via IO-Link.
- To prevent automatic startup after a power failure and to avoid losing diagnostic data, errors can be configured so that they are saved to non-volatile memory.
- Linking to a higher-level control makes it possible to assign parameters to the monitoring relays via a display unit. The measured values can be displayed directly in a control room or at the machine/control cabinet.

Up until now, using redundant sensors and/or analog signal converters to transfer measured values to a higher-level control incurred significant additional expense and wiring effort. Combining the autonomous monitoring relays with IO-Link communication reduces this wiring outlay and cuts costs.
As the availability of up-to-date measured values means that the higher-level control can take care of the control tasks within the plant, the continued availability of the output relays on the monitoring relays increases the plant's operational reliability (e.g. by shutting down the plant if thresholds that cannot be achieved under normal operating conditions are overshot).

The monitoring relays continue to function autonomously in spite of the IO-Link connection. Parameters can be assigned locally at the device, independently of a higher-level control. As long as the 24 VDC supply voltage is available, the monitoring relays will function if the controller fails or is not yet available. If the 3UG48/3RR24 monitoring relay is used for IO-Link without a connection to a higher-level control, because of the integrated SIO-Mode, the devices feature an additional semiconductor output that switches when settable warning thresholds are exceeded.

[1)] The parameter server provides an assurance of consistent central data management in the event of changes to parameters (made locally or via the control). The "Parameter server" function supports the automatic backup of parameter data (automatic re-assignment of parameter data if a device is replaced).

3.2 Application areas

Application areas

Use of SIRIUS 3UG48/3RR24 monitoring relays for IO-Link is especially recommended for machines and plants in which the devices for providing the current measured values and / or for remote parameterization are to be connected to the automation level easily, rapidly and with no errors.

3.3 Application planning

The following information must be taken into account when planning applications involving the SIRIUS monitoring relays.

Installation altitude

The monitoring relays are approved for installation altitudes up to 2,000 m. The reduced air density at altitudes higher than 2,000 meters affects the electrical characteristics of the monitoring relays. The reduction factors which have to be taken into account when using monitoring relays at altitudes higher than 2,000 m can be obtained on request on the Internet (https://www.siemens.com/support-request).

Operating conditions and resistance to extreme climates

The monitoring relays are climate-proof. They are intended for use in enclosed spaces in which no severe operating conditions prevail (e.g. dust, caustic vapors, hazardous gases). Appropriate measures must be taken when installing in areas subject to dust and humidity. Condensation on the devices is not permissible.

Special application environments

The SIRIUS devices have been approved by a whole range of bodies for various sectors (shipbuilding, etc.). An up-to-date list of approvals is provided in Chapter 10 of the Catalog IC 10 - SIRIUS "Industrial Controls." You will find more information and an option to download certificates on the Internet (https://support.industry.siemens.com/cs/ww/en/ps/16364/cert).

3.4 Connection systems

3.4.1 Screw connection





Screw-type connection

Use the following tool to establish the connection: All SIRIUS monitoring relays feature size PZ 2 screws for Pozidriv screwdrivers.

The devices have screw terminals with captive screws and washers. The screw terminals also allow for the connection of 2 conductors with different cross-sections.

Connection cross-sections of the removable terminal blocks with screw-type connections





Table 3-1 Removable terminal block with screw-type connections - monitoring relays

		Removable terminal
Tool		Pozidriv size PZ 2, Ø 5 to 6 mm
Tightening torque		0.8 to 1.2 Nm
Solid and stranded		1 x (0.5 to 4) mm²
		2 x (0.5 to 2.5) mm²
Finely stranded without end sleeve		---
Finely stranded with end sleeve		1 x (0.5 to 2.5) mm²
		2 x (0.5 to 1.5) mm²
AWG		2 x (20 to 14)

Connection cross-sections of the permanently connected terminal blocks with screw-type connections

The following table lists the permissible conductor cross-sections for the main conductor terminals of 3RR24 digitally adjustable current monitoring relays (size S00, S0 and S2) with screw-type connections.


Table 3-2 Permanently connected terminal block with screw-type connections - Main conductor terminals of the 3RR24 current monitoring relays

		Permanently connected terminal		
		Size S00	**Size S0**	**Size S2**
Tool		Pozidriv size PZ 2, Ø 5 to 6 mm	Pozidriv size PZ 2, Ø 5 to 6 mm	Pozidriv size PZ 2, Ø 5 to 6 mm
Tightening torque		0.8 to 1.2 Nm	2 to 2.5 Nm	3 to 4.5 Nm (27 to 40 lb.in)
Solid		2 x (0.5 to 1.5) mm²	2 x (1 to 2.5) mm²	2 x (1.0 to 35 mm²)
		2 x (0.75 to 2.5) mm²	2 x (2.5 to 10) mm²	1 x (1.0 to 50 mm²)
		max. 2 x (1 ... 4) mm²		
Finely stranded without end sleeve		---	---	---
Finely stranded with end sleeve		2 x (0.5 to 1.5) mm²	2 x (1 to 2.5) mm²	2 x (1.0 to 25 mm²)
		2 x (0.75 to 2.5) mm²	2 x (2.5 to 6) mm²	1 x (1.0 to 35 mm²)
			max. 1 x 10 mm²	
AWG		2 x (20 to 14)	2 x (16 to 12)	2 x (18 to 2)
		1 x 12	2 x (14 to 8)	1 x (18 to 1)

3.4.2 Spring-loaded connection

Spring-loaded connection

All SIRIUS monitoring relays have spring-loaded connections. They make wiring quick and maintenance-free, while also meeting high demands in terms of vibration and shock resistance. If the cross-section of a connectable wire is greater than 6 mm², the forces required for operation of the tension spring are so high that the spring-loaded connection can no longer be used in a problem-free manner. For this reason, size S2 current monitoring relays are only offered with screw-type or spring-loaded terminals in the control circuit. The terminals of the main current paths are always screw-type terminals.

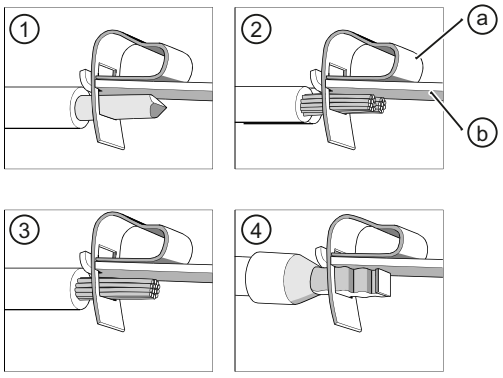

① Solid
② Finely stranded
③ Stranded
④ Finely stranded with end sleeve
a Spring-loaded terminal
b Busbar

Figure 3-1 Spring-loaded terminal

The conductors can be clamped directly or you can pre-treat them to add a form of splice protection. This could involve attaching end sleeves or pin cable lugs to the ends of the conductors; the tidiest solution is to use conductors whose ends have been sealed by means of ultrasound.

The devices are equipped with a two-wire terminal, i.e. two independent connections for each current path (exception: in the case of 3RR2, terminals of the main current paths have one clamping point). Just one conductor is connected to each clamping point. The spring-loaded terminal presses the conductor against the busbar, which curves around inside the terminal. The high contact pressure per unit area achieved in this way is gas-tight. The spring-loaded terminal presses flat against the conductor, but does not damage it. The spring force of the spring-loaded terminal has been dimensioned such that the clamping force adjusts to the conductor diameter automatically. This ensures that any conductor deformation caused by settling, creepage, or yielding is compensated for. The clamping point cannot become loose of its own accord. This connection is vibration- and shock-proof. Vibrations or shocks will not damage the conductor, nor will they cause contact separation. These terminals are particularly well suited for use with machines and systems which are subject to stresses such as these, e.g. vibrators, rail vehicles, and elevators.

The contact pressure between the conductor and the busbar is set to an optimum level, so this clamp connection is appropriate for high-voltage applications, as well as for transferring voltages and currents in the mV or mA range within instrumentation and electronic components.

A standardized screwdriver (3 mm slot; 3RA2908-1A) is offered in the Catalog IC10 "Industrial Controls" (https://support.industry.siemens.com/cs/ww/en/view/109771990) as an actuation tool for opening the spring-loaded terminals.

3.4.3 Making spring-loaded connections (3RR24 IO-Link)

Spring-loaded connection for mountable 3RR24 current monitoring relays

The table below describes the procedure for creating a spring-loaded connection:




DANGER

Hazardous Voltage.


Will cause death or serious injury.

Turn off and lock out all power supplying this device before working on this device.

Connecting the spring-loaded terminal of the 3RR24 current monitoring relay

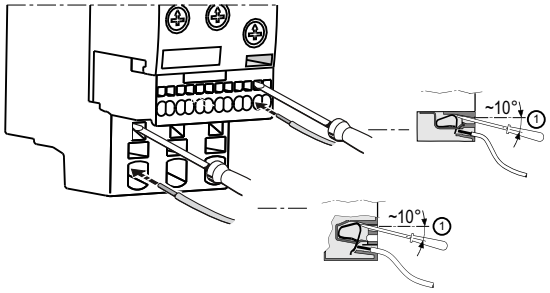

① Insert the screwdriver into the respective operating slot.

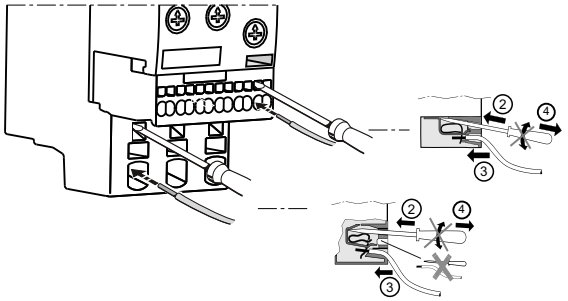

② Press the screwdriver down, then push it into the operating slot as far as it will go.
The screwdriver blade keeps the spring-loaded terminal open automatically.

③ Insert the conductor into the oval connection slot.

④ Remove the screwdriver. The terminal closes and the conductor is now securely clamped.

Note


Damage to spring-loaded terminal on the 3RR24 current monitoring relay

If you insert the screwdriver into the central opening (main circuit S00 and S0 only) on the spring-loaded terminal, this could damage the terminal.

Do not insert the screwdriver into the central opening on the spring-loaded terminal.


Spring-loaded terminal for 3UG4 monitoring relay

Connecting the monitoring relay spring-loaded terminal

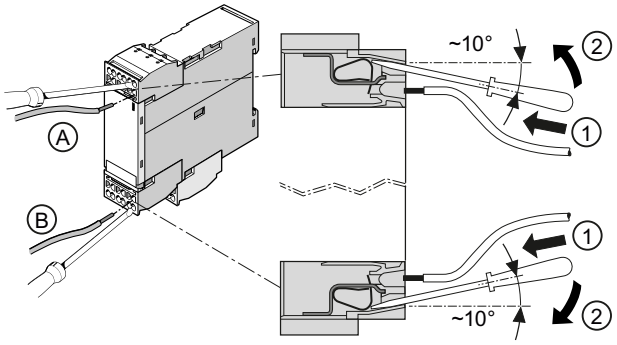

① Insert the screwdriver into the topmost (A) or bottommost (B) operating slot on the right-hand side.

② Press the screwdriver up (A) or down (B), then push it into the operating slot as far as it will go.
The screwdriver blade keeps the spring-loaded terminal open automatically.



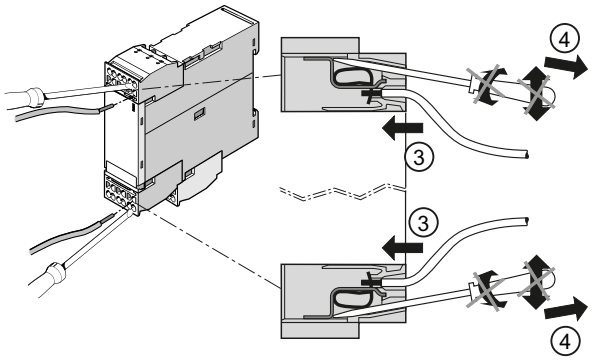


③ Insert the conductor into the oval connection slot.

④ Remove the screwdriver. The terminal closes and the conductor is now securely clamped.

Connection cross-sections of the removable terminal blocks with a spring-loaded connection (3RR and 3UG)





Table 3-3 Removable terminal block with spring-loaded connections - monitoring relays

		Removable terminal
Tool		Ø 3.0 x 0.5 (3RA2908-1A)
Solid and stranded		2 x (0.25 to 1.5) mm²
Finely stranded without end sleeve		2 x (0.25 to 1.5) mm²
Finely stranded with end sleeve		2 x (0.25 to 1.5) mm²
AWG		2 x (24 to 16)

Connection cross-sections of the permanently connected terminal blocks with a spring-loaded connection

The following table lists the permissible conductor cross-sections for the main conductor terminals of the digitally adjustable 3RR2 current monitoring relays (size S00 and S0) with spring-loaded connection.

Table 3-4 Permanently connected terminal block with spring-loaded connection - main conductor terminals of 3RR24 current monitoring relays

		Permanently connected terminal	
		Size S00	**Size S0**
Tool		Ø3.0 x 0.5 (3RA2908-1A)	Ø3.0 x 0.5 (3RA2908-1A)
Solid		1 x (0.5 to 4) mm²	1 x (1 to 10) mm²
Finely stranded without end sleeve		1 x (0.5 to 2.5) mm²	1 x (1 to 6) mm²
Finely stranded with end sleeve		1 x (0.5 to 2.5) mm²	1 x (1 to 6) mm²
AWG		1 x (20 to 12)	1 x (18 to 8)

3.4.4 Device replacement by means of removable terminals



DANGER

Hazardous Voltage

Will cause death or serious injury.


Turn off and lock out power before working on this equipment.

The removable terminals of 3UG4 monitoring relays facilitate device replacement when necessary. The mechanical coding on the terminals prevents mix-ups.

Note

The terminals can only be dismantled in the following order due to their arrangement on the monitoring relay:

1. Lower, front terminal (A)
2. Lower, rear terminal (B)
3. Upper, front terminal (C)
4. Upper, rear terminal (D)

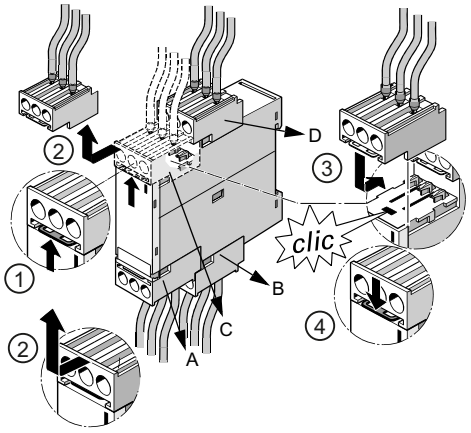

① Press the interlock in the direction of the removable terminal.

② Remove the terminal to the front.

③ / ④ Attach the new terminal and press the terminal into the device until the interlock audibly engages.

Note

The procedure is similar on devices with fewer connection terminals.

3.4.5 Connection options for IO-Link

The IO-Link device is connected to the IO-Link master via the removable terminal and supplied with 24 V DC via this connection.

DANGER

Hazardous voltage.
Will cause death or serious injury.

Turn off and lock out all power supplying this device before working on this device.

WARNING

Hazardous voltage.
Can cause death, serious injury, or property damage.

If voltages are too high, the IO-Link device can be damaged and electric shock can result.

Use only power supplies that comply with the requirements of protective extra-low voltage (PELV in accordance with IEC EN 50178).

Note

Power supply unit

The power supply unit for the voltage must comply with the standard ES1 (IEC 62368-1) or PELV (Protective Extra Low Voltage) / SELV (Safety Extra Low Voltage).

There are 2 ways of powering the monitoring relays via the control circuit.

Option 1: Connection to IO-Link master

Connect the IO-Link device with the master via the three cables L+, C / Q and L-. The IO-Link device is powered via the 2 cables L+ and L-. The monitoring relay communicates with the master via cable C / Q.

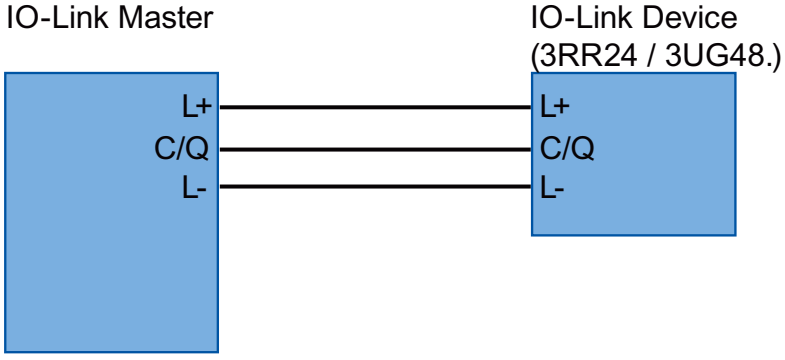


Figure 3-2 Connection to IO-Link master

Option 2: Direct voltage supply with 24 V DC

If no master is available, you can operate the IO-Link device with a 24 V DC voltage source.

For this purpose, connect the IO-Link device with the voltage source via the two cables L+ and L-. Because cable C / Q is not used in this case, communication via IO-Link is not possible.

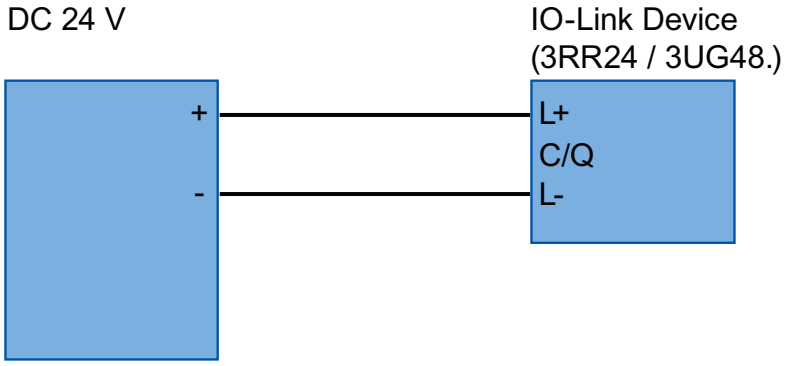


Figure 3-3 Direct voltage supply with 24 V DC

The pin assignments of the available IO-Link devices are described in the relevant product chapters.

3.5 Mounting/removal

3.5.1 Mounting 3RR24 current monitoring relays

Mounting options

3RR24 current monitoring relays are matched electrically and mechanically to the 3RT2 contactors and the 3RF34 solid-state contactors (size S0). This makes direct mounting easy. Alternatively, the devices can also be installed as stand-alone units in the case of separate mounting or simultaneous use of a 3RU2/3RB3 overload relay. The accessories required for separate mounting are described in the Chapter "Terminal support for stand-alone assembly (Page 170)".

Minimum clearance

The following minimum clearances from grounded and live parts must be complied with when installing the 3RR24 monitoring relay:


- At the side: 6 mm
- Forward (on front): 6 mm

Mounting position

It can be mounted in any position.

Direct mounting on 3RT2 contactor / 3RF34 (size S0) solid-state contactor

The diagram below shows an example mounting scenario based on mounting the 3RR24 current monitoring relay with digital setting, size S0, on the 3RT2 contactor.

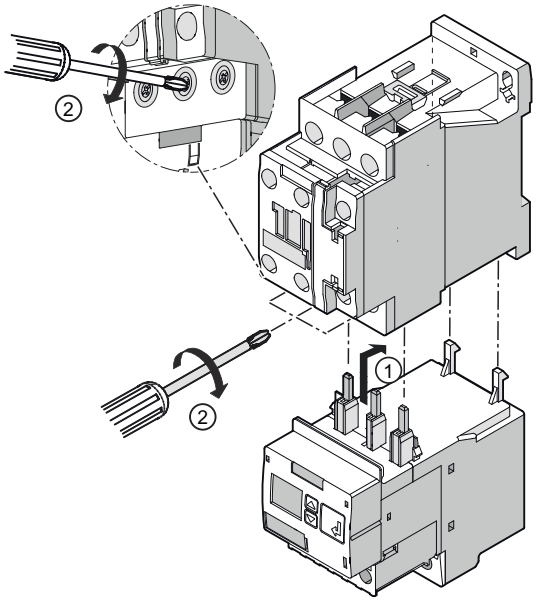

① Push the current monitoring relay into the contactor from below. Attach the two hooks on the current monitoring relay to the two openings on the rear of the contactor. This pushes the main current contacts into the corresponding terminals on the contactor.


② Tighten the screws on the contactor with a Pozidriv size 2 (S00) or Pozidriv size 3 (S0) screwdriver (tightening torque 0.8 to 1.2 Nm).

or a Pozidriv size 2 (S2) screwdriver (3.0 to 4.5 Nm).
Check that the cable is firmly clamped.

Figure 3-4 Mounting the 3RR24 current monitoring relay, screw-type connection system (size S0)

Note

The connection cross-sections of the removable and permanently connected terminal blocks with screw-type connections are described in the Chapter "Screw connection (Page 31)".

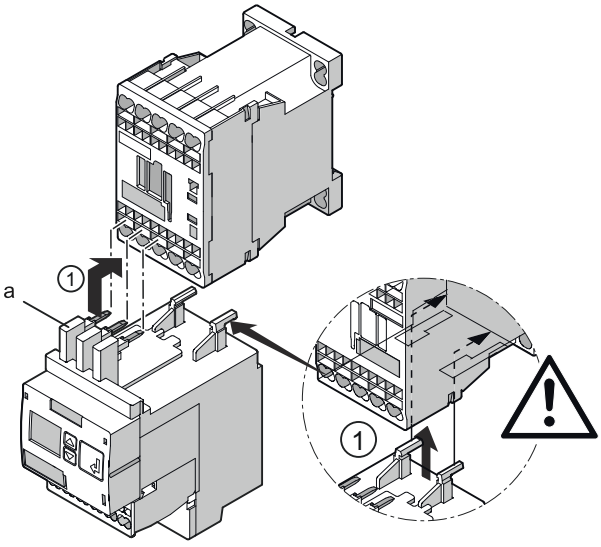

① Insert the contacts (a) into the central opening of the spring-loaded terminals on the contactor (see below, a), with the contacts flush to the right. Make sure that the guide tabs (zoom view) are inserted into the designated slots on the contactor.

The current monitoring relay will sit correctly flush with the contactor on the left- and right-hand sides.

Figure 3-5 Mounting the 3RR24 current monitoring relays, spring-loaded connection technology (size S0)

The figures below show the openings of the main conductor terminals on the contactor (S00 and S0) into which the contacts on the current monitoring relay have to be inserted.

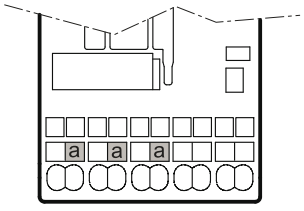


Figure 3-6 Main conductor terminal on the contactor (a) (S00)

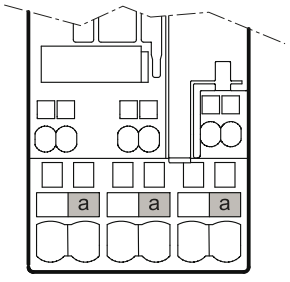


Figure 3-7 Main conductor terminal on the contactor (a) (S0)


Note

Adapter for direct mounting on 3RF34 solid-state contactor

For direct mounting on a 3RF34 solid-state contactor, an additional 3RF3900-0QA88 adapter is required, which is attached to the solid-state contactor. Information is provided in the "SIRIUS solid state contactors / solid state reversing contactors" (http://support.automation.siemens.com/WW/view/en/44362244) operating instructions.

Disassembly


To disassemble the S00 / S0 assemblies from the DIN rail, press the contactor down and pull it toward you.

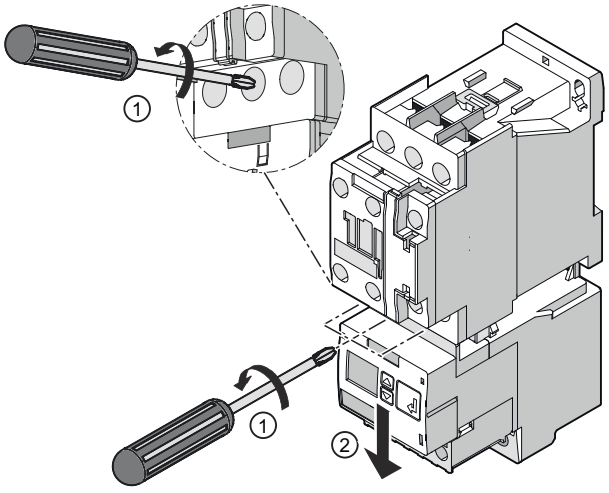

① Undo the screws on the main conductor terminals.

② Pull the current monitoring relay down and away from the contactor.


Figure 3-8 Removing the 3RR24 current monitoring relay, screw-type connection system (size S0)

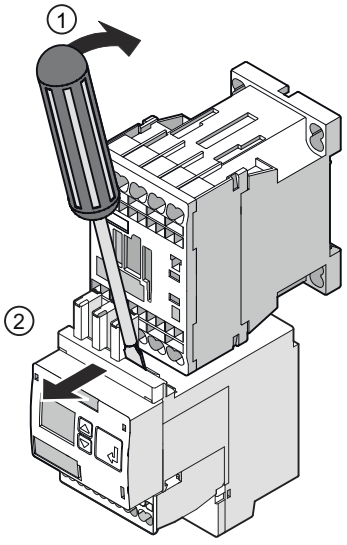

① Position the screwdriver on the current monitoring relay as shown in the figure. Carefully dislodge the current monitoring relay from the contactor.

② Pull the current monitoring relay toward you and away from the contactor.


Figure 3-9 Removing the 3RR24 current monitoring relay, spring-loaded connection technology (size S00)

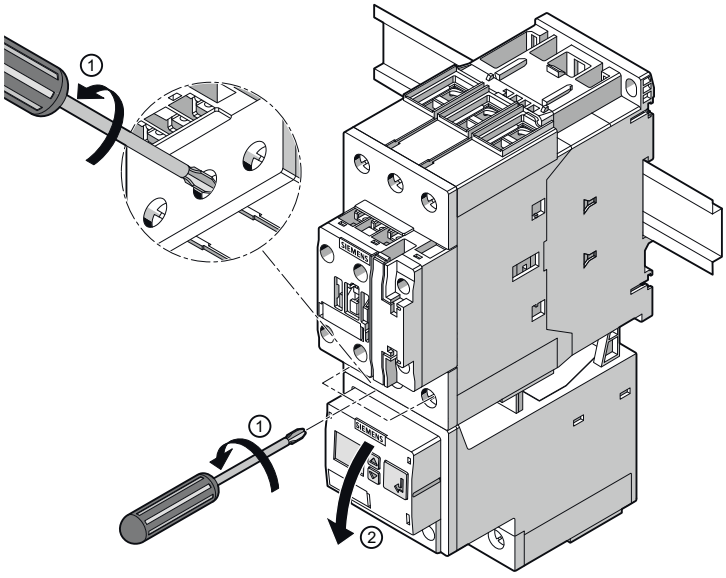

① Undo the screws on the main conductor terminals.

② Pull the current monitoring relay down and away from the contactor.

Figure 3-10 Disassembling 3RR24 current monitoring relays (size S2)

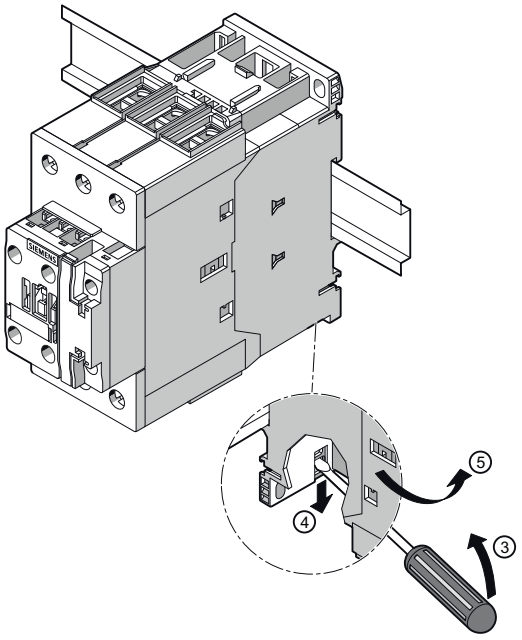

③ / ④ Push the release slide down with a screwdriver.

⑤ Swivel the contactor to remove it.

Figure 3-11 Disassembly contactor 3RT203 (size S2)

Separately mounted

Note

The accessories required for separate mounting are described in the Chapter "Terminal support for stand-alone assembly (Page 170)".

3.5.2 Mounting 3UG4


Mounting position

It can be mounted in any position.

Screw mounting

The illustration below shows how to screw-mount the 3UG4 monitoring relay.

Mounting the monitoring relay (screw mounting)

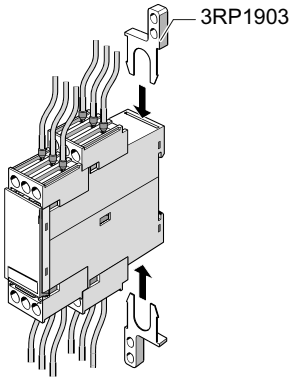


① Slide the push-in lugs into the openings on the monitoring relay at the top and bottom, and use the screwdriver to secure the device by screwing suitable screws through the holes in the push-in lugs.

Mounting onto DIN rail

The illustration below shows how to mount the 3UG4 monitoring relay onto a DIN rail.

Mounting the monitoring relay (mounting on and removing from DIN rail)

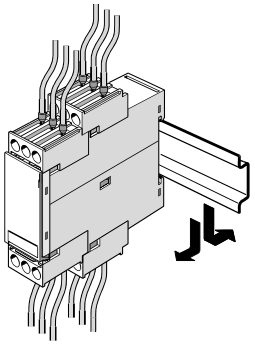

① Position the device on the top edge of the DIN rail and press it down until it snaps onto the bottom edge of the DIN rail.

To remove the device, press it down, pushing against the mounting springs, and swivel the device to remove it.

3.6 Overview of the functions

Table 3-5 Functions of the digitally adjustable 3RR24 current monitoring relays for IO-Link

	Current monitoring relay
	3RR24
Current monitoring	
Monitoring for undercurrent	3p
Monitoring for overcurrent	3p
Range monitoring	3p
Apparent current monitoring	✓
Active current monitoring	✓
Monitoring for phase failure, wire break	3p
Monitoring for phase sequence	✓
Monitoring for current asymmetry	✓
Internal ground-fault detection (fault current monitoring)	✓
Blocking current monitoring	✓
Supply voltage	
External power supply (via the IO-Link master or an external 24 V DC voltage source)	✓
Additional functions	
Runtime meter	✓
Switching cycle counter	✓
Voltage measurement	1p
Cos phi calculation	✓
Runtime meter	✓
Switching cycle counter	✓
Voltage measurement	1p
Cos phi calculation	✓
Apparent power calculation	3p
Active power calculation	3p

✓: Function available

1p: Measuring is single-phase

3p: Monitoring/calculation is 3-phase

Table 3-6 Functions of the 3UG48 monitoring relays for IO-Link

Function	Monitoring relays						
	3UG48						
	15	16	32	22	25	41	51
Line monitoring and voltage monitoring							
Monitoring for phase sequence	✓	✓	—	—	—	—	—
Monitoring for phase failure	✓	✓	—	—	—	—	—
Monitoring for asymmetry	✓	✓	—	—	—	—	—

Function	Monitoring relays						
	3UG48						
	15	16	32	22	25	41	51
Monitoring for undervoltage	3p	3p	1p	—	—	—	—
Monitoring for overvoltage	3p	3p	1p	—	—	—	—
Monitoring for N-conductor failure	—	✓	—	—	—	—	—
Fault current monitoring							
Monitoring for fault current/ground fault	—	—	—	—	✓	—	—
Cos phi monitoring and current monitoring							
Monitoring for undercurrent	—	—	—	1p	—	1p	—
Monitoring for overcurrent	—	—	—	1p	—	1p	—
Active current monitoring	—	—	—	—	—	1p	—
Apparent current monitoring	—	—	—	1p	—	—	—
Monitoring for cos phi	—	—	—	—	—	1p	—
Speed monitoring							
Monitoring for speed overshoot	—	—	—	—	—	—	✓
Monitoring for speed undershoot	—	—	—	—	—	—	✓
Supply voltage							
External power supply (via the IO-Link master or an external 24 V DC voltage source)	✓	✓	✓	✓	✓	✓	✓

✓: Function available

1p: Monitoring is single-phase

3p: Monitoring is 3-phase

— : Function not available

True root-mean-square measurement (tRMS) / use with frequency converters:

The monitoring relays work with an electronic measuring method which calculates the actual (effective) value of a measured value (tRMS), regardless of whether the measured variable's waveform is purely sinusoidal or distorted.

The measured signal must only meet the following requirements:

- Periodic waveform (sinusoidal) within the specified frequency range
- Continuous zero crossings

As long as the line on the primary or the secondary side in the environment of a frequency converter fulfills these requirements, the monitoring relays can also be operated upstream or downstream of frequency converters. The required line quality can be ensured by using line filters/sine-wave filters where applicable. Of course, the suitability of the relevant monitoring relay for the monitored line frequencies must also be considered.

3.7 Menu-based operation


Operator controls

The digitally adjustable monitoring relays have three keys for navigating on the menu levels:

- SET key for navigating to the menu levels and for switching between the menu levels
- 2 arrow keys for setting parameters

Navigation through the menu system of the monitoring relays is explained below using a schematic representation.
Depending on the device version, as long as no errors have occurred, more different measuring values ① can be displayed with the help of the two arrow keys. In the event of a fault, the display indicates the type of fault ③ by means of flashing symbols. By repeatedly pressing the SET key briefly, it is possible to set the desired type of monitoring (overshoot, undershoot, or range monitoring) and parameterize the lower and/or upper threshold ② in accordance with the device-specific setting ranges. After pressing the SET key for at least 2.5 s, in a further step, the basic device parameters ④, such as the switching behavior of the output relays, the reset response in the event of a fault, and/or the tripping delay times can be set.

Menu-based operation

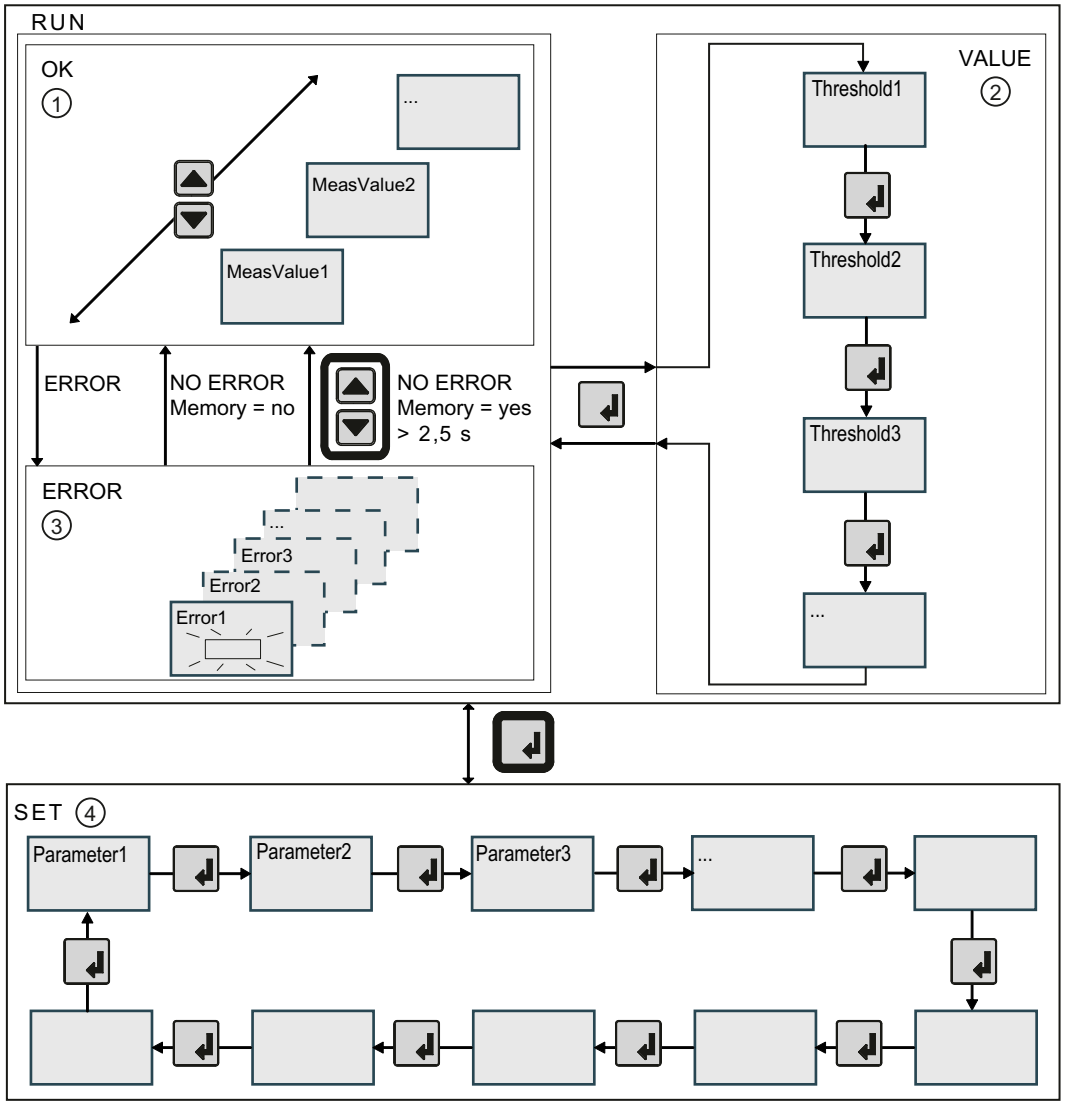

①	RUN - OK	Status display in the correct range, see below
	• Measured value1 / Measured value2 / ...	
②	RUN - VALUE	Settings of the monitored thresholds, see below
③	RUN - ERROR	Status display in the event of a fault
		If a threshold is overshot or undershot, the outputs of the monitoring relays switch over after the set delay time. The display indicates the type of error.
	• Error1 / Error2 / ...	Error detected
④	SET	Settings for basic device parameters, see below

Menu levels "RUN" and "SET"



The RUN menu alternately shows the current measuring value ① and the communication status. You can use the arrow keys to change between the individual measuring values on devices with multiple outputs. In this case, the display changes automatically between the name of the measuring value, the actual measuring value and the communication status. The following symbols indicate the current communication status of the devices:

Table 3-7 Communication status

Symbol	Meaning
SIO	After switching on, the device is in standard I/O mode (SIO-Mode) until communication has taken place. The IO-Link master can switch the device back to standard I/O mode (SIO-Mode) at any time.
	IO-Link communication is being established.
OK	The connected IO-Link Master has switched the device to Communication-Mode (IO-Link mode).
ERR	IO-Link communication interrupted The device signals a fault. The monitoring functions of the monitoring relay are still active. The IO-Link Master can switch the device back to Communication-Mode (IO-Link mode) when communication is resumed.

② represents the selected type of monitoring (overshoot, undershoot, or window monitoring). An arrow symbol indicates whether the measuring value is within, above or below the set warning thresholds or thresholds. If a threshold has been parameterized, the symbol is represented by continuous lines. If a warning threshold only has been parameterized, the symbol is represented by broken lines.

Next to this, one or two symbols ③ represent the type (changeover contact) and the switching status of the outputs.

Note

If the IO-Link connection is not used, the monitoring relays work in standard I/O mode (SIO-Mode) and terminal C/Q is used as a semiconductor output.

If a device is in SIO-Mode, the semiconductor output is not shown on the display (③)!

Navigation in the menu

There are basically two ways of navigating on both menu levels:

- Brief pressing the SET key (≤ 0.5 s)
  You can jump from one parameter to the next within one menu level by briefly pressing the SET key. The order is not variable.

Entry	Display at the RUN menu level	Display at the SET menu level
1.	Current measuring value (MeasValue1 / MeasValue2 / ...) or error symbol (Error1 / Error2 / Error3 / ...), switching contact symbols and monitoring methods for diagnostics	Parameter1
2.	Threshold1	Parameter2
3.	Threshold2	Parameter3
4.	Threshold3	...
5.	...	

Note

The setting options a device actually offers depends on the type and can be looked up in the relevant chapters on operation in this manual.

You can find full details of menu-based operation for the individual devices in Appendix D "Menu-based operation" (Page 219).

- Pressing and holding the SET key (> 2.5 s)
  By pressing and holding the SET key, the menu changes from RUN to SET and vice versa.
  - RUN → SET
    Menu level change can be started from any display. While the SET key is pressed, SET? appears on the display.
    After a successful change, you always arrive at the first menu item (parameter1) of the "SET" menu level.
    In the event of an error, changing to the "SET" menu level is only possible from "RUN-VALUE" ②. If an error is indicated, the SET key must be pressed first briefly (< 0.5 s).
  - SET → RUN
    You can switch menus from any of the menu commands. While the SET key is pressed, RUN? appears on the display.
    After a successful change, you arrive at current measuring value (measuringvalue1) or the current error of the RUN menu level.

Note

Aborting the menu switchover

The switchover process will be interrupted if the SET key is released while SET? or RUN? is displayed. The menu will revert to the menu command you were working with when the switch was initiated.

Note

Reset in the event of an error

To reset the device, it is necessary to press both arrow keys simultaneously for more than 2.5 s after removal of the cause of error and with Hand-RESET active. While the keys are pressed, 

appears on the display.

The possible settings for resetting the devices via the "Reset response" parameter can be found in the "Operation" chapters of the relevant monitoring relays.

Note

A return to showing the actual measured value takes place automatically 30 seconds after the last limit value change.

Note

When you exit the SET menu level, an internal Reset is performed and the ON-delay time or stabilization time will be restarted.

Note

On device variants 3UG4822 / 3UG4825 and 3UG4841, an internal reset is performed when you exit menu level SET, and the startup delay time is restarted.

3RR24 current monitoring relays

4

4.1 Application areas

The 3RR24 current monitoring relays are used, for example, in the following applications:

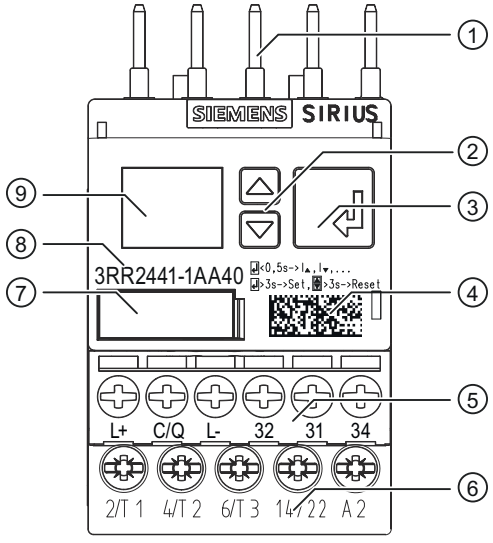
- Monitoring for current overshoot and current undershoot
- Monitoring for cable breaks
- Monitoring for no-load operation and load shedding (as might be the case, for example, in the event of a torn V-belt)
- Underload monitoring in the lower performance range (if a pump was running in no-load operation, for example)
- Monitoring for overload (as might affect pumps with a soiled filter system, for example)
- Monitoring the performance of electrical loads such as heaters
- Monitoring for incorrect phase sequences on mobile equipment such as compressors or cranes
- Monitoring for high-impedance faults to ground (caused by damaged insulation or moisture, for example)
- Energy management
- Condition monitoring

Table 4-1 Application areas of the 3RR24 current monitoring relays

Function	Application
• Undercurrent • Overcurrent • Apparent current • Active current • Phase failure / wire break • Phase sequence • Internal ground-fault detection (fault current monitoring) • Blocking current • Operating hours counter • Switching cycle counter	• Emergency lighting • Heating systems (electroplating plants, plastic injection machines, paintshops) • Lamps (tunnels, OR lighting, traffic lights, signal systems, UV lamps, infrared radiators, laser lamps) • Fan • Pumps • Sawing system • Conveyor belt • Surface grinding machine • Breaking mill • Milling machine • Car wash • Lifting platform • Screw conveyor • Crane • Turning machine • Woodworking • Grain mills • Steel industry

4.2 Operator controls and connection terminals

Front view / terminal labeling

Front view	Description	
	**Position digits**	
	①	Connection for contactor mounting or for stand-alone assembly
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Legend for menu-based operation/data matrix code
	⑤	Control circuit terminal (removable): The control circuit can be connected using either the screw-type or the spring-loaded connection system.
	⑥	Main circuit terminal (permanently connected) : The main circuit can be connected using either the screw-type or the spring-loaded connection system.
	⑦	Label
	⑧	Device article number
	⑨	Display for parameterization, actual-value indication, and diagnostics

You can find more information on the connection terminals and the permissible conductor cross-sections in Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 71)".

Terminal labels and notes on the protection of device connections

L+	Supply voltage for IO-Link	No additional measures are required for short-circuit protection.
C/Q	Communication signal/switching signal	
L-	Ground IO-Link	
32	Output relay K1 CO contact NC contact, e.g. for alarm threshold	You can find technical specifications of the product in the Siemens Industry Online Support (https://support.industry.siemens.com/cs/ww/en/ps/16206/td).
31	Output relay K1 CO contact root, e.g. for alarm threshold	
34	Output relay K1 CO contact NO contact, e.g. for alarm threshold	

2/T1 4/T2 6/T3	Main circuit terminals	For information on the protection of the main circuit of the 3RT2. contactors used, refer to the Equipment Manual - SIRIUS Contactors / Contactor Combinations 3RT (https://support.industry.siemens.com/cs/ww/en/view/60306557) and the technical data sheet (https://support.industry.siemens.com/cs/ww/en/ps/16132/td).
14 / 22	Feed-through contactor auxiliary switch (only for S00 with screw-type connection)	For information on the protection of the auxiliary contacts of the 3RT2. contactors used, refer to the Equipment Manual - SIRIUS Contactors / Contactor Combinations 3RT (https://support.industry.siemens.com/cs/ww/en/view/60306557) and the technical data sheet (https://support.industry.siemens.com/cs/ww/en/ps/16132/td).
A2	Feed-through contactor coil connection (only for S00 with screw-type connection)	For information on the protection of 3RT2. contactor coils, refer to the Equipment Manual - SIRIUS Contactors / Contactor Combinations 3RT (https://support.industry.siemens.com/cs/ww/en/view/60306557) and the technical data sheet (https://support.industry.siemens.com/cs/ww/en/ps/16132/td).

4.3 Function

Overview

SIRIUS 3RR24 current monitoring relays are suitable for monitoring the current of motors or other loads. They perform three-phase monitoring of the rms value of AC currents for **overshoot** or **undershoot** of set thresholds. The SIRIUS 3RR24 current monitoring relays have a change-over contact and also monitor **phase sequence**, **phase failure**, **ground fault** and **blocking current**. The settings can be made using three buttons and a display direct on the device. The devices can also be parameterized via IO-Link to transfer the measured current values and error messages to a controller. As well as detailed fault diagnostics, the integral runtime meter and switching cycle counter can also be read out and reset via IO-Link.

Whereas apparent current monitoring is primarily used in the rated torque range or for overload, active current monitoring can be used to observe and evaluate the degree of loading across a motor's entire torque range.

Apparent current monitoring and active current monitoring are described in more detail in the Chapter "Parameters (Page 203)".

Combination with 3RT20 contactors

The 3RR24 current monitoring relays have been matched to the contactors in the 3RT2 series both electrically and mechanically and can be integrated in the feeder by means of direct mounting. This eliminates the need for the main circuit to be wired separately and no additional transformers are required.

Table 4-2 Combination options with 3RT20 contactors

Current monitoring relay type	Current range	3RT20 1 S00 contactors 3/4/5.5/7.5 kW	3RT20 2 S0 contactors 5.5/7.5/11/15/18.5 kW	3RT20 3 S2 contactors kW 18.5/22/30/37 kW
3RR2441	1.6 to 16 A	✓	(with stand-alone assembly support)	(with stand-alone assembly support)
3RR2442	4.0 to 40 A	(with stand-alone assembly support)	✓	(with stand-alone assembly support)
3RR2443	8.0 to 80 A	(with stand-alone assembly support)	(with stand-alone assembly support)	✓

For a stand-alone assembly or if an overload relay is being used at the same time, terminal supports for stand-alone assembly are available for separate DIN rail mounting. See the Chapter "Terminal support for stand-alone assembly (Page 170)"

The current monitoring relays are available in three sizes (S00, S0 and S2).

Accessories

The accessories have been tailored to the current monitoring relays; they can be mounted easily and without the need for tools. The accessories are described in the Chapter "Accessories (Page 169)".

General functionality

Depending on the set limit values, 3RR24 current monitoring relays monitor 3-phase AC load currents (apparent current I_s or active current I_p) that flow via the device's terminals 1/L1 - 2/T1, 3/L2 - 4/T2 and 5/L3 - 6/T3 for **overshoot** (I▲) or **undershoot** (I▼) or in **range monitoring** (I▲ and I▼). The true root mean square value (tRMS) of the current is measured.

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The devices support further diagnostic options such as **residual current monitoring** and **phase sequence monitoring**, and are also be used to monitor motors even below the rated torque. The integral counters for **runtime** and **switching cycles** support operators in requirement-oriented plant maintenance.

The **operating hours counter** gives the time during which there was a measurable current in at least two current paths. The properties of the insulation material of the motor windings, for example, deteriorate during operation due to the thermal load. The operating hours can be used as an indicator for pending maintenance or replacement of machine or plant parts. To reset the **operating hours counter**, the value **0xA1** must be written into data set 2.

The **switching cycle counter** is incremented by one each time a breaking operation is detected (transition from three-phase current flow to no current flow can be measured). The number of switching cycles can be used as an indicator of pending maintenance or replacement of switching elements. Arcs in breaking operations cause high loads and wear. To reset the **switching cycle counter**, the value **0xA0** must be written into data set 2.

The 3RR24 current monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link and transfer the measured current values and error messages to a controller.

You can find the setting ranges and factory settings of the 3RR24 current monitoring relays in the Chapter "Operation (Page 63)".

You will find a description of the individual parameters in the Chapter "Parameters (Page 203)". You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring

If the supply voltage is switched on and no load current is flowing, the display indicates "I1" and a symbol for the set current monitoring principle.

ON-delay time

If the load current exceeds the lower measuring range limit (size S00: 1.5 A; S0: 3.8 A; S2: 7.6 A), the set ON-delay time (onDel) begins according to the set current principle (closed-circuit principle NC or open-circuit principle NO). During this time, undershooting or overshooting of the set threshold values will not result in a relay response of the CO contact.

Tripping delay time

The set tripping delay time (I▼Del, I▲Del) starts if the load current flowing under normal operating conditions overshoots or undershoots the corresponding set threshold value. After expiry of this time, the output relay K1 changes the switching state, depending on the set relay switching response. On the display, the currently displayed measuring value and the symbol for undershoot or overshoot flash. An output change-over contact is available as a signaling contact.


You can find the switching states of the output relay K1 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 66)".

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3RR24 current monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot, overshoot or voltage asymmetry.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.

Cable break detected

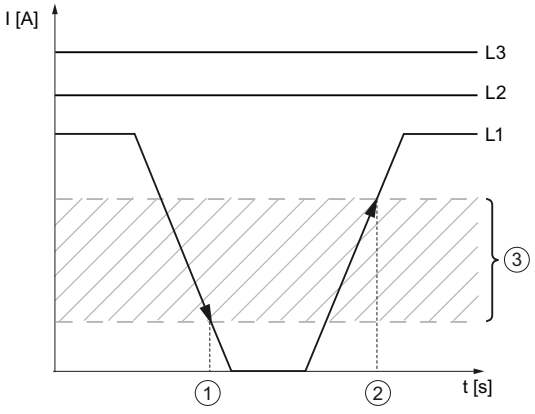

① Cable break detected
② No cable break
③ Hysteresis cable break:
- S00: 1.2 A to 1.6 A
- S0: 3.0 A to 4.0 A
- S2: 6.0 A to 8.0 A









Figure 4-1 Cable break

If a cable break is detected in a branch circuit (time ①), all delay times which are running (onDel, RsDel, Del) are aborted and the CO contact changes its switching state immediately (≤ 200 ms). The cable break is reported to the controller via IO-Link.

When a defined current flow returns to all branch circuits (1L/1 - 2/T1, 3/L2 - 4/T2 und 5/L3 - 6/T3) (time ②), the CO contact responds again according to the defined settings.

If manual RESET (Mem = yes) is selected, the tripping state is saved.

Function diagrams

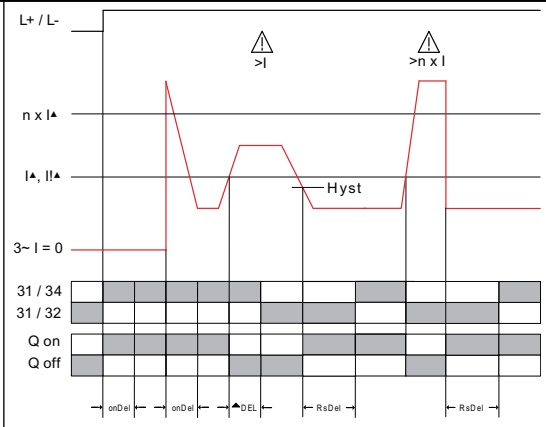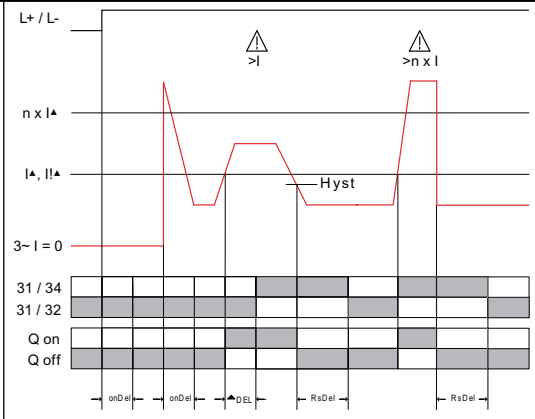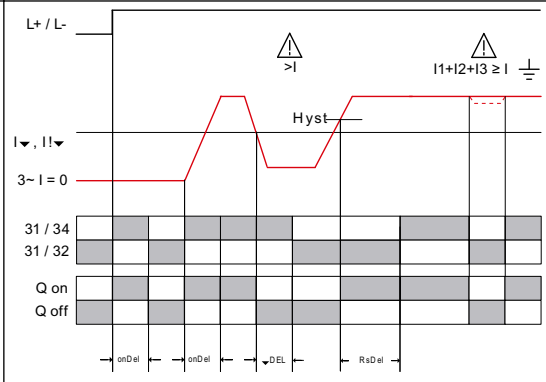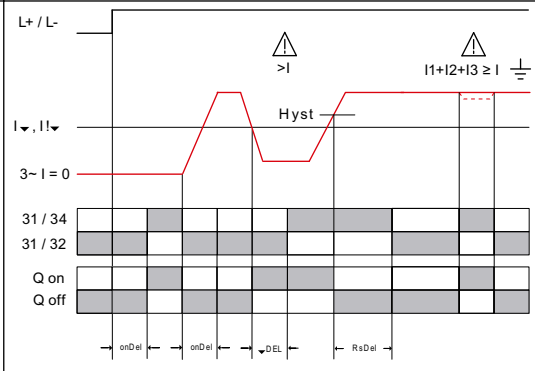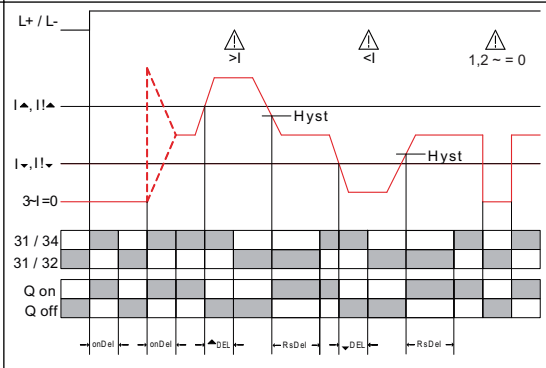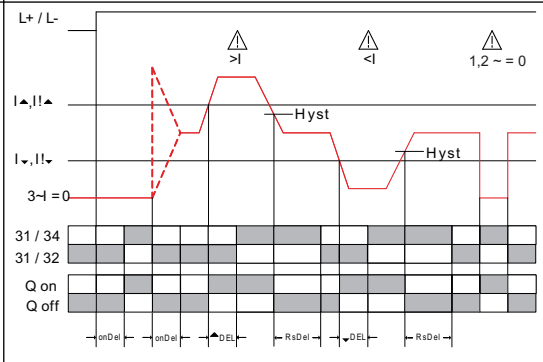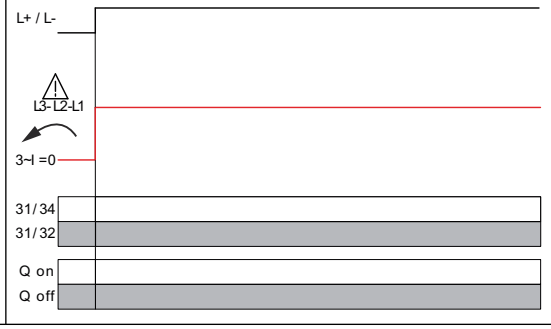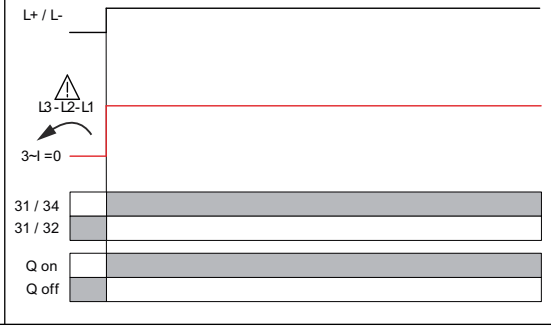Display	Memory = no Relay switching behavior = NC (closed-circuit principle)	Memory = no Relay switching behavior = NO (open-circuit principle)
I▲ / I!▲ I▼ / I!▼ = Off n x I▲		
I▲ / I!▲ = Off I▼ / I!▼ I >> ⏚ = yes		
I▲ / I!▲ = Off I▼ / I!▼		
↷ = yes		

4.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3RR24 current monitoring relay:

Table 4-3 Parameter information, 3RR24 current monitoring relays

Menu level/ IO-Link	Parameter	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for current undershoot (I▼)	1.6 A or OFF[1)] 4 A or OFF[2)] 8 A or OFF[3)]	16 A or OFF[1)] 40 A or OFF[2)] 80 A or OFF[3)]	0.1 A[1)] 0.1 A[2)] 0.2 A[3)]	1.6 A[1)] 4 A[2)] 8 A[3)]
"RUN" / IO-Link	Threshold for current overshoot (I▲)	1.6 A or OFF[1)] 4 A or OFF[2)] 8 A or OFF[3)]	16 A or OFF[1)] 40 A or OFF[2)] 80 A or OFF[3)]	0.1 A[1)] 0.1 A[2)] 0.2 A[3)]	3 A[1)] 8 A[2)] 16 A[3)]
"RUN" / IO-Link	Threshold for current asymmetry (Asy)	5% or OFF	50%	0.1%	Disabled (0%)
"RUN" / IO-Link	Warning threshold for current undershoot (I!▼)	1.6 A or OFF[1)] 4 A or OFF[2)] 8 A or OFF[3)]	16 A or OFF[1)] 40 A or OFF[2)] 80 A or OFF[3)]	0.1 A[1)] 0.1 A[2)] 0.2 A[3)]	1.6 A[1)] 4 A[2)] 8 A[3)]
"RUN" / IO-Link	Warning threshold for current overshoot (I!▲)	1.6 A or OFF[1)] 4 A or OFF[2)] 8 A or OFF[3)]	16 A or OFF[1)] 40 A or OFF[2)] 80 A or OFF[3)]	0.1 A[1)] 0.1 A[2)] 0.2 A[3)]	3 A[1)] 8 A[2)] 16 A[3)]
"RUN" / IO-Link	Warning threshold for current asymmetry (Asy!)	5% or OFF	50%	0.1%	Disabled (0%)
"SET" / IO-Link	Hysteresis (Hyst)	0.1 A	3.0 A[1)] 8.0 A[2)] 16.0 A[3)]	0.1 A[1)] 0.1 A[2)] 0.2 A[3)]	0.5 A[1)] 0.8 A[2)] 1.6 A[3)]
"SET" / IO-Link	ON-delay time (onDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[4)] IO-Link: 0.1 s	Enabled (1 s)
"SET" / IO-Link	Tripping delay time (Del)	0 s	local: 999 s IO-Link: 999.9	local: 0.1 s[4)] IO-Link: 0.1 s	Disabled (0 s)

Menu level/ IO-Link	Parameter	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"SET" / IO-Link	Reclosing delay time (RsDel)	0 min.[5]	300 min.[5]	local: 0.1 min.[5,6] IO-Link: 0.1 min.	Disabled (0 min.)[5]
"SET" / IO-Link	Blocking current monitoring (n x I▲) [7]	no x I▲ or 2 x I▲ IO-Link: Disabled	5 x I▲ IO-Link: 5	1 x I▲	no x I▲ IO-Link: Disabled
"SET" / IO-Link	Residual current monitoring (I >>⏚)	local: no IO-Link: Disabled	local: yes IO-Link: Enabled	--	Disabled
"SET" / IO-Link	Reset response (Mem)	local: no = Autoreset IO-Link: Automatic	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Autoreset IO-Link: Automatic
"SET" / IO-Link	Phase sequence monitoring (↷)	local: no IO-Link: Disabled	local: yes IO-Link: Enabled	--	Disabled
"SET" / IO-Link	Load current monitoring (apparent current I_s/active current I_p)	I_s or I_p		--	I_s
"SET" / IO-Link	Relay switching behavior (closed-circuit principle NC / open-circuit principle NO)	Closed-circuit principle (NC) or Open-circuit principle (NO)		--	Closed-circuit principle (NC)
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Analog value coding	0 (Disabled)	255	--	20

1) 3RR2441 current monitoring relay

2) 3RR2442 current monitoring relay

3) 3RR2443 current monitoring relay

4) Up to 99.9 s; at values > 99.9 s, the increment is 1 s

5) Only "m" is shown on the display instead of min.

6) Up to 99.9 min; at values > 99.9 min, the increment is 1 min.

7) You can disable or enable blocking current monitoring. To enable it, enter a factor between 2 and 5. It defines when blocking current monitoring trips.

Note

The "current undershoot" or "current overshoot" monitoring mode is defined with the setting OFF for the upper and lower threshold.

Note

Deactivating monitoring

If the upper and lower threshold values are deactivated (OFF), monitoring will cease for:

- Current overshoot
- Current undershoot
- Blocking current

The following parameters continue to be monitored:

- Fault current (if activated)
- Incorrect phase sequence (if activated)
- Phase failure (if activated)
- Current asymmetry (if activated)

The up-to-date measured value is displayed permanently.

The operating hours counter and switching cycle counter continue to be updated.

Note

If a time greater than 100.0 s or 100.0 min. is set via- IO-Link, the display shows only the value without the decimal place.

Note

The hysteresis value of the threshold and the warning threshold for current asymmetry is fixed at 40% of the set threshold or warning threshold.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on the parameters of the 3RR24 current monitoring relay for IO-Link that can be set via IO-Link in the Chapter "3RR24 current monitoring relays (Page 237)".

Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

4.5 Diagnostics

4.5.1 Indications on the display

Display information

The display is divided into three different areas.



① Current measured value or fault symbol
② Type of monitoring
③ Symbol of the change-over contact

Meaning of the information on the display

Note

Displays in the event of an error

The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display areas	Symbol	Meaning
①	Ix <-> ▼▼▼ A	The current is below the current range that can be measured. No threshold set for undershoot.
①	Ix <-> ▲▲▲ A	The current is above the current range that can be measured. No threshold set for overshoot.
①	Asy <-> 5 %	Currently measured current asymmetry value is displayed. • Not flashing: Current asymmetry value in the correct range, or delay time is running. • Flashing: Threshold overshot, delay time expired, relay has switched.
①	Ix <-> 5.0A	Currently measured current is displayed. • Not flashing: Current in the correct range or delay time is running. • Flashing: Threshold overshot or undershot, delay time expired, relay has switched
①	n x I	Flashing: Current is above the set blocking current
①	I>>	Flashing: Fault current detected
①	L1	Flashing: Cable break/phase failure detected
①	!	Flashing: Incorrect phase sequence detected
①	P.ERR	Invalid parameter
①	ERR	Self-test error/internal error

Display areas	Symbol	Meaning
①		IO-Link communication is being established [1]
①	OK	Device is in Communication-Mode (IO-Link)
①	ERR	IO-Link communication interrupted
①	SIO	Device is in SIO-Mode
②		Monitoring for current overshoot or current asymmetry overshoot
②		Monitoring of the warning threshold for current overshoot (only visible if the parameter "Threshold for overshoot" is set to OFF.)
②		Monitoring for current undershoot
②		Monitoring of the warning threshold for current undershoot (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②		Range monitoring (monitoring for current overshoot and current undershoot)
②	◄	Current is in correct range.
②	▲	There is a current overshoot or current asymmetry overshoot. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲◄	Alternate flashing: The current has risen above the set warning threshold.
②	▼	Current has fallen below threshold. • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼◄	Alternate flashing: The current has fallen below the set warning threshold.
③	I▼, I!▼ I▲, I!▲	• Not flashing: Relay contact 31/32 open, relay contact 31/34 closed • Flashing: Delay time (ON-delay or tripping delay) running • Masked out: Relay contact 31/32 closed, relay contact 31/34 open

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of the output relay K1 in the Chapter "Function (Page 59)".

4.5.2 Diagnostics via IO-Link

The 3RR24 current monitoring relays with IO-Link connection provide an option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 4-4 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 63)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set current is higher than the set threshold for overshoot.	• Reduce the current. • Set a higher threshold.
Value below (warning) threshold for undershoot	The set current is lower than the set threshold for undershoot.	• Increase the current. • Set a lower threshold.
Value above (warning) threshold for current asymmetry	Different currents at phases L1, L2 and L3.	• Check the currents of the individual phases.
Phase failure L1	Connection to phase L1 interrupted.	Check the electrical connection.
Phase failure L2	Connection to phase L2 interrupted.	Check the electrical connection.
Phase failure L3	Connection to phase L3 interrupted.	Check the electrical connection.
Phase sequence error	Error in phase sequence.	Swap the two phases.
Measured value is outside the range that can be measured	The measured current is above or below the range that can be measured.	• Reduce the current. • Increase the current.
Blocking current n x Imax	The load current has exceeded the set threshold for current overshoot by at least n times in at least one phase within a very short time.	• Eliminate the cause of blocking. • Check the dimensioning of the motor.
Threshold for fault current exceeded	The sum of the individual phase currents should be 0 A without fault currents. This message is triggered from a measured fault current greater than 1.6 A in the case of S00 (4.0 A in the case of S0; 8.0 A in the case of S2).	• Check the terminals for contamination. • Check the insulation of the cable.

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 4-5 Diagnostics and messages

Diagnostics and messages	IO-Link for event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	P.ERR
Self-test error/internal error	0x5000	x	—	x	ERR
Threshold for overshoot exceeded	0x8C10	x	—	x	▲
Blocking current n x I▲	0x8C10	x	—	x	n x I
Threshold for undershoot violated	0x8C30	x	—	x	▼
Threshold for fault current exceeded	0x8CB1	x	—	x	I>>
Phase failure L1	0x8CB1	x	—	x	L1
Phase failure L2	0x8CB1	x	—	x	L2
Phase failure L3	0x8CB1	x	—	x	L3
Phase sequence error	0x8CB1	x	—	x	
Measured value is outside the range that can be measured[5]	0x8C20	—	—	—	▲▲▲A ▼▼▼A

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process image input" (see "3RR24 current monitoring relays (Page 237)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see "3RR24 current monitoring relays (Page 237)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see "3RR24 current monitoring relays (Page 237)").

x: Bit set

○: Not relevant

[5] 3RR2441 (S00): < 1.6 A or > 16 A; 3RR2443 (S0): < 4.0 A or > 40 A; 3RR2443 (S2): < 8.0 A or > 80 A

4.5.3 Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3RR24 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "3RR24 current monitoring relays (Page 237)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

4.6 Circuit diagrams

4.6.1 Internal circuit diagrams

3RR2441/3RR2442/3RR2443 internal circuit diagrams

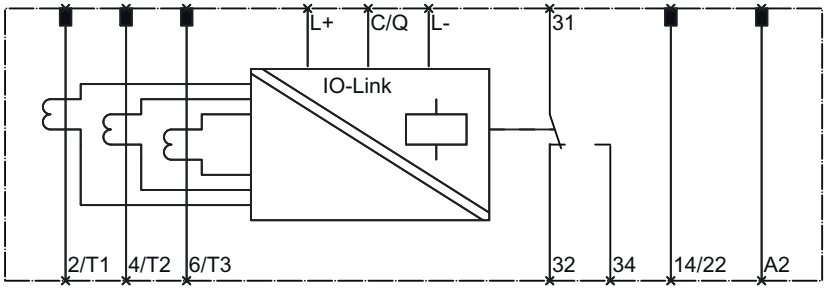


Figure 4-2 3RR2441-1AA40 current monitoring relay for IO-Link, 1 changeover contact, 3-phase

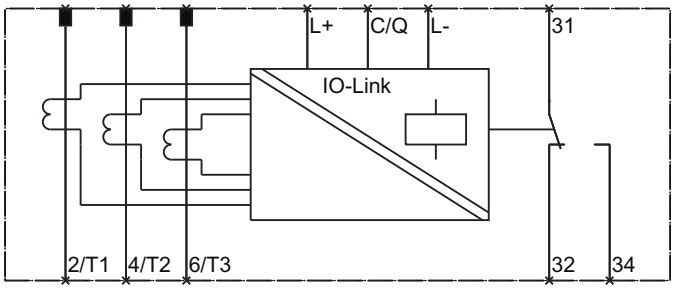


Figure 4-3 3RR2441-2AA40/3RR2442-.AA40 current monitoring relay for IO-Link, 1 changeover contact, 3-phase

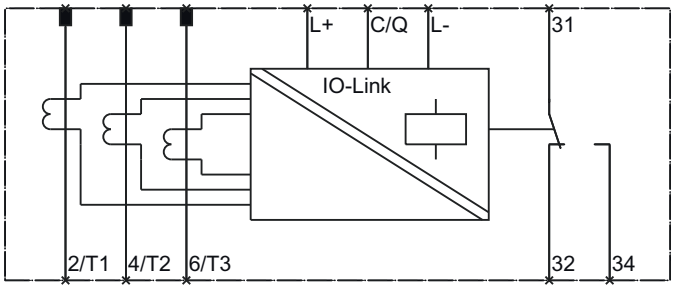


Figure 4-4 3RR2443-.AA40 current monitoring relay for IO-Link, 1 CO contact, 3-phase

4.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16206/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4815 / 3UG4816 line monitoring relays

5

5.1 Application areas

Application areas

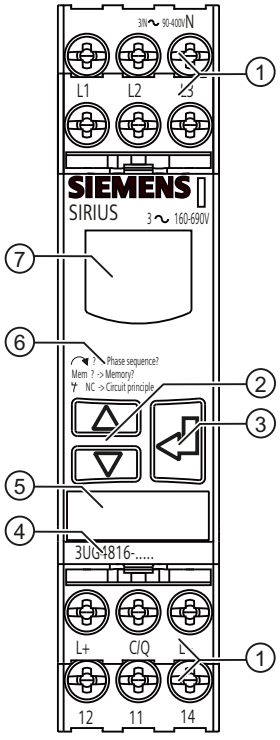
The various line monitoring relays are used, for example, in the following applications:

Table 5-1 Application areas of the line monitoring relays

Function	Application
Phase sequence	• Direction of rotation of the drive • Refrigeration trucks • Refrigerators • Saws • Pumps • Rollers • Transportation of persons (elevators, moving staircases and walkways)
Phase failure	• A fuse has tripped • Control supply voltage failure • Cable break • Crane systems • Electrical welding • Emergency generating sets (banks, hospitals, alarm systems, power plants) • Transportation of persons (elevators, moving staircases and walkways)
Phase asymmetry	• Motor protection (overheating of the motor due to asymmetric voltage) • Detection of asymmetric systems
Undervoltage	• Increased current on a motor with corresponding overheating • Unintended device reset • Blackout – particularly with battery supply • Fork-lift trucks • Heating systems • Cranes • Elevators • Protection on unstable systems (switchover to emergency current, monitoring of the generator)
Overvoltage	• System protection against destruction caused by supply overvoltages • Energy supply to the line • Lamps (UV lamps, laser lamps, OP lighting, tunnels, traffic lights)

5.2 Operator controls and connection terminals

Front view / terminal labeling

Front view	Description	
	**Position digits**	
	①	Terminal block (removable) Connection is possible using screw-type terminals or spring-loaded terminals.
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	L1, L2, L3	Measuring signal (line voltage)
	N	Neutral conductor (only on 3UG4816)
	L+	Supply voltage for IO-Link
	C/Q	Communication signal / switching signal
	L-	Ground IO-Link
	12	Output relay K1 CO contact NC contact
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact

You can find more information on the connection terminals and the permissible conductor cross-sections in Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 85)".

5.3 Functionality

General functionality

The 3UG4815 line monitoring relays monitor a three-phase system for **phase sequence**, **phase failure**, **undervoltage**, **overvoltage**, and **phase asymmetry**.

Note

The 3UG4816 line monitoring relays have the same functions as the 3UG4815 monitoring relays and additionally monitor the **neutral conductor for failure**.

The 3UG4815 / 3UG4816 line monitoring relays have a wide-range input.

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The 3UG4815 / 3UG4816 line monitoring relays have an output relay K1.

The 3UG4815 / 3UG4816 line monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link and transfer the measured voltage values and error messages to a controller.

You will find the setting ranges and factory settings of the 3UG4815 / 3UG4816 line monitoring relays in Chapter "Operation (Page 78)."

You can find a description of the individual parameters in the Chapter Parameters (Page 203).

You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring

As soon as the supply voltage is applied or the monitoring relay is reset, the set stabilization delay begins (stDel). During this time, undershooting or overshooting of the set threshold values will not cause the CO contact to respond but instead will result in a restart of the stabilization delay.

You can find further information on the stabilization delay in the Chapter "Parameters (Page 203)".

The output relay K1 responds in accordance with the set relay switching response (closed-circuit principle NC or open-circuit principle NO).

If a fault occurs (phase failure, incorrect phase sequence, phase asymmetry, voltage undershoot or voltage overshoot), the output relay K1 switches in accordance with the relay switching response. In the case of voltage undershoot or voltage overshoot, the output relay K1 does not respond until expiry of the set tripping delay time (U▼Del, U▲Del). If the parameterized (warning) threshold for voltage asymmetry is overshot or undershot, the output relay K1 does not respond until the set tripping delay time (AsyDel) has expired. On phase failure, monitoring of the other quantities is deactivated. The measured voltage of all three phases is set to the maximum value (7FFF).

In the case of incorrect direction of rotation, the devices immediately shut down.

Even if monitoring for undervoltage is deactivated (U▼ = OFF) when the voltage falls below a measurement range limit (3UG4815: 160 V and 3UG4816: 90 V), phase failure or neutral

failure (on the 3UG4816 only) will be signaled and the output relay K1 will change its switching state.

The display indicates the following voltages in the case of the line monitoring relay:

- 3UG4815: Line-to-line voltage between L1 and L2, L1 and L3, L2 and L3
- 3UG4816: Line-to-neutral voltage between L1 and N, L2 and N, L3 and N

It is possible to switch between the individual voltage values using the arrow keys ▲▼.

Thanks to a special measuring method, a phase failure is detected with certainty despite wide-range voltage from 160 to 690 V AC and power recovery of up to 80% by the load.

Note

The specified voltages represent the absolute thresholds.





You can find the switching states of the output relay K1 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 80)".





SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4815 and 3UG4816 line monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot, overshoot or voltage asymmetry.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.

Function diagrams

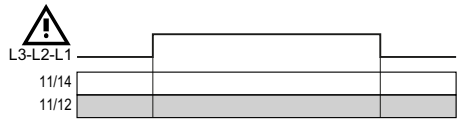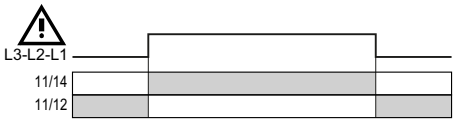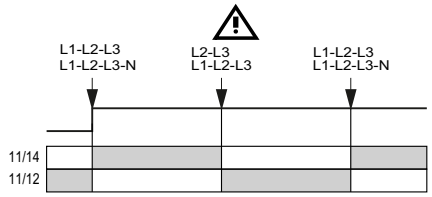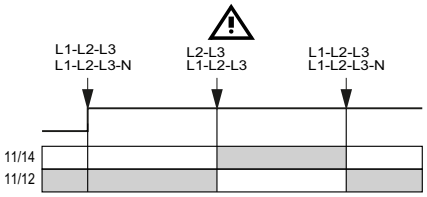	Memory = no **Relay switching response = NC (closed-circuit principle)**	**Memory = no** **Relay switching response = NO (open-circuit principle)**
		
L LN		

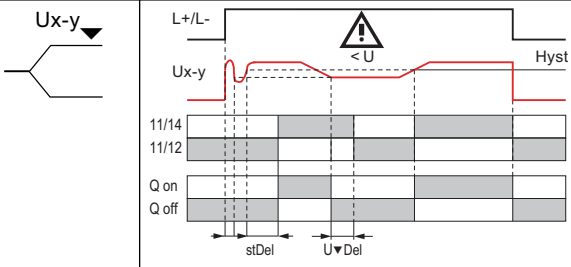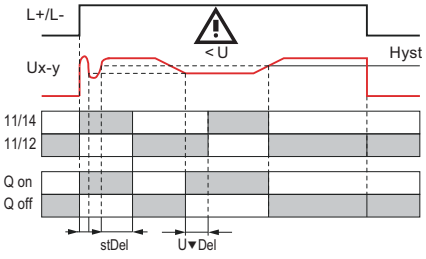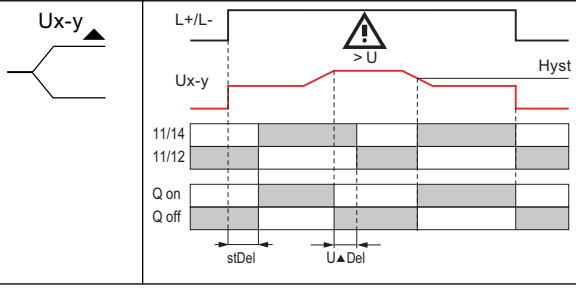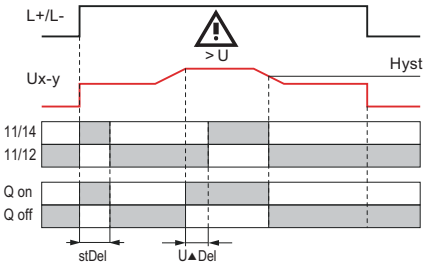	Memory = no **Relay switching response = NC (closed-circuit principle)**	**Memory = no** **Relay switching response = NO (open-circuit principle)**
Ux-y ▼		
Ux-y ▲		

5.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3UG4815 and 3UG4816 line monitoring relays:

Table 5-2 Parameter information, 3UG4815 and 3UG4816 line monitoring relays

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for undershoot (U▼)	160 V or OFF[1)] 90 V or OFF[2)]	690 V or OFF[1)] 400 V or OFF[2)]	0.1 V[4)]	375 V[1)] 215 V[2)]
"RUN" / IO-Link	Threshold for overshoot (U▲)	160 V or OFF[1)] 90 V or OFF[2)]	690 V or OFF[1)] 400 V or OFF[2)]	0.1 V[4)]	425 V[1)] 245 V[2)]
"RUN" / IO-Link	Warning threshold for undershoot (U!▼)	160 V or OFF[1)] 90 V or OFF[2)]	690 V or OFF[1)] 400 V or OFF[2)]	0.1 V[4)]	375 V[1)] 215 V[2)]
"RUN" / IO-Link	Warning threshold for overshoot (U!▲)	160 V or OFF[1)] 90 V or OFF[2)]	690 V or OFF[1)] 400 V or OFF[2)]	0.1 V[4)]	425 V[1)] 245 V[2)]
"SET" / IO-Link	Hysteresis (Hyst)	0.1 V or OFF	20.0 V or OFF	0.1 V	5.0 V
"SET" / IO-Link	Stabilization delay (stDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[3)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (U▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[3)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (U▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[3)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Reset response (Mem)	local: no = Auto-reset IO-Link: Automatic	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Auto-reset IO-Link: Automatic
"SET" / IO-Link	Phase sequence monitoring (↷)	local: no IO-Link: Disabled	local: yes IO-Link: Enabled	--	local: yes IO-Link: Enabled
"SET" / IO-Link	Relay switching response (closed-circuit principle NC / open-circuit principle NO)	Closed-circuit principle (NC) or Open-circuit principle (NO)		--	Closed-circuit principle (NC)
IO-Link	Threshold for voltage asymmetry (Asy)	0.1%	20%	0.1%	5%

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
IO-Link	Warning threshold for voltage asymmetry (Asy!)	0.1%	20%	0.1%	5%
IO-Link	Tripping delay time for asymmetry (AsyDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[3)] IO-Link: 0.1 s	Disabled (0 s)
IO-Link	Hysteresis for voltage asymmetry	0.1%	5%	0.1%	2%
IO-Link	Stabilization delay (at Power ON)	Disabled	Enabled	--	Enabled
IO-Link	Stabilization delay (at manual reset)	Disabled	Enabled	--	Enabled
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Analog value coding	0 (Disabled)	255	--	48

1) 3UG4815 line monitoring relay (Ux-y)

2) 3UG4816 line monitoring relay (Ux-N)

3) up to 99.9 s; at values > 99.9 s, the increment is 1 s

4) up to 99.9 V; at values > 99.9 V, the increment is 1 V

Note

If a time is set via IO-Link within the value range 100.0 to 999.9 s with one decimal place, the display will show only the value without the decimal place.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on the parameters of the 3UG4815 and 3UG4816 line monitoring relays that can be set via IO-Link in the Chapter "Process data and data sets (Page 233)".


Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

5.5 Diagnostics

5.5.1 Indication on the display

Display information

The display is basically divided into three different areas.



① Voltage measured value or fault symbol
② Type of monitoring
③ Symbol of the change-over contact

Meaning of the information on the display

Note

Displays in the event of an error

The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display areas	Symbol	Meaning
①	>xyz	Measured value is above the range that can be measured. 3UG4815: xyz = 690 3UG4816: xyz = 400
①	200V <-> U1-2, U2-3, U3-1 (3UG4815) 200V <-> U1-N, U2-N, U3-N (3UG4816)	Currently measured voltage or U1-2, U2-3, U3-1 (3UG4815) / U1-N, U2-N, U3-N (3UG4816) is displayed. • Not flashing: Voltage in the correct range or delay time is running • Flashing: U1-2, U2-3, U3-1 (3UG4815) / U1-N, U2-N, U3-N (3UG4816) overshot or undershot, delay time expired, relay has switched
①	Lx ⫽	Flashing: Phase failure detected
①	Asy <-> 5 %	Flashing: Asymmetry has been exceeded
①	↶!	Flashing: Incorrect phase sequence detected
①	PERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1)]
①	OK	Device is in Communication-Mode (IO-Link)

Display areas	Symbol		Meaning
①	ERR		IO-Link communication interrupted
①	SIO		Device is in SIO-Mode
②			Monitoring for voltage overshoot
②			Monitoring of the warning threshold for voltage overshoot (only visible if the parameter "Threshold for overshoot" is set to OFF.)
②			Monitoring for voltage undershoot
②			Monitoring of the warning threshold for voltage undershoot (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②	◀		Voltage is in correct range.
②	▲		A voltage undershoot has occurred. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲◀		Alternate flashing: The voltage has risen above the set warning threshold.
②	▼		A voltage undershoot has occurred. • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼◀		Alternate flashing: The voltage has fallen below the set warning threshold.
③	中⬚	U▼, U!▼	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON-delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open
		U▲, U!▲	
		Asy, Asy!	

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

If the monitoring relays are used downstream of a frequency converter, it is necessary to obtain a waveform without additional zero crossings of the voltage. This can be achieved with the help of a sine-wave filter.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of the output relay K1 in the Chapter "Functionality (Page 75)".

5.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

In the 3UG4815 and 3UG4816 line monitoring relays with IO-Link connection, there is the option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 5-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 78)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set voltage is higher than the set threshold for overshoot.	• Reduce the voltage. • Set a higher threshold.
Value below (warning) threshold for undershoot	The set voltage is lower than the set threshold for undershoot.	• Increase the voltage. • Set a lower threshold.
Value above (warning) threshold for voltage asymmetry	Different voltage at phases L1, L2 and L3.	• Check the voltages of the individual phases. • Set a higher threshold.
Phase failure L1	Connection to phase L1 interrupted.	Check the electrical connection.
Phase failure L2	Connection to phase L2 interrupted.	Check the electrical connection.
Phase failure L3	Connection to phase L3 interrupted.	Check the electrical connection.
Phase sequence error	Error in phase sequence.	Swap the two phases.
Phase failure N conductor [1]	Connection to N conductor interrupted.	Check the electrical connection.
Measured value is outside the range that can be measured	The measured voltage is above or below the range that can be measured.	• Reduce the voltage. • Increase the voltage.

[1] Only on the 3UG4816 line monitoring relays.

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 5-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information	
		GE [3]	GW [4]		3UG4815	3UG4816
Invalid parameter	0x6320	x	—	x	PERR	
Self-test error/internal error	0x5000	x	—	x	ERR	
Threshold for overshoot exceeded	0x8C10	x	—	x	▲	
Threshold for undershoot violated	0x8C30	x	—	x	▼	
Threshold for voltage asymmetry exceeded	0x8C10	x	—	x	▲	

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information	
		GE [3]	GW [4]		3UG4815	3UG4816
Phase failure L1	0x8CB1	x	—	x	Lx ⫽	L1 ⫽
Phase failure L2	0x8CB1	x	—	x	Lx ⫽	L2 ⫽
Phase failure L3	0x8CB1	x	—	x	Lx ⫽	L3 ⫽
Phase sequence error	0x8CB1	x	—	x	↶ !	
Phase failure N conductor	0x8CB1	x	—	x	—	N ⫽
Measured value is outside the range that can be measured[5]	0x8C20	—	—	—	>xyz	

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process image input" (see "3UG4815 line monitoring relay (Page 253)" for 3UG4815 and "3UG4816 line monitoring relay (Page 261)" for 3UG4816), you can determine via the group error (GE) bit or general warnings (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostics data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 255)" for 3UG4815 and the Chapter "System commands - data set (index) 2 (Page 263) " for 3UG4816).

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 255)" for 3UG4815 and the Chapter "System commands - data set (index) 2 (Page 263) " for 3UG4816).

x: Bit set

○: Not relevant

[5] 3UG4815: > 690 V (line-to-line voltage) or 3UG4816: > 400 V (line-to-neutral voltage)

5.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys ▲▼ simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

5.6 Circuit diagrams

5.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4815 / 3UG4816

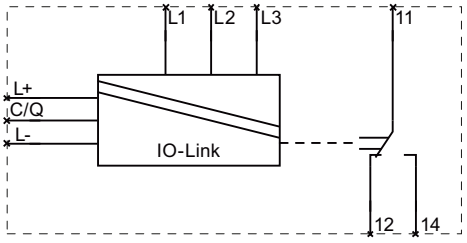


Figure 5-1 3UG4815 line monitoring relay for IO-Link

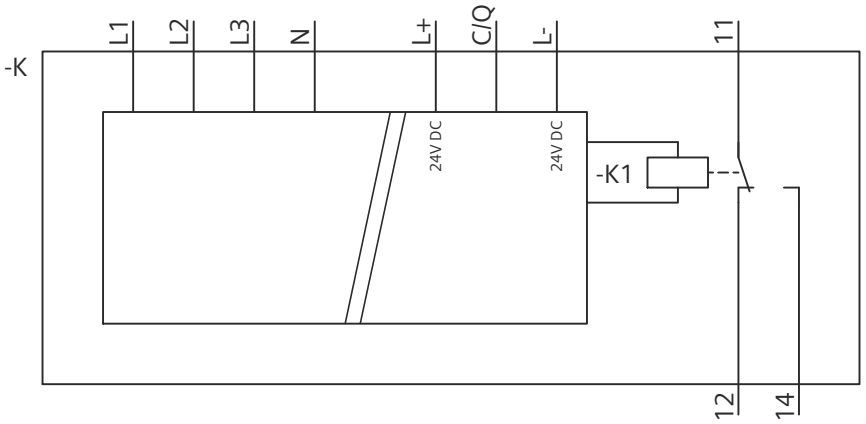


Figure 5-2 3UG4816 line monitoring relay for IO-Link

Note

It is not necessary to fuse the measuring circuit to protect the device. Fusing for line protection depends on the cross-section used.

Note

The 3UG4815 and 3UG4816 line monitoring relays are only suitable for line frequencies of 50 / 60 Hz!

5.6.2 Typical circuit diagrams

3UG4815

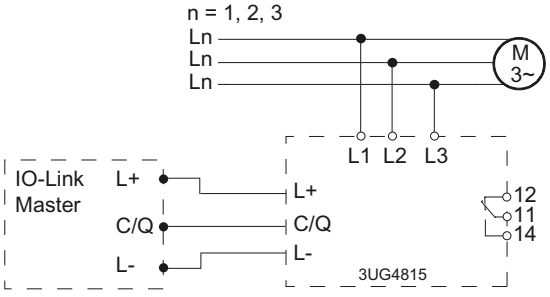


Figure 5-3 3UG4815 line monitoring relay

3UG4816

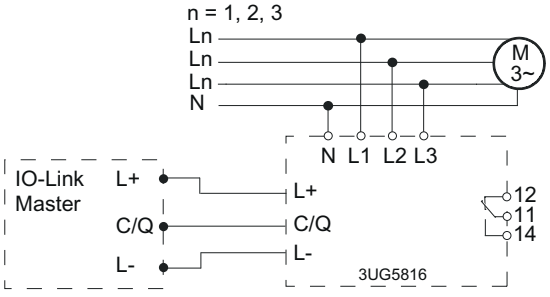


Figure 5-4 3UG4816 line monitoring relay

5.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4822 current monitoring relays

6

6.1 Application areas

Application areas

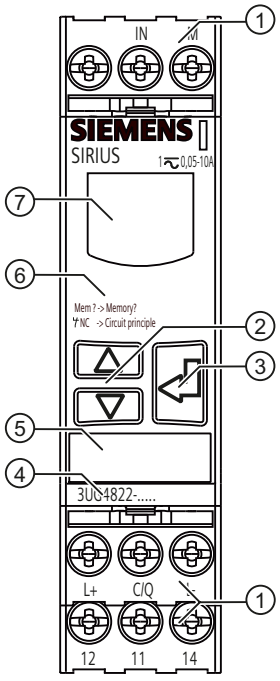
The current monitoring relays are used, for example, in the following applications:

Table 6-1 Application areas of the current monitoring relays

Function	Application
• Undercurrent monitoring and overcurrent monitoring • Monitoring the functionality of electrical loads • Wire-break monitoring	• Emergency lighting (failure of a lamp → drop in current strength in the system) • Heating systems (electroplating plants, plastic injection machines, paintshops) • Lamps (tunnels, OP lighting, traffic lights, signal systems, UV lamps, infrared radiators, laser lamps)

6.2 Operator controls and connection terminals

Front view / terminal labeling

Front view	Description	
	**Position digits**	
	①	Terminal block (removable): Connection is possible using screw terminals or spring-loaded terminals
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	L+	Supply voltage for IO-Link
	C/Q	Communication signal / switching signal
	L-	Ground IO-Link
	M	Measuring signal input -
	IN	Measuring signal input +
	12	Output relay K1 CO contact NC contact
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact

You can find additional information on the connection terminals and the permissible conductor cross-sections in the Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 102)".

6.3 Functionality

General functionality

Depending on the set threshold, the 3UG4822 current monitoring relays monitor a single-phase AC load current (RMS value) or DC load current flowing over terminals IN and M of the device for **overshoot** (I▲) or **undershoot** (I▼) or in **window monitoring** (I▲ and I▼). The true root mean square value (tRMS) of the current is measured.

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The 3UG4822 current monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link and transfer the measured current values and error messages to a controller.

You can find the setting ranges and factory settings of the 3UG4822 current monitoring relays in the Chapter "Operation (Page 95)".

You can find a description of the individual parameters in the Chapter Parameters (Page 203).

You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring

If the supply voltage is switched on and no load current is flowing yet, the display will indicate "I▼▼▼" and show a symbol for current overshoot monitoring, current undershoot monitoring, or range monitoring.

ON-delay time

If the load current overshoots the lower measuring range limit 0.05 A, the set ON-delay time begins (onDel). During this time, undershooting or overshooting of the set threshold values will not result in a relay response of the CO contact.

Tripping delay time

The set tripping delay time (I▼Del, I▲Del) starts if the load current flowing under normal operating conditions overshoots or undershoots the corresponding set threshold value. After expiry of this time, the output relay K1 changes the switching state, depending on the set relay switching response. On the display, the currently displayed measuring value and the symbol for undershoot or overshoot flash. An output change-over contact is available as a signaling contact.

Note

For AC currents I > 10 A, commercially available current transformers, e.g. 4NC, can be used as accessories. You will find more information in Catalog LV10 (https://support.industry.siemens.com/cs/ww/en/view/109482234).

Using the "transformer transmission factor" parameter (Scale), the display and transmission of the measured values via IO-Link can reproduce the measured primary current. The maximum primary current that can be measured is 750 A.

Relay switching response

The relay switching response can be defined in order to adapt the current monitoring relay to different external circuit connections and applications.
If the closed-circuit principle (NC) is set, active switching of the relay when no fault is pending also ensures that a power failure is detected as a fault. If the open-circuit principle (NC) is set, active switching of the relay only when a fault occurs means that a power failure is not detected as a fault.

With the setting U_S = on, the relay switches to the correct state when the supply voltage is applied but waits to detect the current flow before actually monitoring. The monitoring relay is thus switched on without generating an error message because, for example. the motor is not yet running and no current is flowing.

With parameterization NC / U_S = on, a motor can also be switched directly by closing the monitoring relay if the output relay K1 switches the contactor coil voltage. However, a defect that prevents current from flowing is not signaled with this setting. This can be suitably handled by setting the relay switching response to NC / I > 50 mA. When the supply voltage is applied, the output relay K1 is switched to the operate condition and the ON-delay time (onDel) is started. If current is not flowing normally after this time has elapsed, the output relay will switch back to the fault condition.

If a motor is not to be started directly using the monitoring relay, but in parallel using a pushbutton, with the monitoring relay ensuring the contactor holding, the switching response can be set accordingly.

With the setting I > 50 mA in conjunction with a set ON-delay time onDel = 0, the output relay K1 will not switch to the correct state until a current is actually measured. In this case, the monitoring relay will hold the contactor until a fault occurs or the current flow is interrupted by a further button or switch. If an ON-delay time is necessary, initial switching of the output relay on application of the supply voltage or on starting the ON-delay time must be suppressed by means of external logic.

Note

The name of the parameter values is based on the assumption that the ON-delay time onDel = 0 is set. The output relay K1 then responds either immediately when the supply voltage U_S is applied or after measurement of a current flow on the set NC or NO working principle.







You can find the switching states of the output relay K1 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 98)".

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4822 current monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot or overshoot.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.







Function diagrams (from application of the supply voltage U_s = on)

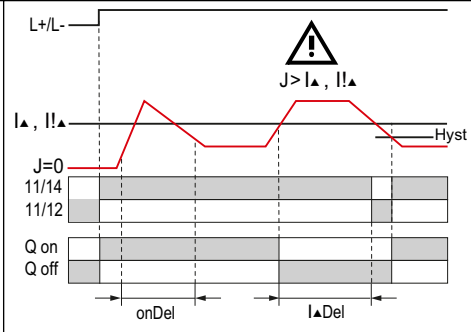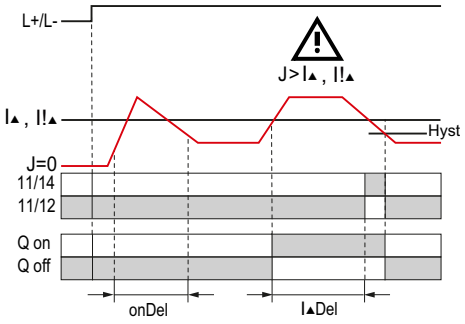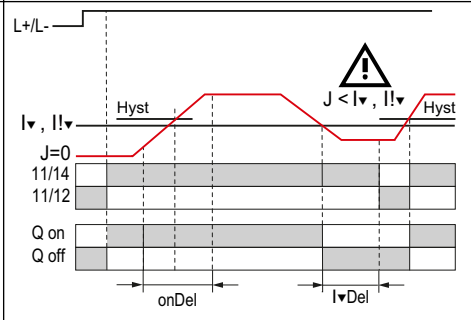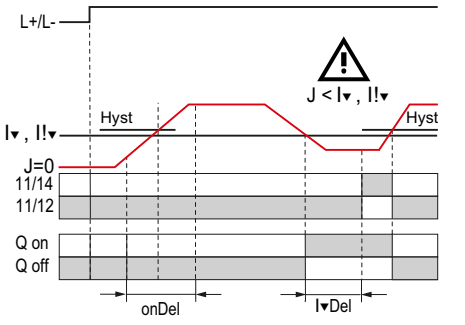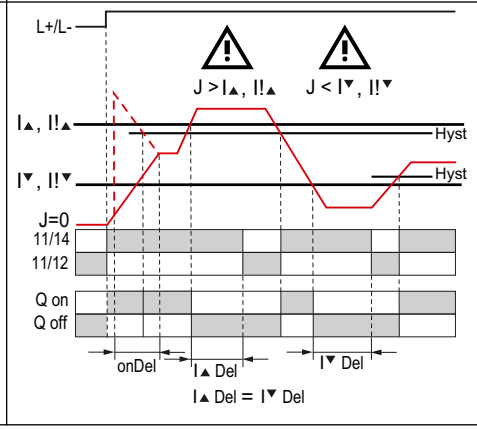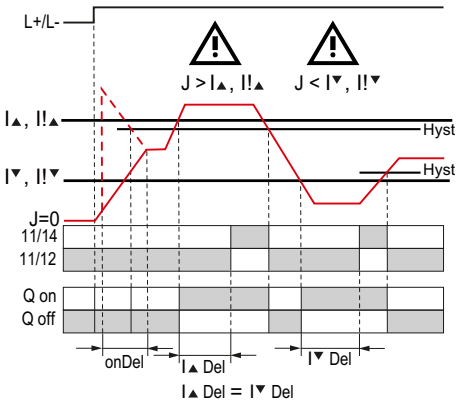	Memory = no Relay switching response = NC (closed-circuit principle) U_s = on	Memory = no Relay switching response = NO (open-circuit principle) U_s = on
I▲ I▼ = off		
I▲ = off I▼		
I▲ I▼		

J = Currently measured current value

I = Set threshold value for the current

Function diagrams (on reaching the lower measuring range limit of the measuring current I > 50 mA)

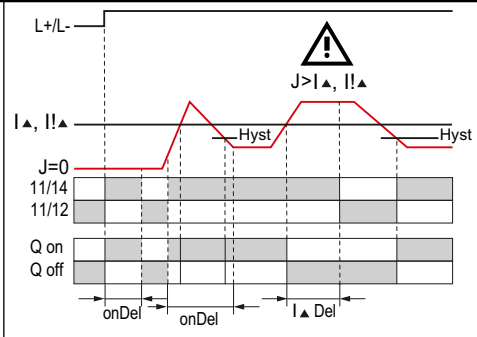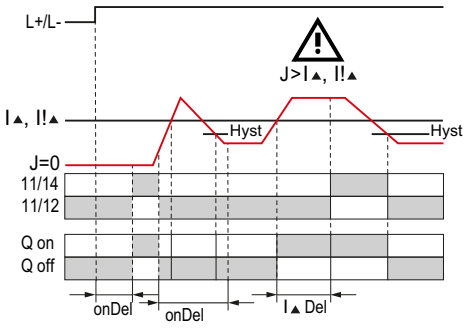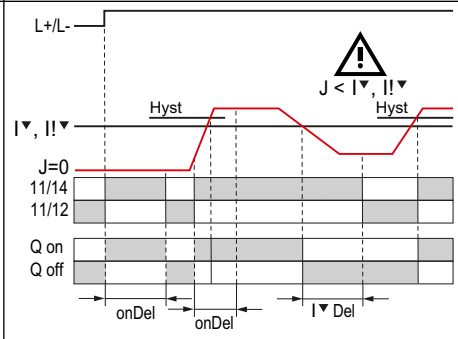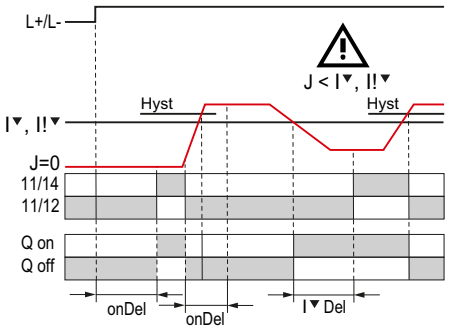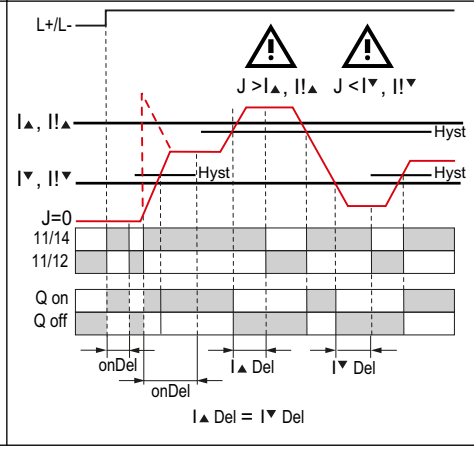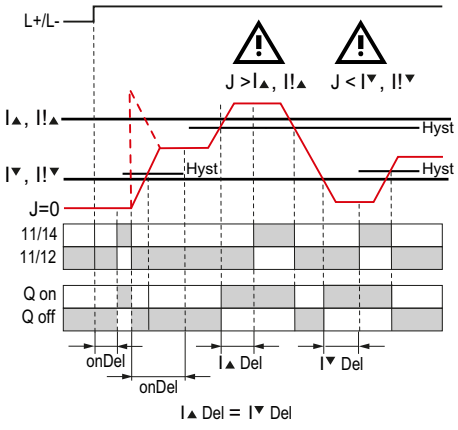	Memory = no **Relay switching response = NC (closed-circuit principle)** **I > 50 mA**	**Memory = no** **Relay switching response = NO (open-circuit principle)** **I > 50 mA**
I▲ I▼ = off		
I▲ = off I▼		
I▲ I▼		

J = Currently measured current value

I = Set threshold value for the current

6.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3UG4822 current monitoring relay:

Table 6-2 Parameter information, 3UG4822 current monitoring relay

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for undershoot (I▼)	0.05 A or OFF	10.0 A or OFF	0.01 A	1.5 A
"RUN" / IO-Link	Threshold for overshoot (I▲)	0.05 A or OFF	10.0 A or OFF	0.01 A	2.5 A
"RUN" / IO-Link	Warning threshold for undershoot (I!▼)	0.05 A or OFF	10.0 A or OFF	0.01 A	1.5 A
"RUN" / IO-Link	Warning threshold for overshoot (I!▲)	0.05 A or OFF	10.0 A or OFF	0.01 A	2.5 A
"SET" / IO-Link	Hysteresis (Hyst)	0.01 A or OFF	5.0 A or OFF	0.01 A	0.5 A
"SET" / IO-Link	ON-delay time (onDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[2)] IO-Link: 0.1 s	Disabled (0 s)
IO-Link	ON-delay time (at Power ON)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at manual reset)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at restart)	Disabled	Enabled	--	Disabled
"SET" / IO-Link	Tripping delay time (I▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[2)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (I▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[2)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Reset response (Mem)	local: no = Auto-reset IO-Link: Automatic	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Auto-reset IO-Link: Automatic

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"SET" / IO-Link	Relay switching response (closed-circuit principle NC / open-circuit principle NO)	[00] Closed-circuit principle NC, I > 50 mA [01] Open-circuit principle NO, I > 50 mA [10] Closed-circuit principle NC, U_s = on [11] Open-circuit principle NO, U_s = on		--	[00] Closed-circuit principle NC, I > 50 mA
"SET" / IO-Link	Transformer transmission factor (Scale)	2 or OFF	750[3)]	1[1)]	Disabled (OFF)
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Analog value coding	0 (Disabled)	255	--	16

[1)] To 20. For values from 20 to 100, the increment is 5.
For values from 100 to 500, the increment is 10.
For values from 500 to 750, the increment is 50.

[2)] up to 99.9 s; at values > 99.9 s, the increment is 1 s

[3)] The maximum value refers to a current transformer with a secondary current of 1 A. The measuring range of the primary current is limited to 750 A.

The following table provides an overview of the settable thresholds for the transformer transmission factor and the resulting thresholds for the primary current.

Primary current (in A)	Secondary current (in A)	
	5	1
	Transformer transmission factor (Scale)	
--	OFF	OFF
5	1	5
10	2	10
15	3	15
20	4	20
25	5	25
30	6	30
40	8	40
50	10	50
60	12	60
75	15	75
80	16	80
100	20	100
150	30	150
200	40	200
250	50	250
300	60	300

Primary current (in A)	Secondary current (in A)	
400	80	400
500	100	500
600	120	600
750	150	750

Note

Setting OFF for the transformer transmission factor defines a current measurement range of 0 to 10 A.

Note

If a time is set via IO-Link within the value range 100.0 to 999.9 s with one decimal place, the display will show only the value without the decimal place.

Note

"Overshoot" monitoring mode is activated when the undershoot threshold is set to OFF.

"Undershoot" monitoring mode is activated when the overshoot threshold is set to OFF.

Note

Deactivating monitoring

If the upper and lower threshold values are deactivated (OFF), monitoring will cease for:

- Current overshoot
- Current undershoot

The up-to-date measured value is displayed permanently.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on those parameters of the 3UG4822 current monitoring relay for IO-Link that can be set via IO-Link in the Chapter "Process data and data sets (Page 233)".

Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

6.5 Diagnostics

6.5.1 Indication on the display

Display information

The display is divided into three different areas.



① Current measured value or fault symbol
② Type of monitoring
③ Symbol of the change-over contact

Meaning of the information on the display

Note

Displays in the event of an error

The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display areas	Symbol	Meaning
①	I▼▼▼	The current is below the current range that can be measured.
①	I▲▲▲	The current is above the current range that can be measured.
①	5.0A	Currently measured current is displayed. • Not flashing: Current in the correct range or delay time is running • Flashing: Threshold overshot or undershot, delay time expired, relay has switched
①	P.ERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1]
①	OK	Device is in Communication-Mode (IO-Link)
①	ERR	IO-Link communication interrupted
①	SIO	Device is in SIO-Mode
②		Monitoring for current overshoot
②		Monitoring of the warning threshold for current overshoot (only visible if the parameter "Threshold for overshoot" is set to OFF.)

Display areas	Symbol	Meaning
②		Monitoring for current undershoot
②		Monitoring of the warning threshold for current undershoot (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②	◄	Current is in correct range.
②	▲	Current has risen above threshold. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲◄	Alternate flashing: The current has risen above the set warning threshold.
②	▼	Current has fallen below threshold. • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼◄	Alternate flashing: The current has fallen below the set warning threshold.
③	 I▼, I!▼ I▲, I!▲	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of the output relay K1 in the Chapter "Functionality (Page 91)".

6.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

The 3UG4822 current monitoring relays with IO-Link connection provide an option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 6-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 95)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set current is higher than the set threshold for overshoot.	• Reduce the current. • Set a higher threshold.
Value below (warning) threshold for undershoot	The set current is lower than the set threshold for undershoot.	• Increase the current. • Set a lower threshold.
Measured value is outside the range that can be measured	The measured current is above or below the range that can be measured.	• Reduce the current. • Increase the current.

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 6-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	PERR
Self-test error/internal error	0x5000	x	—	x	ERR
Threshold for overshoot exceeded	0x8C10	x	—	x	▲
Threshold for undershoot violated	0x8C30	x	—	x	▼
Measured value is outside the range that can be measured	0x8C20	—	—	—	I▼▼▼
					I▲▲▲

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process input image" (see "3UG4822 current monitoring relays (Page 269)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 271)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 271)").

x: Bit set

○: Not relevant

6.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

6.6 Circuit diagrams

6.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4822

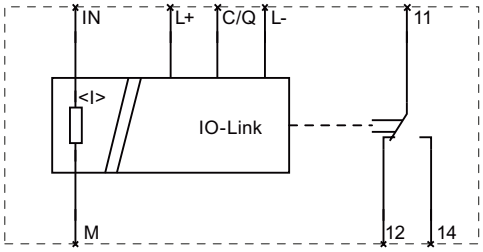


Figure 6-1 3UG4822 current monitoring relay for IO-Link

Note

On the 3UG4822 current monitoring relays for IO-Link, the measuring circuit and the IO-Link circuit are electrically isolated.

6.6.2 Typical circuit diagrams

3UG4822

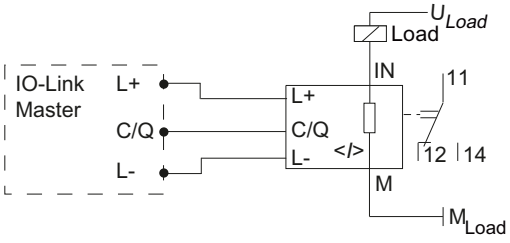


Figure 6-2 3UG4822-.AA40 single-phase operation

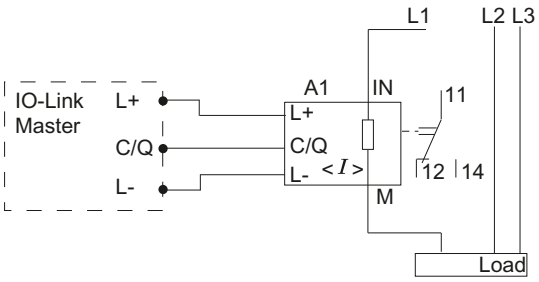


Figure 6-3 3UG4822-.AA40 three-phase operation

6.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4825 residual current monitoring relay with 3UL23 transformer

7

7.1 Application areas

Application areas

Residual current monitoring relays are used in industry to:

- Protect systems from damage caused by fault currents
- Prevent production losses caused by unplanned downtime
- Perform maintenance to meet all demands

3UG4825 residual current monitoring relays are used in conjunction with 3UL23 residual current transformers to monitor systems where environmental conditions increase the chance of higher fault currents. The devices are used for applications including in the following areas:

Table 7-1 Application areas of 3UG4825 residual current monitoring relays

Cause of fault	Application
• Dust deposits on terminals	• Woodworking, grain mills
• Increased levels of humidity	• Mining, power supply containers
• Capacitive fault currents as "basic fault load"	• For large systems (line length)
• Porous cables and lines	• Motor winding insulation
• Diminishing insulation caused by material wear	• Furnaces


Note

3UG4825 residual current monitoring relays monitor devices and systems for their correct function.

They are **not** suitable for personal protection or protection from fires.

7.2 Operator controls and connection terminals

3UG4825 front view/terminal labeling

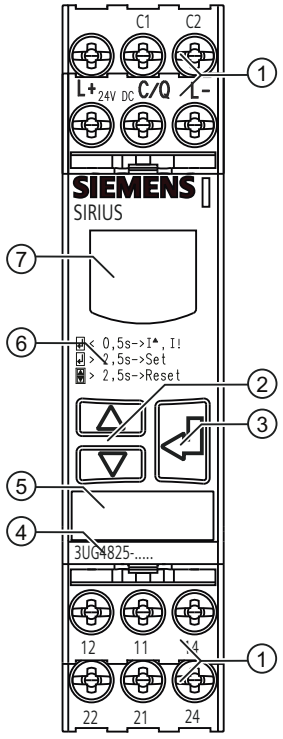Front view	Description	
	**Position digits**	
	①	Terminal block (removable): Connection is possible using screw terminals or spring-loaded terminals.
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	L+	Supply voltage for IO-Link
	C/Q	Communication signal/switching signal
	L-	Ground IO-Link
	C1	Connection for 3UL23 residual current transformer
	C2	
	12	Output relay K1 CO contact NC contact (alarm output)
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact
	22	Output relay K2 CO contact NC contact (warning output)
	21	Output relay K2 CO contact root
	24	Output relay K2 CO contact NO contact

You can find additional information on the connection terminals and the permissible conductor cross-sections in the Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 120)".

7.3 Function

General functionality

The 3UG4825 residual current monitoring devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

3UG4825 residual current monitoring relays are equipped with a display and are parameterized with three keys.

You will find the setting ranges and factory settings of the available parameters in Chapter "Operating (Page 114)".

You will find a description of the individual parameters in Chapter "Parameters (Page 203)".

The main conductors and, if present, the neutral conductor to which the load is connected, are routed through the opening of the ring core of a 3UL23 residual current transformer. There is a secondary winding around this ring core to which the 3UG4825 residual current monitoring relay is connected.

In fault-free operation of a system, the sum of inflowing and outflowing currents equals zero. No current is then induced in the secondary winding of the residual current transformer.

When an insulation error occurs, for example, the sum of the inflowing currents is greater than the sum of the outflowing currents.

The residual current induces a secondary current in the secondary winding of the transformer. This current is evaluated in the monitoring relay and used to display the current residual current and to switch the output relays when the set warning threshold or the tripping threshold is overshot.

To ensure a maximum plant availability 3UG4825 residual current monitoring relays focus on the following features:

- **High degree of measuring accuracy**
  3UG4825 residual current monitoring relays in combination with 3UL23 differential current transformers operate with a measuring accuracy of -7.5%/+7.5%. This enables set limit values to be monitored very precisely. False tripping caused by measuring errors is minimized.
- **Adjustable delay times**
  The ON-delay time of 3UG4825 residual current monitoring relays can be configured freely, enabling fading out of fault currents due to high input currents that are measured during motor start-up only. Short-term fault currents or emitted interference can be easily faded out using the adjustable tripping delay time. For more information please see the Chapter "Measuring accuracy (Page 107)".

- **Supply voltage**
  The 3UG4825 residual current monitoring relays are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source. This not only ensures that devices can be used worldwide, but also that autonomous operation is possible with a communication connection or when the communication fails.
  The switching response of the relay outputs can be set to open-circuit principle (NO) if you intend to continue plant operation even if the monitoring function fails. This means only actively determined fault currents are reported via the relay outputs.
- **Permanent self-monitoring**
  The permanent self-monitoring feature of 3UG4825 ensures reliable system monitoring. The connected 3UL23 residual current transformer is also permanently monitored for open-circuit or short-circuit. As a result, cyclic manual tests to ensure its function are obsolete. Regardless of this, it is possible at any time to test the output relays for switching capability. Pressing the Set button for longer than 2.5 s will call up parameter assignment mode. This will cause the output relays to switch to the fault state as a safety precaution. Proceed as described above to quit parameter assignment mode. The output relay will once again switch back to its normal operating state.


Measuring accuracy

The combination of 3UG4825 residual current monitoring relay and 3UL23 residual current transformer is designed so that a warning or alarm is triggered at the latest upon exceeding the set limit values. To safeguard this function, slightly higher fault currents than those actually measured are displayed and compared with the set limit values.

The measuring accuracy is -7.5 %/+7.5 % of the value displayed. This takes into account the measuring accuracy of monitoring relay and residual current transformer.

Limits of fault current measurement

In the event of increasing primary currents, transformer production tolerances, imbalances in the cable routing and current loads in individual cables increasingly cause what appear to be fault currents that are detected by the evaluation units.
An increased false tripping may occur if excessively low monitoring limit values have been set at high primary currents. Such tolerances also mean that the measuring accuracy no longer corresponds to the range of between -7.5 %/+7.5 %.
To avoid these types of measuring errors and false tripping, we recommend to set the limit values to the minimum values listed in the following graphic, depending on the applicable primary current.

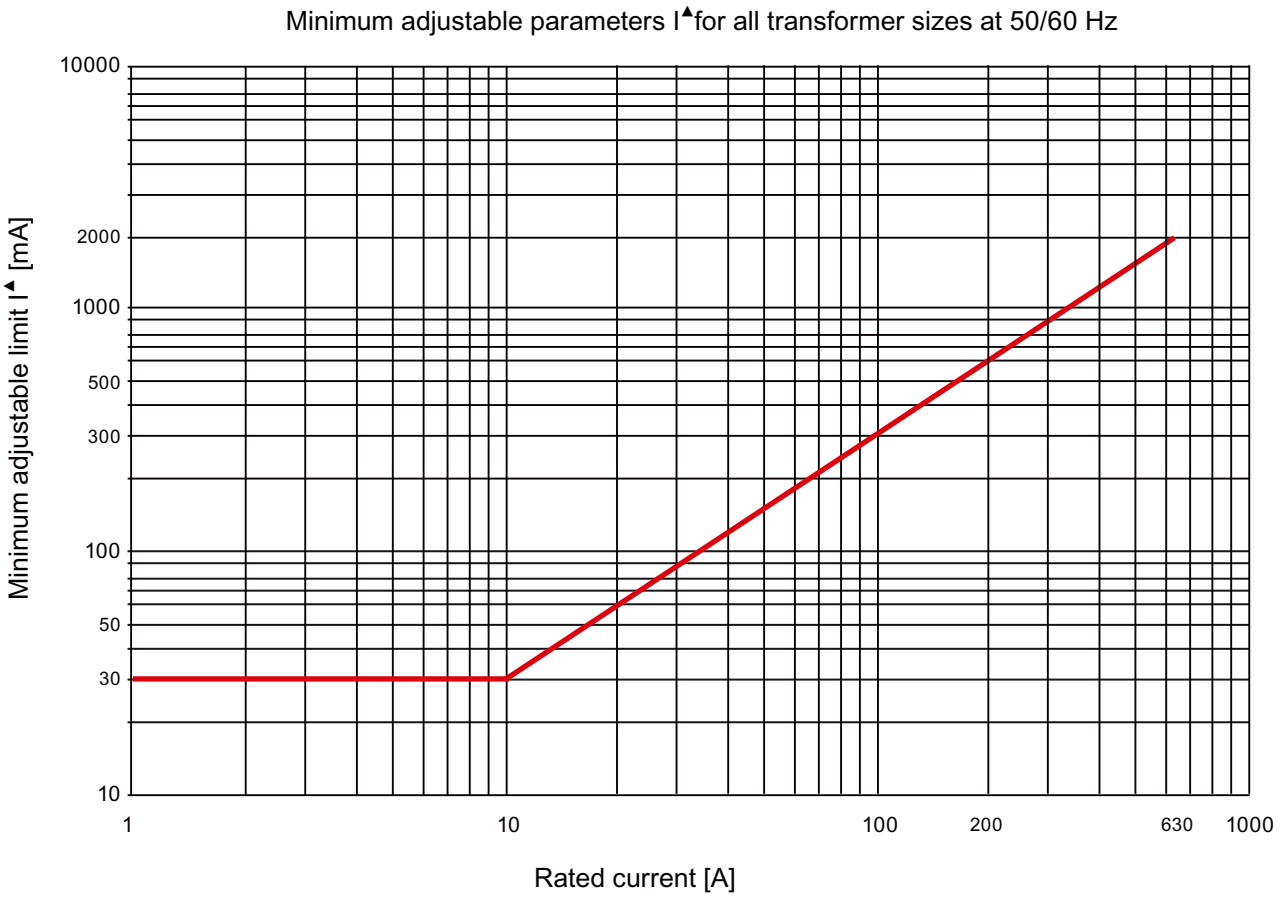

If monitoring is required within limit values that are lower than those recommended, we recommend the use of delay times, particularly if false tripping occurs exclusively during motor start-up.
If delay times do not lead to the desired result, the use of shield sleeves may considerably lower the minimum possible monitoring limit.
For more information see Chapters "Installation specifications (Page 178)" and "Potential for optimization (Page 181)".

The monitored current waveforms also have a strong influence on the measuring accuracy. In the case of loads with generalized phase control, deviations from the measuring accuracy can occur when monitoring for high residual current limits. The cause of this is the extreme difference between the monitored rms values and the peak values of the residual current. The more extreme the generalized phase control, the shorter the time during which current flows, and the lower the resulting rms value. To achieve and monitor a high rms value in such a case, an extremely high peak value of the residual current is necessary. In the case of high currents, current transformers tend towards saturation in which a further increase in current on the primary side does not result in an equivalent increase on the secondary side. In the case of extreme peak values of the residual current, the measuring accuracy suffers as a result of this principle. Due to the great difference between the peak value and the rms value, monitoring for lower limits is useful.

Monitoring

Internal functional tests are performed upon connecting the monitoring relay to the supply voltage. In particular the connection to the 3UL23 residual current transformer is tested. During this time no fault current measurement or monitoring is performed and the display shows ---A instead.
This initial self-test takes approximately 1.6 s. Then a permanent self-test is performed without interrupting the monitoring function.
If the measured fault current exceeds the set warning threshold (I!), the corresponding CO contact 21-22-24 immediately changes the switching state and on the display the arrows highlighting that the threshold was exceeded and that the measured value is within the set limits () flash alternately as an indication.

Note

Currents with line frequencies of between 16 and 400 Hz can be monitored by 3UG4825 residual current monitoring relays in conjunction with 3UL23 residual current transformers!

Startup delay

The set ON-delay time is triggered if the fault current overshoots the lower measuring range limit of 20 mA (onDel). During this time, exceeding the set limit values will not trigger a relay response of the CO contacts.
To start a drive, the output relay switches to the correct state during the ON-delay time (onDel), depending on the selected open-circuit principle or closed-circuit principle, even if the measured value remains above the set value.

Tripping delay

If the measured value exceeds the set threshold (I▲) after expiry of the ON-delay time (onDel), the set tripping delay time (I▲Del) starts and the relay symbol flashes. After expiry of this time, the output relay K1 changes the switching state. Exceeding the set warning threshold will cause output relay K2 to switch immediately without taking into account the tripping delay time. On the display, the actual measured value and the symbol for overshoot flash.

You will find the switching states of the output relays below in section "Function diagrams" and in Chapter "Diagnostics (Page 116)."

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4825 current monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot or overshoot.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.

Tripping conditions

The combination of 3UG4825 residual current monitoring relay and 3UL23 residual current transformer responds according to the following tripping conditions:

Residual current monitoring relays	Fault current
No tripping	0 to 85 % of the set threshold
Tripping not defined	85 to 100 % of the set threshold
Tripping	>= 100 % of the set threshold

3UL23 residual current transformer

3UL23 residual current transformers can be used in conjunction with 3UG4825 residual current monitoring relays to detect fault currents in machines and systems.

3UL23 residual current transformers are suitable for detecting pure AC fault currents and AC fault currents with a pulsating direct-current component.

These necessary accessories are described in Chapter "3UL23 residual current transformers for 3UG4825 monitoring relays (Page 175)."

Note

Do not ground the neutral conductor downstream of the residual current transformer as otherwise fault current monitoring functions can no longer be ensured.


Function diagrams 3UG4825


Note


Difference between Hyst and Hysteresis


In the following diagrams, the term "Hyst" refers to the "Hysteresis" parameter. The "Hysteresis" parameter refers to the monitored limit values (I▲) and can be set in the SET menu.

However, "Hyst = 5 %" refers to the warning thresholds (I!) and is permanently set to 5 %.

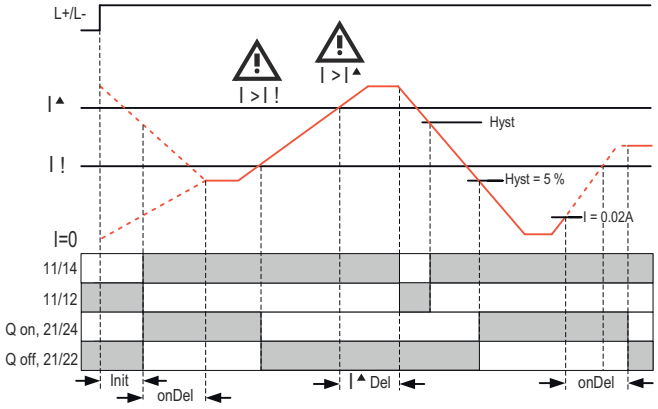Display	Memory = no Relay switching behavior = NC (closed-circuit principle)
I▲ / I! Mem = no	

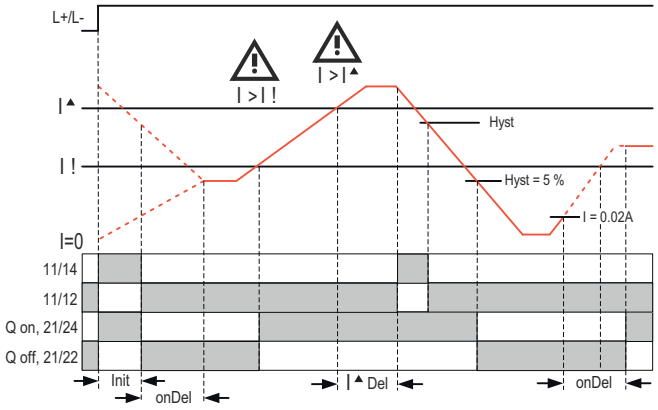Display	Memory = no Relay switching behavior = NO (open-circuit principle)
I▲ / I! Mem = no	

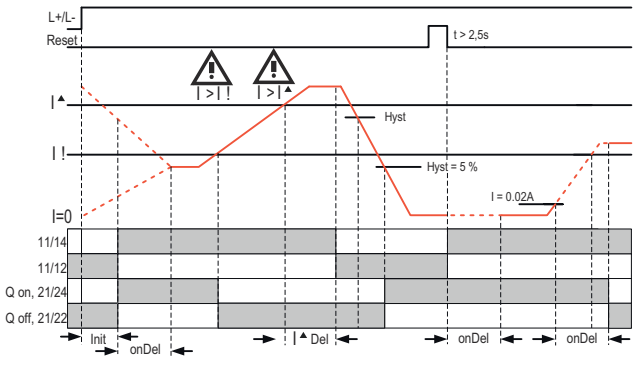Display	Memory = yes Relay switching behavior = NC (closed-circuit principle)
I▲ / I! Mem = yes	

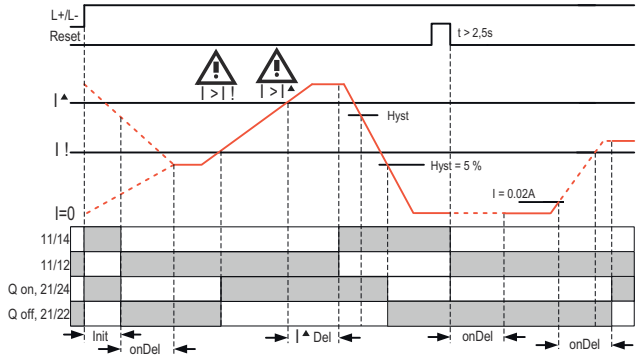Display	Memory = yes Relay switching behavior = NO (open-circuit principle)
I▲ / I! Mem = yes	

Note

The system is immediately switched off in the event of an open-circuit or short-circuit in the transformer connection cables.

7.4 Operating

Parameters

Parameterization of the devices is possible locally using the display and the three keys.



Parameter information

The table below shows the settable parameter information of the 3UG4825 residual current monitoring relay:

Table 7-2 Parameter information, 3UG4825 residual current monitoring relays with digital setting

Menu level	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for overshoot (I▲)	0.03 A	40.0 A	Depending on the value, 0.01 A or 0.1 A	1.0 A
"RUN / IO-Link	Warning threshold for overshoot (I!)	0.03 A or OFF	40.0 A	Depending on the value, 0.01 A or 0.1 A	0.5 A
"SET / IO-Link	Hysteresis (Hyst)	OFF (0 %)	50 %	5 %	5 %
"SET / IO-Link	ON-delay time (onDel)	0.1 s or OFF	999.9 s	0.1 s	OFF
IO-Link	ON-delay time (for Power-On)	Disabled	Released	--	Released
IO-Link	ON-delay time (at manual reset)	Disabled	Released	--	Released
IO-Link	ON-delay time (for Power-On (load))	Disabled	Released	--	Released
"SET / IO-Link	Tripping delay time (I▲Del)	0.1 s or OFF	999.9 s	0.1 s	0.1 s
"SET / IO-Link	Reset response (Mem)	no = Autoreset IO-Link: Automatic	yes = Hand-RESET IO-Link: Manual	--	no = Autoreset IO-Link: Automatic
"SET / IO-Link	Relay switching behavior (closed-circuit principle NC/ open-circuit principle NO)	NC or NO		--	NC
IO-Link	Group diagnostics	Disabled	Released	--	Released
IO-Link	Group error diagnostics	Disabled	Released	--	Released
IO-Link	Local threshold change	Disabled	Released	--	Released
IO-Link	Local parameter change	Disabled	Released	--	Released
IO-Link	Local reset	Disabled	Released	--	Released

Menu level	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
IO-Link	Retentive error memory	Disabled	Released	--	Disabled
IO-Link	Analog value coding[1)]	0 (Disabled)	255	--	14

[1)] You can find the analog value codings accepted by the residual current monitoring relay in the chapter "Analog value coding (Page 235)".

Note

Various parameters are deactivated by setting OFF.

The parameters are described in the Chapter "Parameters (Page 203)".

Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

The 3UL23 residual current transformers used cover the entire fault current range from 0.03 to 40 A in all sizes.

For more information on the technical data of 3UL23 residual current transformers see Chapter "Technical data (Page 123)".

7.5 Diagnostics

7.5.1 Indications on the display

Display information

The display is divided into three different areas.



① Current measured value or fault symbol
② Type of monitoring
③ Symbols of the change-over contacts

Meaning of the information on the display

Note

Indications in the event of a fault

The symbols on the display flash to indicate an error.

The following statuses and faults are indicated on the display as a diagnostics message with flashing symbols:

Display area	Symbol	Meaning
①	5.00A	Displays the measured current
①	PERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1]
①	OK	Device is in Communication-Mode(IO-Link)
①	ERR	IO-Link communication interrupted
①	SIO	Device is in SIO-Mode
②		Monitoring for current overshoot
②	◄	Current is in correct range
②	▲	A current overshoot has occurred
②		Flashing alternately. The warning threshold has been exceeded

Display area	Symbol		Meaning
③		I▲	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON-delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open
③		I!	• Not flashing: Relay contact 21/22 open, relay contact 21/24 closed • Flashing: Delay time (ON-delay) running • Masked out: Relay contact 21/22 closed, relay contact 21/24 open
①	---A		Self-test active, no measurements
①	I▲▲▲		Measurement range exceeded (> 43 A)
①	0.00A		Fallen below measurement range
①			Wire break
①			Short-circuit

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

You will find more information about the switching behavior of the output relay in Chapter "Function (Page 107)."

7.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

The 3UG4825 residual current monitoring relays with IO-Link connection provide an option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 7-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operating (Page 114)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set residual current is higher than the set threshold for overshoot.	• Reduce the residual current. • Set a higher threshold.
Measured value is outside the range that can be measured	The measured residual current value is above the measurable range.	• Reduce the residual current.
Wire break	There is no transformer connected	Connect a transformer (3UL23).
	Connecting cable defective	Check the wiring for damage.

Diagnostics and messages	Possible cause	Possible remedial measure
Short-circuit	Transformer connecting cable damaged	Check the wiring for damage.
	Wrong transformer connected	Use only 3UL23 transformer

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 7-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	PERR
Self-test error/internal error	0x5000	x	—	x	ERR
Warning threshold for overshoot exceeded	—	—	x	x	
Threshold for overshoot exceeded	0x8C10	x	—	x	
Measured value is outside the range that can be measured	0x8C20	—	—	x	
Wire break	0x8CA6	x	—	x	
Short-circuit	0x8CA1	x	—	x	

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process input image" (see "3UG4825 residual current monitoring relay (Page 277)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 279)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 279)").

x: Bit set

—: Not relevant

7.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

7.6 Circuit diagrams

7.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4825


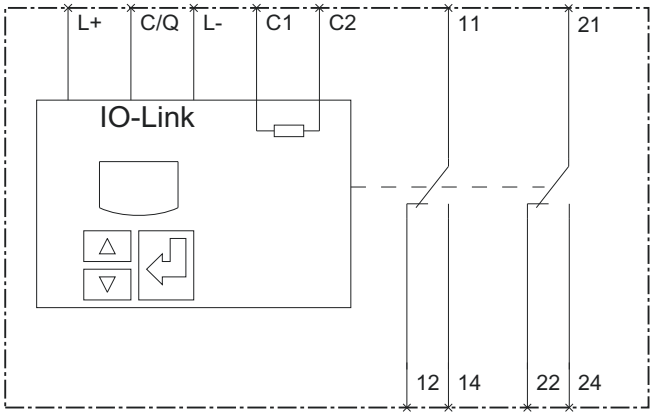


Figure 7-1 3UG4825-.CA40 residual current monitoring relay

Note


The 3UG4825 residual current monitoring relay for IO-Link is suitable for operation with 3UL23 residual current transformers for external ground-fault monitoring. The output signal of the 3UL23 residual current transformer is connected to terminals C1 and C2 of the monitoring relay. To avoid interference injection, which could result in incorrect measurements, these connecting lines must be routed as parallel as possible and twisted, or shielded cables must be used.

7.6.2 Wiring examples

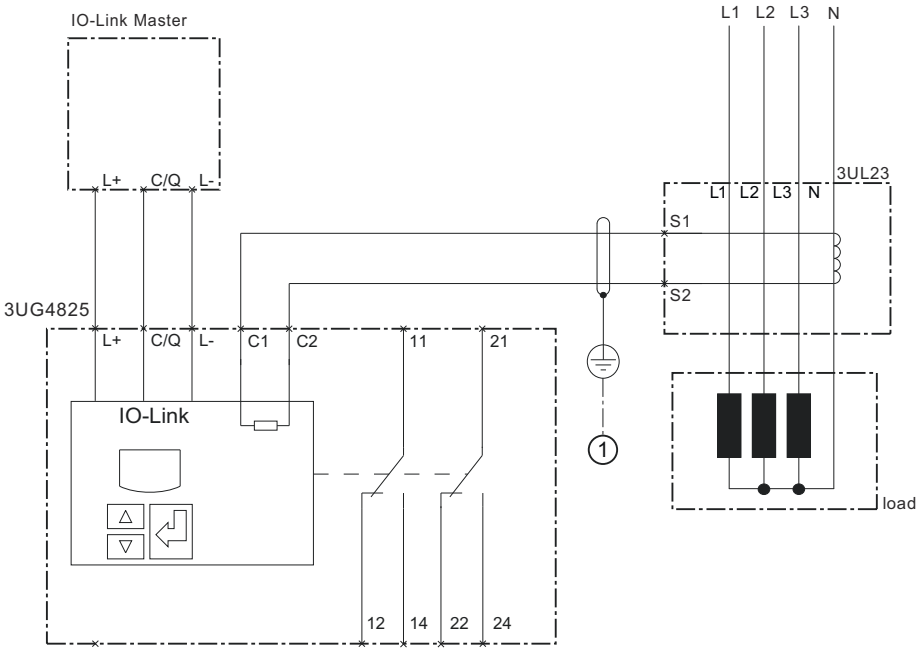

① Cable shielding recommended

Figure 7-2 Wiring example 3UG4825 with 3UL23 (connection to IO-Link master)

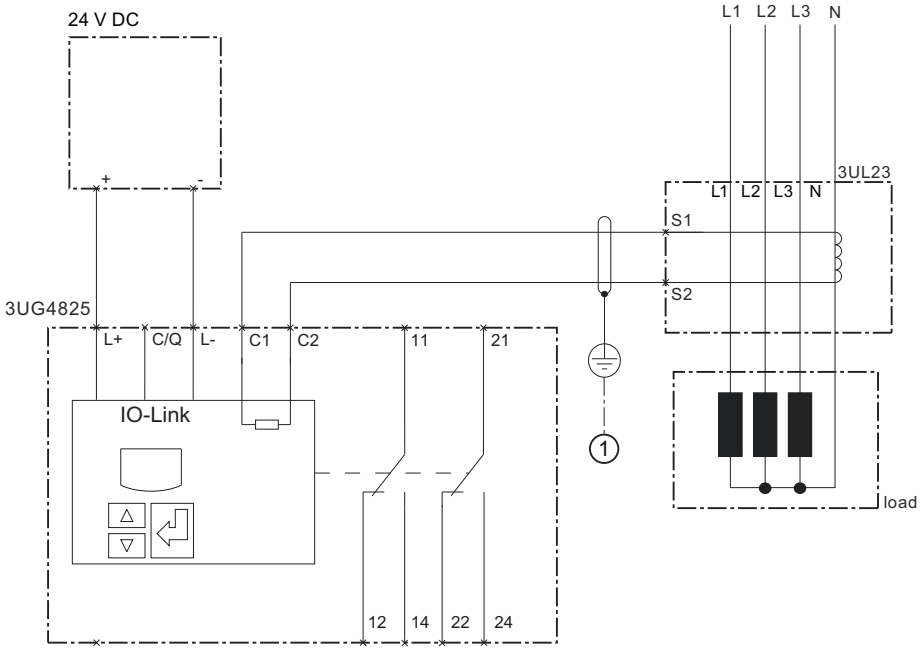

① Cable shielding recommended

Figure 7-3 Wiring example 3UG4825 with 3UL23 (direct power supply with 24 V DC)

7.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4832 voltage monitoring relay

8

8.1 Application areas

Application areas

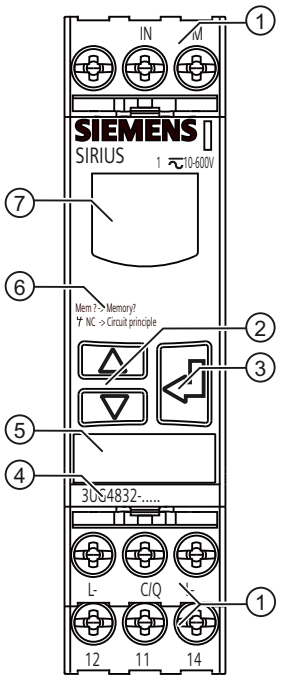
The voltage monitoring relays are used, for example, in the following applications:

Table 8-1 Application areas of the voltage monitoring relays

Function	Application
• Undervoltage • Overvoltage	• Motor current increased due to undervoltage resulting in overheating • Unintended device reset • Mains failure – particularly with battery supply • Heating systems • Cranes • Elevators • Protection against undervoltage on overloaded supply voltages (predominantly with battery supply) • System protection against destruction caused by supply overvoltages • Energy supply to the line • Machine switch-on when a defined voltage is reached • Lamps (UV lamps, laser lamps, OP lighting, tunnels, traffic lights)

8.2 Operator controls and connection terminals

Front view / terminal labeling

Front view	Description	
	**Position digits**	
	①	Terminal block (removable): Connection is possible using screw terminals or spring-loaded terminals.
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	L+	Supply voltage for IO-Link
	C/Q	Communication signal / switching signal
	L-	Ground IO-Link
	M	Measuring signal input -
	IN	Measuring signal input +
	12	Output relay K1 CO contact NC contact
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact

You can find additional information on the connection terminals and the permissible conductor cross-sections in the Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 135)".

8.3 Functionality

General functionality

Depending on the setting, the 3UG4832 voltage monitoring relays monitor an AC voltage or DC voltage at terminals IN and M of the device for **overshoot** (U▲) or **undershoot** (U▼) or in **window monitoring** (U▲ and U▼).

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The 3UG4832 voltage monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link and transfer the measured voltage values and error messages to a controller.

You will find the setting ranges and factory settings of the 3UG4832 voltage monitoring relays in Chapter "Operation (Page 129)."

You can find a description of the individual parameters in the Chapter Parameters (Page 203).

You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring

The output relay K1 responds in accordance with the set relay switching response (closed-circuit principle NC or open-circuit principle NO). The set tripping delay time starts if the monitored voltage overshoots or undershoots the corresponding set threshold value. After expiry of the tripping delay time, the output relay K1 changes the switching state. On the display, the currently displayed measuring value and the symbol for undershoot or overshoot flash.

An output change-over contact is available as a signaling contact.

If the supply voltage is switched on and no monitoring voltage is present yet, the display will indicate $U_{▼▲▼}$ and show a symbol for voltage overshoot monitoring, voltage undershoot monitoring, or range monitoring.







You can find the switching states of the output relay K1 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 131)".

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4832 voltage monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot or overshoot.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.

Function diagrams 3UG4832

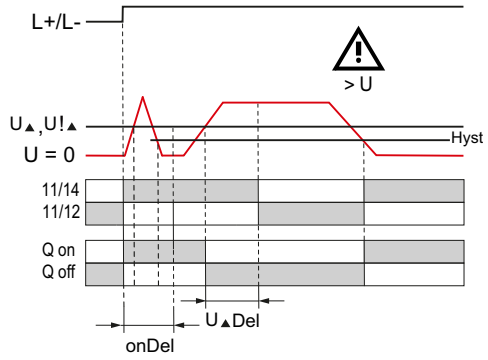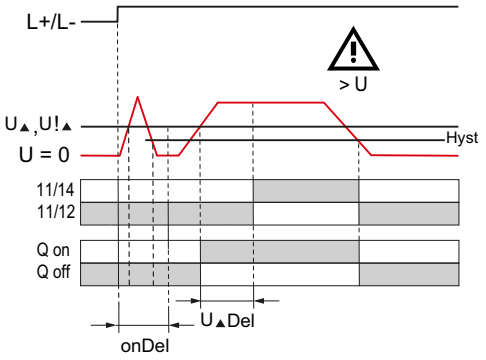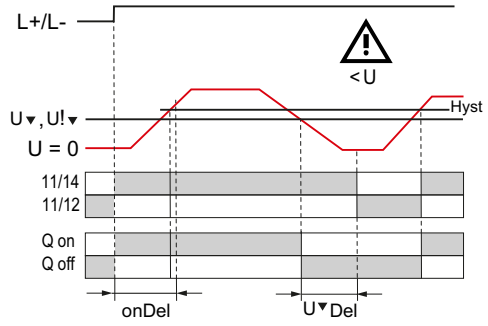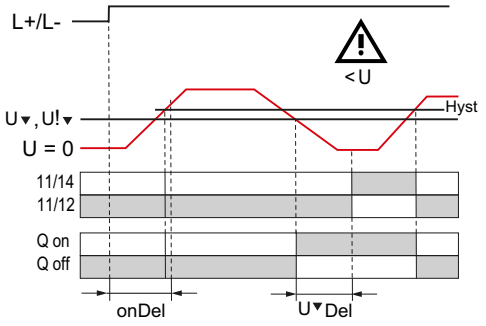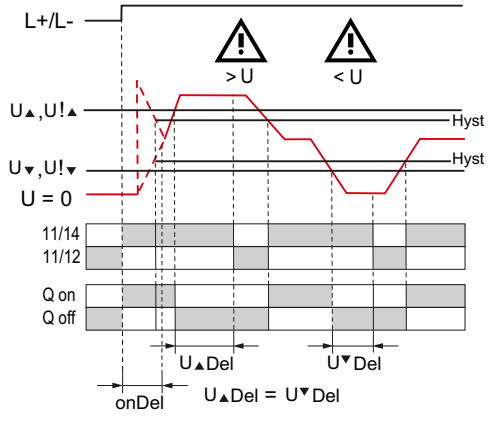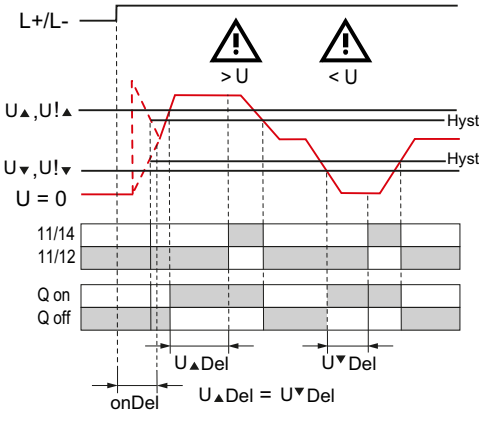	Memory = no **Relay switching response = NC** **(closed-circuit principle)**	**Memory = no** **Relay switching response = NO** **(open-circuit principle)**
U▲ U▼ = off		
U▲ = off U▼		
U▲ U▼		

8.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3UG4832 voltage monitoring relays:

Table 8-2 Parameter information, 3UG4832 voltage monitoring relay

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for undershoot (U▼)	10 V or OFF	600 V or OFF	0.1 V[2)]	200 V
"RUN" / IO-Link	Threshold for overshoot (U▲)	10 V or OFF	600 V or OFF	0.1 V[2)]	300 V
"RUN" / IO-Link	Warning threshold for undershoot (U!▼)	10 V or OFF	600 V or OFF	0.1 V[2)]	200 V
"RUN" / IO-Link	Warning threshold for overshoot (U!▲)	10 V or OFF	600 V or OFF	0.1 V[2)]	300 V
"SET" / IO-Link	Hysteresis (Hyst)	0.1 V or OFF	300 V or OFF	0.1 V[2)]	5 V
"SET" / IO-Link	ON-delay time (onDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
IO-Link	ON-delay time (at Power ON)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at manual reset)	Disabled	Enabled	--	Enabled
"SET" / IO-Link	Tripping delay time (U▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (U▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Reset response (Mem)	local: no = Auto-reset IO-Link: Automatic	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Auto-reset IO-Link: Automatic

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"SET" / IO-Link	Relay switching response (closed-circuit principle NC / open-circuit principle NO)	Closed-circuit principle (NC) or Open-circuit principle (NO)		--	Closed-circuit principle (NC)
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Index for analog value stamping	0 (Disabled)	255	--	44

[1] up to 99.9 s; at values > 99.9 s, the increment is 1 s

[2] up to 99.9 V; at values > 99.9 V, the increment is 1 V

Note

If a time is set via IO-Link within the value range 100.0 to 999.9 s with one decimal place, the display will show only the value without the decimal place.

Note

The monitoring mode "Overshoot" or "Undershoot" is defined with the setting OFF at the threshold for undershoot or overshoot.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on those parameters of the 3UG4832 voltage monitoring relays for IO-Link that can be set via IO-Link in the Chapter "Process data and data sets (Page 233)."


Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

8.5 Diagnostics

8.5.1 Indication on the display

Display information

The display is divided into three different areas.




① Voltage measured value or fault symbol
② Type of monitoring
③ Symbol of the change-over contact

Meaning of the information on the display

Note
Displays in the event of an error
The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display area	Symbol	Meaning
①	U▼▼▼	The voltage is below the voltage range that can be measured.
①	U▲▲▲	The voltage is above the voltage range that can be measured.
①	20.0V	Currently measured voltage is displayed. • Not flashing: Voltage in the correct range or delay time is running • Flashing: Threshold overshot or undershot, delay time expired, relay has switched
①	PERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1]
①	OK	Device is in Communication-Mode (IO-Link)
①	ERR	IO-Link communication interrupted
①	SIO	Device is in SIO-Mode
②		Monitoring for voltage overshoot
②		Monitoring of the warning threshold for voltage overshoot (only visible if the parameter "Threshold for overshoot" is set to OFF.)

Display area	Symbol	Meaning
②		Monitoring for voltage undershoot
②		Monitoring of the warning threshold for voltage undershoot (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②		Window monitoring (monitoring for voltage overshoot and undershoot)
②	◄	Voltage is in correct range.
②	▲	A voltage undershoot has occurred. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲◄	Alternate flashing: The voltage has risen above the set warning threshold.
②	▼	A voltage undershoot has occurred. • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼◄	Alternate flashing: The voltage has fallen below the set warning threshold.
③	U▼, U!▼ U▲, U!▲	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of the output relay K1 in the Chapter "Functionality (Page 127)".

8.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

The 3UG4832 voltage monitoring relays with IO-Link connection provide an option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 8-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 129)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set voltage is higher than the set threshold for overshoot.	• Reduce the voltage. • Set a higher threshold.
Value below (warning) threshold for undershoot	The set voltage is lower than the set threshold for undershoot.	• Increase the voltage. • Set a lower threshold.
Measured value is outside the range that can be measured	The measured voltage is above or below the range that can be measured.	• Reduce the voltage. • Increase the voltage.

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 8-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	P.ERR
Self-test error/internal error	0x5000	x	—	x	ERR
Threshold for overshoot exceeded	0x8C10	x	—	x	▲
Threshold for undershoot violated	0x8C30	x	—	x	▼
Measured value is outside the range that can be measured	0x8C20	—	—	—	U▼▼▼ or U▲▲▲

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process input image" (see "3UG4832 voltage monitoring relay (Page 284)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 286)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 286)").

x: Bit set

○: Not relevant

8.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

8.6 Circuit diagrams

8.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4832

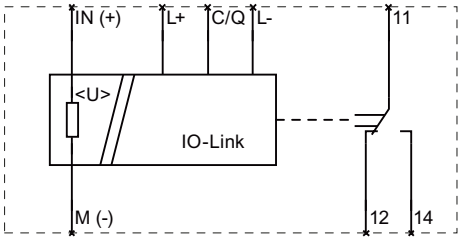


Figure 8-1 3UG4832 voltage monitoring relay for IO-Link

8.6.2 Typical circuit diagrams

3UG4832

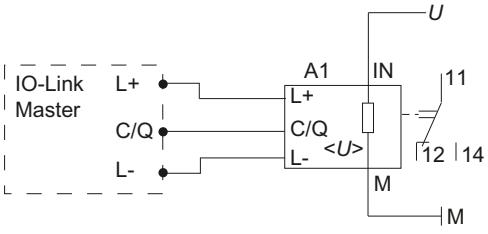


Figure 8-2 3UG4832-.AA40 single-phase operation

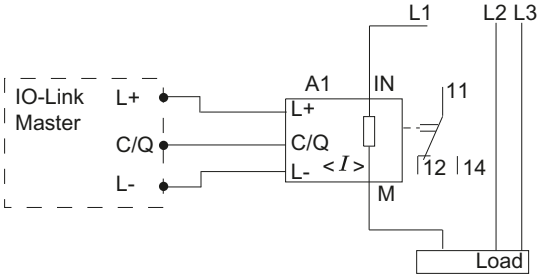


Figure 8-3 3UG4832-.AA40 three-phase operation

8.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4841 cos phi and active current monitoring relay

9

9.1 Application areas

Application areas

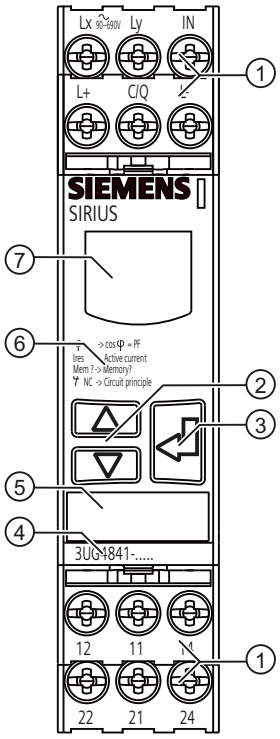
The cos phi and active current monitoring relays are used, for example, in the following application areas:

Table 9-1 Application areas of the cos phi and active current monitoring relays

Function	Application
• No-load monitoring and load shedding • Underload monitoring in the low-end performance range • Monitoring for overload • Simple cos phi monitoring in power systems for controlling compensation systems • Cable break between the control cabinet and the motor	• Fans (in the case of a broken fan belt, for example) • Pumps (in the case of an idling pump, for example) • Filter system (a contaminated filter system, for example) • Reactive power compensation • Sawing system • Conveyor belt • Surface grinding machine • Breaking mill • Milling machine • Car wash • Lifting platform • Screw conveyor • Crane • Turning machine • Infrared heating system

9.2 Operator controls and connection terminals

Front view / terminal labeling

Front view	Description	
	**Position digits**	
	①	Terminal block (removable): Connection is possible using screw terminals or spring-loaded terminals.
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	Lx	Measuring signal (voltage) ~ / +
	Ly	Measuring signal (voltage) ~ / -
	L+	Supply voltage for IO-Link
	C/Q	Communication signal / switching signal
	L-	Ground IO-Link
	IN	Measuring signal (current)
	12	Output relay K1 CO contact NC contact
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact
	22	Output relay K2 CO contact NC contact
	21	Output relay K2 CO contact root
	24	Output relay K2 CO contact NO contact

You can find additional information on the connection terminals and the permissible conductor cross-sections in the Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 151)".

9.3 Functionality

General functionality

Depending on their parameterization, the 3UG4841 cos phi and active current monitoring relays monitor the single-phase power factor (PF: Power Factor) and the resulting active current I_{res} (I resistive), for **overshoot**(φ▲ / I_{res}▲), **undershoot** (φ▼ / I_{res}▼) or **window monitoring** (φ▲ and φ▼ / I_{res}▲ and I_{res}▼). The load to be monitored is connected upstream of the terminal IN. The load current flows over the terminals IN and Ly / N.

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The 3UG4841 cos phi and active current monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link, and transfer the measured values and error messages to a controller.

You will find the setting ranges and factory settings of the 3UG4841 cos phi and active current monitoring relays in Chapter "Operation (Page 144)."

You can find a description of the individual parameters in the Chapter Parameters (Page 203).

You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring

If the motor is switched on and the current value overshoots the measuring range limit 0.2 A, the set ON-delay time begins (onDel). During this time, undershooting or overshooting of the set threshold values will not result in a relay response of the CO contact.

If a threshold is reached, the relevant output relay responds after expiry of the tripping delay time (Del) depending on the set relay switching response (open-circuit principle NO or closed-circuit principle NC).

Note

In the case of active currents I_{res} > 10 A, commercially available current transformers, e.g. 4NC, can be used as accessories. You will find more information in Catalog LV10 (https://support.industry.siemens.com/cs/ww/en/view/109482234).

The set tripping delay time (Del) starts if the active current flowing under normal operating conditions and/or the cos phi value overshoots or undershoots the corresponding set threshold value. After expiry of this time, the relevant output relay changes the switching state. On the display, the affected measuring variable and the symbol for undershoot or overshoot flash. If monitoring for active current undershoot is switched off (I_{res}▼ = off), and if the load current undershoots the lower measuring range threshold (0.2 A), the change-over contacts remain unchanged. The display indicates I < 0.2 A and the message "Measured value is outside the measuring range" is transmitted via IO-Link. If a threshold is set for monitoring

for active current undershoot, undershoot of the measuring range threshold (0.2 A) will result in a relay response of the change-over contacts.

Note

If the apparent current (I_s) flowing under normal operating conditions moves outside the measuring range, the message "Measured value is outside the measuring range" is transmitted via IO-Link and both changeover contacts change their switching state.

This can also occur if the set thresholds for power factor and active current have not yet been exceeded.

(Context: $I_{res} = I_s$ x cos phi)





You can find the switching states of output relays K1 and K2 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 146)".

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4841 power factor and active current monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output and is switched on violation of the warning threshold for undershoot or overshoot of the power factor and on violation of the warning threshold for undershoot or overshoot of the active current.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.







Function diagrams (lower current measuring threshold 0.2 A)

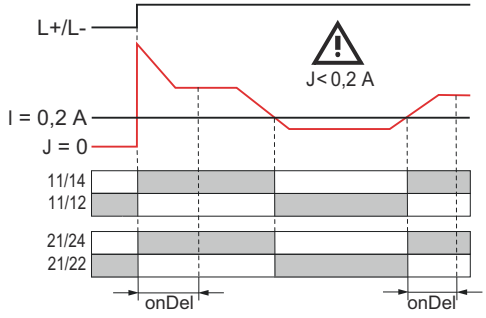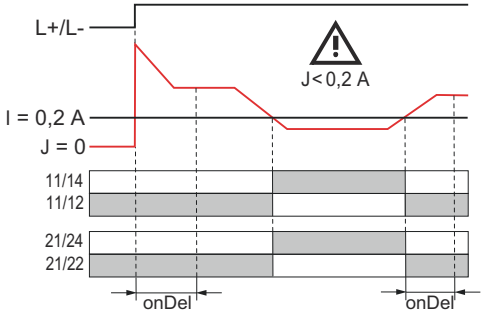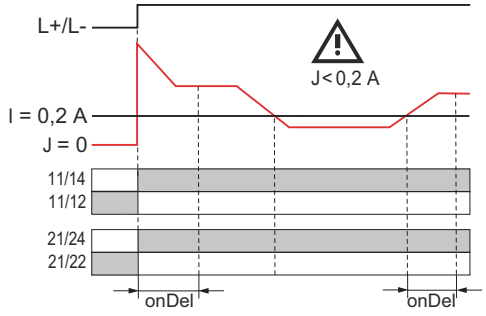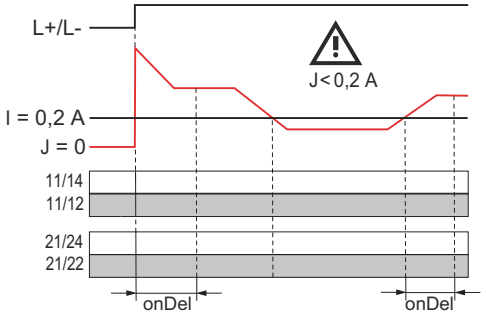	Memory = no **Relay switching response = NC (closed-circuit principle)**	**Memory = no** **Relay switching response = NO (open-circuit principle)**
$I_{r\blacktriangledown}$ 		
$I_{r\blacktriangledown}$ = off		

J = Currently measured current value

I = Set threshold value for the current







Function diagrams (active current monitoring I_{res})

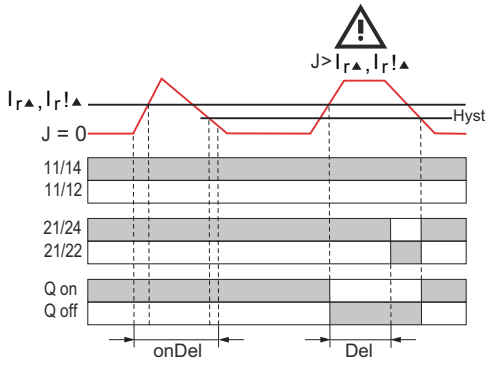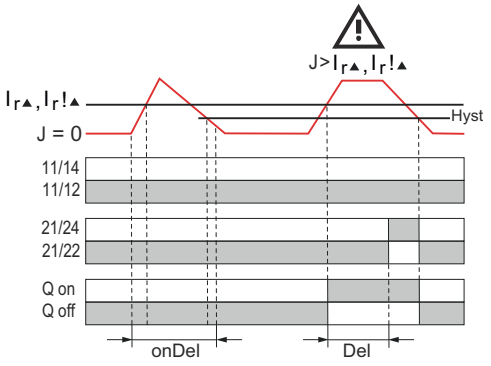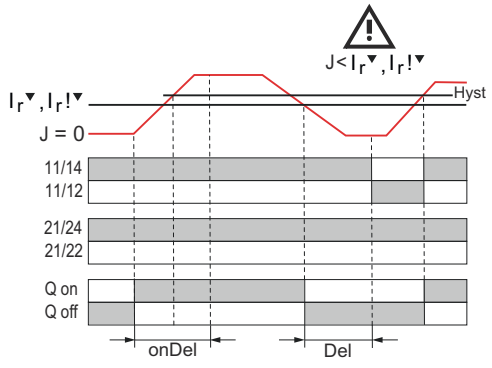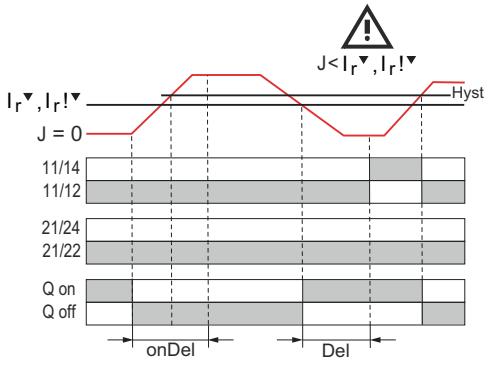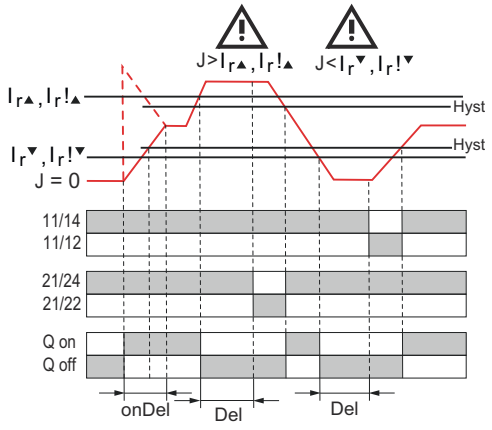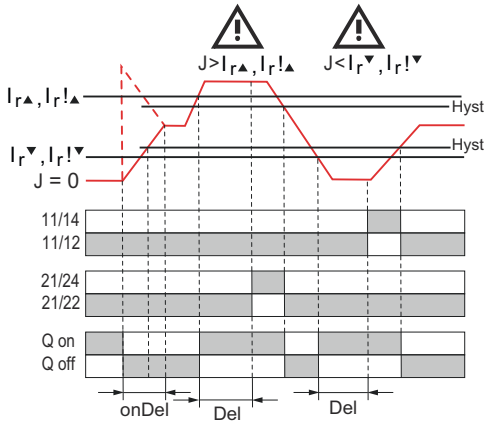	Memory = no **Relay switching response = NC (closed-circuit principle)**	**Memory = no** **Relay switching response = NO (open-circuit principle)**
I_r▲ I_r▼= off		
I_r▲= off I_r▼		
I_r▲ I_r▼		

J = Currently measured current value

I = Set threshold value for the current

Function diagrams (cos phi monitoring)

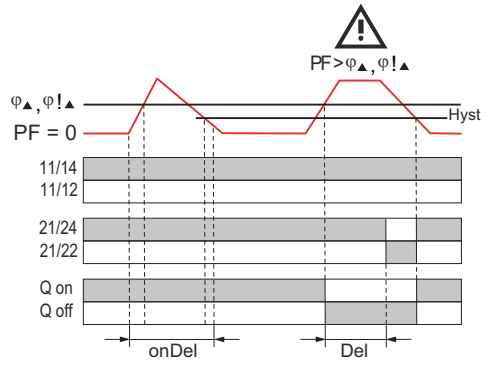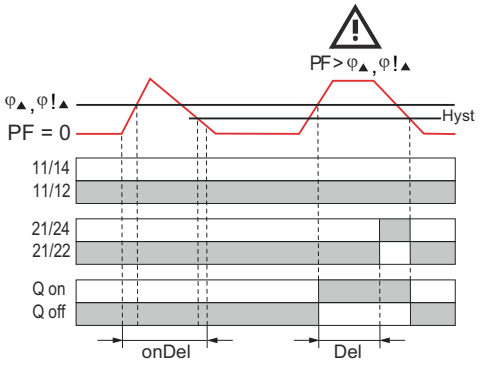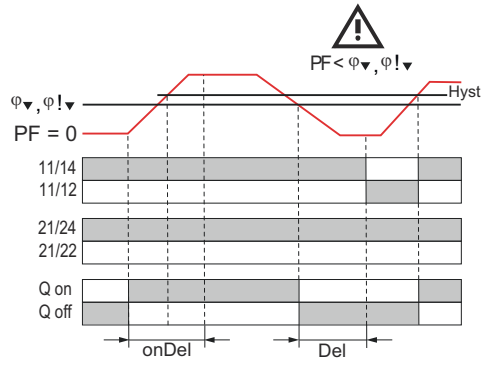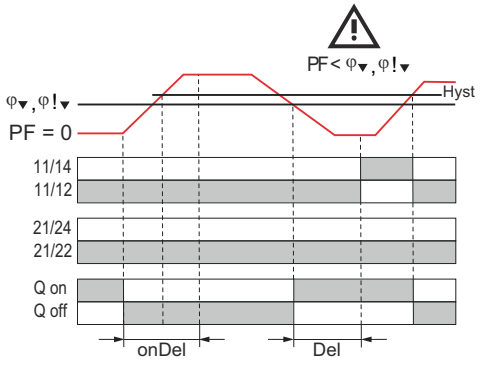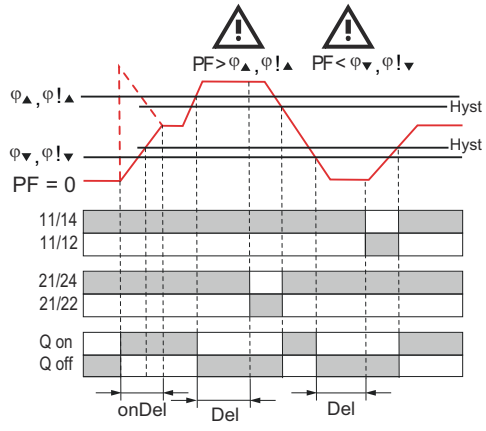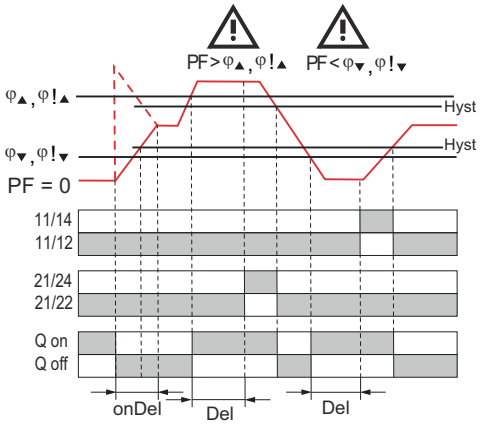	Memory = no **Relay switching response = NC (closed-circuit principle)**	**Memory = no** **Relay switching response = NO (open-circuit principle)**
φ▲ φ▼ = off		
φ▲ = off φ▼		
φ▲ φ▼		

φ = currently set value for cos φ

PF = power factor = set threshold for cos φ

9.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3UG4841 cos phi and active current monitoring relays:

Table 9-2 Parameter information, 3UG4841 cos phi and active current monitoring relay

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for undershoot (I_{res}▼)	0.2 A or OFF	10.0 A or OFF	0.1 A	1 A
"RUN" / IO-Link	Threshold for overshoot (I_{res}▲)	0.2 A or OFF	10.0 A or OFF	0.1 A	3 A
"RUN" / IO-Link	Warning threshold for undershoot (I_{res}!▼)	0.2 A or OFF	10.0 A or OFF	0.1 A	1 A
"RUN" / IO-Link	Warning threshold for overshoot (I_{res}!▲)	0.2 A or OFF	10.0 A or OFF	0.1 A	3 A
"RUN" / IO-Link	Threshold for undershoot (φ▼)	0.01 or OFF	0.99 or OFF	0.01	0.2
"RUN" / IO-Link	Threshold for overshoot (φ▲)	0.01 or OFF	0.99 or OFF	0.01	0.5
"RUN" / IO-Link	Warning threshold for undershoot (φ!▼)	0.01 or OFF	0.99 or OFF	0.01	0.2
"RUN" / IO-Link	Warning threshold for overshoot (φ!▲)	0.01 or OFF	0.99 or OFF	0.01	0.5
"SET" / IO-Link	Hysteresis (Hyst)	0.1 A or OFF	3.0 A or OFF	0.01 A	0.5 A
IO-Link	Hysteresis (cosφ)	0.1 or OFF	0.2 or OFF	0.01	0.1
"SET" / IO-Link	ON-delay time (onDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
IO-Link	ON-delay time (at Power ON)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at manual reset)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at restart)	Disabled	Enabled	--	Disabled
"SET" / IO-Link	Tripping delay time (φ▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (φ▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"SET" / IO-Link	Tripping delay time (I▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (I▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s[1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Reset response (Mem)	local: no = Autoreset IO-Link: Automatic	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Autoreset IO-Link: Automatic
"SET" / IO-Link	Relay switching response (closed-circuit principle NC / open-circuit principle NO)	Closed-circuit principle (NC) or Open-circuit principle (NO)		--	Closed-circuit principle (NC)
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Analog value coding	0 (Disabled)	255	--	43

[1)] up to 99.9 s; at values > 99.9 s, the increment is 1 s

Note

If a time is set via IO-Link within the value range 100.0 to 999.9 s with one decimal place, the display will show only the value without the decimal place.

Note

The monitoring mode "Overshoot" or "Undershoot" is defined with the setting OFF at the threshold for undershoot or overshoot.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on those parameters of the 3UG4841 cos phi and active current monitoring relays that can be set via IO-Link in Chapter "3UG4841 cos phi and active current monitoring relay (Page 291)".

Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

9.5 Diagnostics

9.5.1 Indication on the display

Display information

The display is divided into three different areas.



① Current measuring value / cos phi measuring value or error symbol
② Type of monitoring
③ Symbols of the change-over contacts

Meaning of the information on the display


Note

Displays in the event of an error

The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display area	Symbol	Meaning
①	U<30	Measured value is below the range that can be measured.
①	U▲▲▲	Measured value is above the range that can be measured.
①	I<0,2	Measured value is below the range that can be measured.
①	I▲▲▲	Measured value is above the range that can be measured.
①	cosφ <-> ▲▲▲	When the maximum measurable power factor is exceeded.
①	I <-> 5.0A cosφ <-> 0.83	I and the currently measured active current value or cos-phi value are displayed alternately. • Not flashing: Measured value in the correct range or delay time is running • Flashing: Threshold overshot or undershot, delay time expired, relay has switched
①	P.ERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1)]
①	OK	Device is in Communication-Mode (IO-Link)
①	ERR	IO-Link communication interrupted

Display area	Symbol		Meaning
①			Device is in SIO-Mode
②			Monitoring for overshoot (φ▲ / I_{res}▲)
②			Monitoring of the warning threshold for overshoot (φ!▲ / I_{res}!▲) (only visible if the parameter "Threshold for overshoot" is set to OFF.)
②			Monitoring for undershoot (φ▼ / I_{res}▼)
②			Monitoring of the warning threshold for undershoot (φ!▼ / I_{res}!▼) (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②			Window monitoring (φ▲ and φ▼ / I_{res}▲ and I_{res}▼)
②	◄		Measured values are in the correct range.
②	▲		A measured value overshoot has occurred. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲◄		Alternate flashing: The measured value has risen above the set warning threshold.
②	▼		A measured value undershoot has occurred • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼◄		Alternate flashing: A measured value has fallen below the set warning threshold.
③		φ▼ / I_{res}▼, φ!▼ / I_{res}!▼	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open
		φ▲ / I_{res}▲, φ!▲ / I_{res}!▲	
③		φ▼ / I_{res}▼, φ!▼ / I_{res}!▼	• Not flashing: Relay contact 21/22 open, relay contact 21/24 closed • Flashing: Delay time (ON delay or tripping delay) running • Masked out: Relay contact 21/22 closed, relay contact 21/24 open
		φ▲ / I_{res}▲, φ!▲ / I_{res}!▲	

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of output relays K1 and K2 in the Chapter "Functionality (Page 139)".

9.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

The 3UG4841 cos phi and active current monitoring relays with IO-Link connection provide a facility for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 9-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 144)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold value for overshoot (power factor)	The set cos phi value is higher than the set threshold for overshoot.	• Reduce the cos phi value. • Set a higher threshold.
Value below (warning) threshold for undershoot (power factor)	The set cos phi value is lower than the set threshold for undershoot.	• Increase the cos phi value. • Set a lower threshold.
Value above (warning) threshold for overshoot (active current)	The set active current value is higher than the set threshold for overshoot.	• Reduce the active current. • Set a higher threshold.
Value below (warning) threshold for undershoot (active current)	The set active current value is lower than the set threshold for undershoot.	• Increase the active current. • Set a lower threshold.
Measured value is outside the range that can be measured	• The measured voltage is above or below the measurable range. • The measured apparent current is above or below the measurable range. • The calculated power factor is 1 (pure non-inductive load).	• Reduce the current. • Increase the current. • Reduce the voltage. • Increase the voltage. • Connect a load with an inductive or capacitive component.

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 9-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	PERR
Self-test error/internal error	0x5000	x	—	x	ERR
Threshold value for overshoot exceeded (cos phi value)	0x8C10	x	—	x	▲
Threshold value for undershoot violated (cos phi value)	0x8C30	x	—	x	▼

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Threshold for overshoot exceeded (active current value)	0x8C10	x	—	x	▲
Threshold for undershoot violated (active current value)	0x8C30	x	—	x	▼
Measured value is outside the range that can be measured	0x8C20	—	—	—	• U<30 or U▲▲▲ • I<0,2 or I▲▲▲ • cosφ <-> ▲▲▲

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process input image" (see "3UG4841 cos phi and active current monitoring relay (Page 291)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 293)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 293)").

x: Bit set

○: Not relevant

9.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys ▲▼ simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

9.6 Circuit diagrams

9.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4841

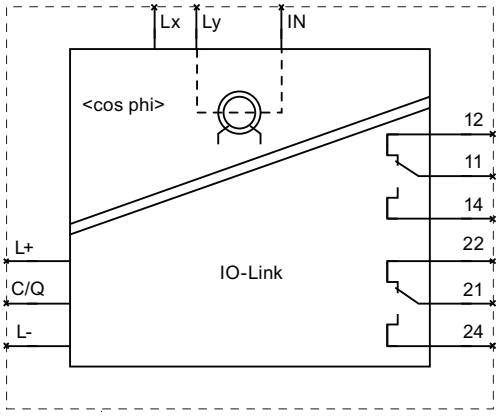


Figure 9-1 3UG4841 cos phi and active current monitoring relay for IO-Link

9.6.2 Typical circuit diagrams

3UG4841

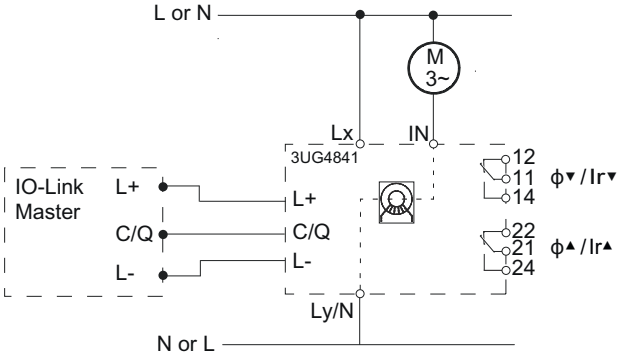


Figure 9-2 Cos phi and active current monitoring for single-phase motors

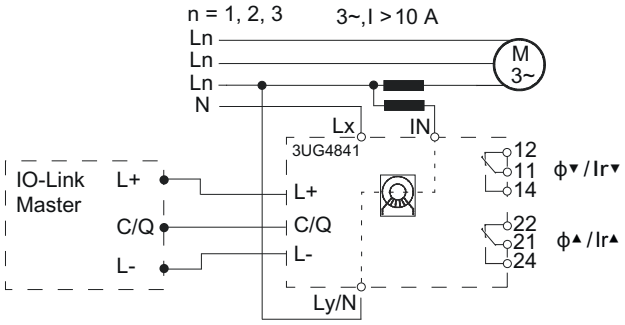


Figure 9-3 Cos phi and active current monitoring for three-phase motors with transformer for currents (with neutral conductor)

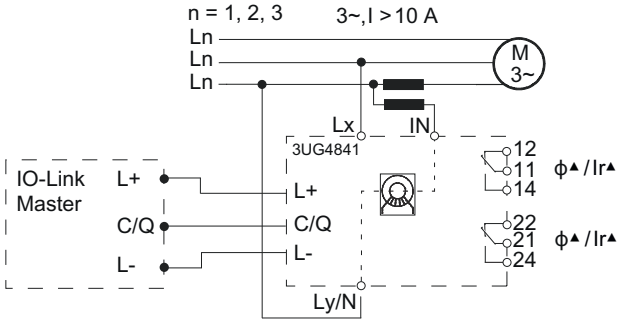


Figure 9-4 Cos phi and active current monitoring for three-phase motors with transformers for currents

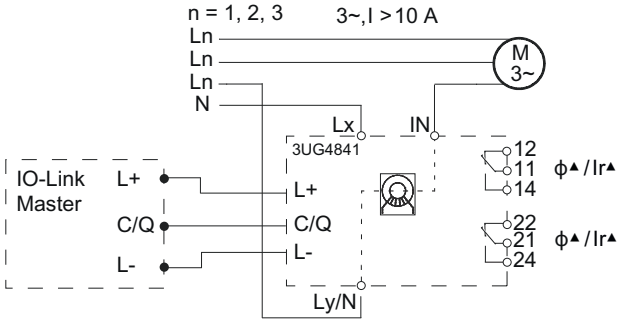


Figure 9-5 Cos phi and active current monitoring for three-phase motors (with neutral conductor)

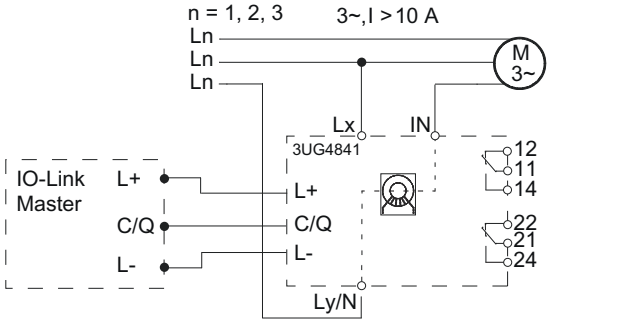


Figure 9-6 Cos phi and active current monitoring for three-phase motors

9.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

3UG4851 speed monitoring relays

10

10.1 Application areas

Application areas

The speed monitoring relays are used, for example, in the following applications:


Table 10-1 Application areas of the speed monitoring relays

Function	Application
• Monitoring for overload/underload	• Conveyor belt (monitoring transported goods for completeness, for example) • Milling machine • Turning machine • Slippage or tear of a drive belt

The monitoring relays can also be used for all functions where a continuous pulse signal is to be monitored (e.g. belt travel monitoring, completeness checking, pass monitoring, or cycle time monitoring).

10.2 Operator controls and connection terminals

Front view / terminal labeling

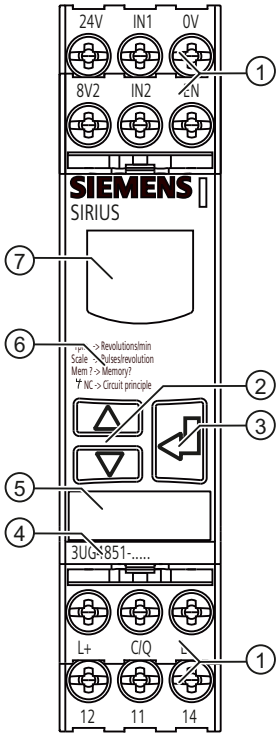Front view	Description	
	**Position digits**	
	①	Terminal block (removable): Connection is possible using screw terminals or spring-loaded terminals.
	②	Arrow keys for menu navigation
	③	SET key for menu navigation
	④	Device article number
	⑤	Label
	⑥	Legend for menu
	⑦	Display for parameterization, actual-value indication, and diagnostics
	Terminal labels	
	L+	Supply voltage for IO-Link
	C/Q	Communication signal / switching signal
	L-	Ground IO-Link
	24V	Supply voltage for pulse input IN1 (24 V / max. 50 mA)
	IN1	Pulse input for pnp-switching three-wire sensor (for pulses 0 V DC/ +24 V)
	0V	Supply voltage for pulse input IN1 (0 V / max. 50 mA)
	EN	Enable
	IN2	Pulse input for two-wire NAMUR sensor or mechanical contact
	8V2	Supply voltage for pulse input IN2
	12	Output relay K1 CO contact NC contact
	11	Output relay K1 CO contact root
	14	Output relay K1 CO contact NO contact

You can find additional information on the connection terminals and the permissible conductor cross-sections in the Chapter "Connection systems (Page 31)".

You can find information on connecting in the Chapter "Internal circuit diagrams (Page 167)".

10.3 Functionality

General functionality

Depending on the setting, the 3UG4851 speed monitoring relays monitor a speed in revolutions per minute (rpm = revolutions per minute) for overshoot (rpm▲), undershoot (rpm▼) or in window monitoring (rpm▲ and rpm▼).

The devices are supplied via the supply voltage IO-Link (L+) and ground IO-Link (L-) or via an external 24 V DC voltage source.

The 3UG4851 speed monitoring relays have a display and are parameterized with three keys. The devices can also be parameterized via IO-Link and transfer the measured speed values and error messages to a controller.

You will find the setting ranges and factory settings of the 3UG4851 speed monitoring relays in Chapter "Operation (Page 161)."

You can find a description of the individual parameters in the Chapter "Parameters (Page 203)"

You can find the full data sets in the Chapter "Process data and data sets (Page 233)".

Monitoring according to the principle of period duration measurement

Speed monitoring functions according to the principle of period duration measurement.

In the speed monitoring relay, the time interval between two consecutive rising edges of the pulse encoder is measured and compared with the minimum and/or maximum permissible period duration calculated from the set threshold values for the speed. Period duration measurement already detects a speed deviation after two pulses.

By using up to ten pulse encoders distributed simultaneously across the range, the period duration, and thus the response time, can be reduced. By taking account of the number of sensors in the speed monitoring relay, the speed continues to be displayed in revolutions per minute.

The number of pulses supplied by the pulse encoder can be defined with the help of entering a scaling value (Scale). This allows the revolutions per minute to be read direct on the display.

The speed monitoring relay has two different pulse inputs. Only one of these may be used! At the terminal IN1, a pnp-switching three-wire sensor for 0 V / +24 V DC pulses can be connected. This is supplied from the monitoring relay via terminals 0V and 24V / with up to 50 mA. Use of a mechanical pulse contact with an external DC supply of 4.5 to 30 V is also permissible at terminal IN1.

Note

To detect the edges reliably, the pulses and pauses between pulses of the pulse encoders used must be applied for at least 5 ms. A pause is detected when the voltage level < 1 V. A pulse requires a minimum value of 4.5 V.

Alternatively, a two-wire NAMUR sensor supplied from terminal 8V2, or a mechanical contact, can be connected at terminal IN2.

Startup delay

To be able to start a drive, the output relay K1 switches to the correct state during the ON-delay time depending on the selected open-circuit principle or closed-circuit principle, even if the speed is still under the set value.

The ON-delay time is started either by switching on the supply voltage or, if the supply voltage is present, by actuating the relevant NC contact (e.g. auxiliary contact of a contactor).

Tripping delay

The set tripping delay time (Del) begins, and the symbol of the output relay K1 flashes if the measured speed overshoots or undershoots the corresponding set threshold after the ON-delay time (onDel) has stopped. After expiry of this time, the output relay K1 changes the switching state. On the display, the current measuring value and the symbol for undershoot or overshoot flash.

Operating mode with/without enable contact

In the operating mode without enable contact (terminal EN = Enable not connected), the output relay K1 responds when the supply voltage is switched in accordance with the set closed-circuit principle NC or open-circuit principle NO (relay control is inverted to the closed-circuit principle NC), and the ON-delay time (onDel) is started, provided the lower threshold is not at OFF. If the speed reaches the lower threshold value plus the set hysteresis during this time, the ON-delay time is stopped and normal monitoring begins. If this value has not yet been reached after expiry of the ON-delay time, the output relay K1 switches to the fault state depending on the selected relay switching response.

For the functioning of the operating mode with enable contact (terminal EN = Enable is connected with an isolated NC contact with terminal 24V), a supply voltage must be present at the monitoring relay. Only when this NC contact is actuated will the ON-delay time (onDel) and the drive (with a second contact, for example) be started.








You can find the switching states of the output relay K1 below in the section "Function diagrams" and in the Chapter "Diagnostics (Page 163)".

SIO-Mode

The monitoring relays have a connection C/Q to IO-Link. If the IO-Link connection is not used for communication via IO-Link, the 3UG4851 speed monitoring relays work in standard I/O mode (SIO-Mode). In this mode, terminal C/Q can be used as a semiconductor output that switches on a violation of the warning threshold for undershoot or overshoot.

- Q off: 24 V DC supply voltage present.
- Q on: The output has a high resistance.

Function diagrams
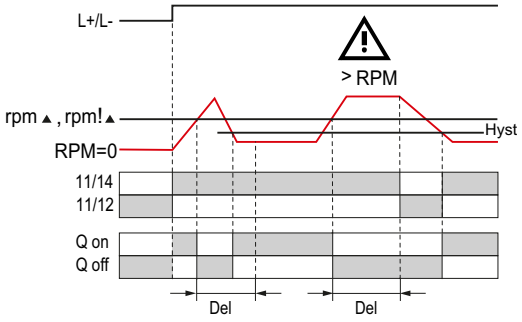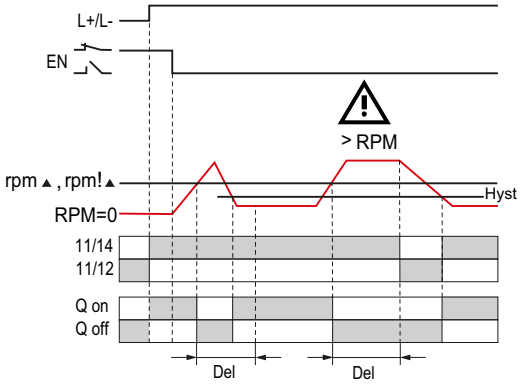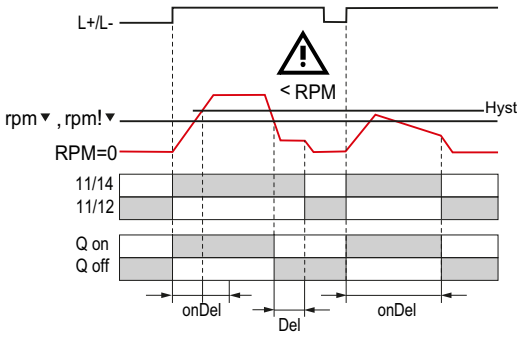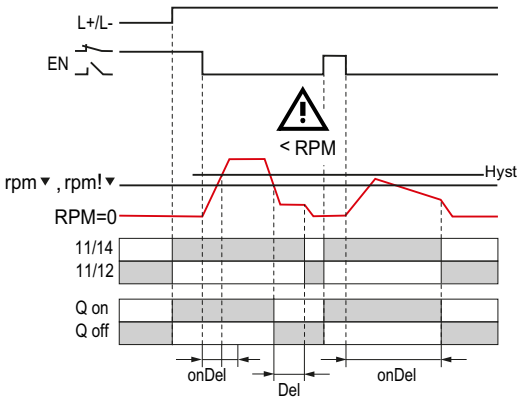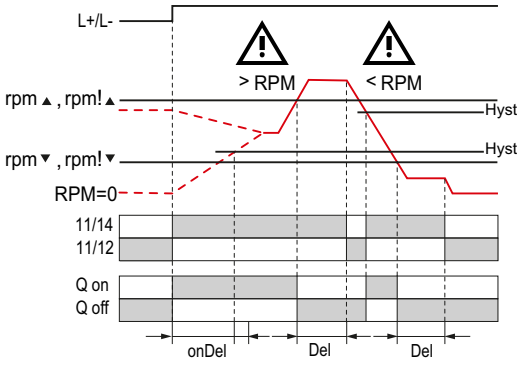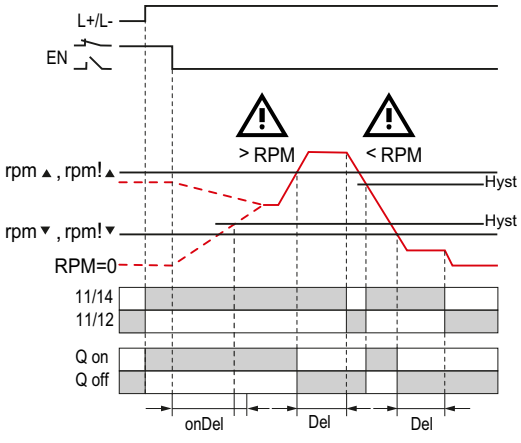
<table>
<tr><th></th><th colspan="2">Memory = no
Relay switching response = NC (closed-circuit principle)</th></tr>
<tr><th></th><th>Without Enable input</th><th>With Enable input</th></tr>
<tr><td>rpm▲
rpm▼= off
</td><td>
</td><td>
</td></tr>
<tr><td>rpm▲= off
rpm▼
</td><td>
</td><td>
</td></tr>
<tr><td>rpm▲
rpm▼
</td><td>
</td><td>
</td></tr>
</table>

RPM = currently measured speed

rpm = set limit for the speed

Note

The relay control for the open-circuit principle NO is inverted to the represented function diagrams in the closed-circuit principle NC after application of the supply voltage U_S.

10.4 Operation

Parameters

The devices can be parameterized either locally via the display and the three keys, or via IO-Link. You can find further information on configuring via IO-Link in the Chapter "Configuring the IO-Link (Page 193)".



Parameter information

The table below shows the settable parameter information of the 3UG4851 speed monitoring relays:

Table 10-2 Parameter information, 3UG4851 speed monitoring relays

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"RUN" / IO-Link	Threshold for undershoot (rpm▼)	0.1 or OFF	2200 or OFF	0.1 [2)]	800
"RUN" / IO-Link	Threshold for overshoot (rpm▲)	0.1 or OFF	2200 or OFF	0.1 [2)]	1400
"RUN" / IO-Link	Warning threshold for undershoot (rpm!▼)	0.1 or OFF	2200 or OFF	0.1 [2)]	800
"RUN" / IO-Link	Warning threshold for overshoot (rpm!▲)	0.1 or OFF	2200 or OFF	0.1 [2)]	1400
"SET" / IO-Link	Scaling factor (Scale)	1	10	1	1
"SET" / IO-Link	Hysteresis (Hyst)	0.1 or OFF	99.9 or OFF	0.1	50
"SET" / IO-Link	ON-delay time (onDel)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s [1)] IO-Link: 0.1 s	Disabled (0 s)
IO-Link	ON-delay time (at Power ON)	Disabled	Enabled	--	Enabled
IO-Link	ON-delay time (at manual reset)	Disabled	Enabled	--	Enabled
"SET" / IO-Link	Tripping delay time (▼Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s [1)] IO-Link: 0.1 s	Disabled (0 s)
"SET" / IO-Link	Tripping delay time (▲Del)	0 s	local: 999 s IO-Link: 999.9 s	local: 0.1 s [1)] IO-Link: 0.1 s	Disabled (0 s)

Menu level / IO-Link	Parameters	Setting range		Increment	Factory setting
		Minimum value	Maximum value		
"SET" / IO-Link	Reset response (Mem)	local: no = Auto-reset IO-Link: Auto	local: yes = Hand-RESET IO-Link: Manual	--	local: no = Auto-reset IO-Link: 1
"SET" / IO-Link	Relay switching response (closed-circuit principle NC / open-circuit principle NO)	Closed-circuit principle (NC) or Open-circuit principle (NO)		--	Closed-circuit principle (NC)
IO-Link	Group diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Group error diagnostics	Disabled	Enabled	--	Enabled
IO-Link	Local threshold change	Disabled	Enabled	--	Enabled
IO-Link	Local parameter change	Disabled	Enabled	--	Enabled
IO-Link	Local reset	Disabled	Enabled	--	Enabled
IO-Link	Retentive error memory	Disabled	Enabled	--	Disabled
IO-Link	Analog value coding	0 (Disabled)	255	--	13

1) up to 99.9 s; at values > 99.9 s, the increment is 1 s

2) up to 99.9 V; at values > 99.9 V, the increment is 1 V

Note

If a time is set via IO-Link within the value range 100.0 to 999.9 s with one decimal place, the display will show only the value without the decimal place.

Note

The monitoring mode "Overshoot" or "Undershoot" is defined with the setting OFF at the threshold for undershoot or overshoot.

The parameters are described in the Chapter "Parameters (Page 203)".

You will find further information on the parameters of the 3UG4851 speed monitoring relays that can be set via IO-Link in the Chapter "Process data and data sets (Page 233)".


Menu-based operation is described in the Chapter "Menu-based operation (Page 50)".

10.5 Diagnostics

10.5.1 Indication on the display

Display information

The display is divided into three different areas.




① Speed measured value or fault symbol
② Type of monitoring
③ Symbol of the change-over contact

Meaning of the information on the display

Note
Displays in the event of an error
The symbols on the display (① and ②) flash to indicate an error.

The following states and errors are shown on the display:

Display area	Symbol	Meaning
①	- - - -	Measured value is outside the range that can be measured.
①	1100	Currently measured speed is displayed. • Not flashing: Speed in the correct range or delay time is running • Flashing: Threshold overshot or undershot, delay time expired, relay has switched
①	PERR	Invalid parameter
①	ERR	Self-test error/internal error
①		IO-Link communication is being established [1]
①	OK	Device is in Communication-Mode (IO-Link)
①	ERR	IO-Link communication interrupted
①	SIO	Device is in SIO-Mode
②		Monitoring for speed overshoot
②		Monitoring of the warning threshold for speed overshoot (only visible if the parameter "Threshold for overshoot" is set to OFF.)
②		Monitoring for speed undershoot

Display area	Symbol		Meaning
②			Monitoring of the warning threshold for speed undershoot (only visible if the parameter "Threshold for undershoot" is set to OFF.)
②			Window monitoring (monitoring for speed overshoot and undershoot)
②	◄		Speed is in the correct range.
②	▲		A speed overshoot has occurred. • Not flashing: Threshold overshot, tripping delay running • Flashing: Threshold overshot, tripping delay expired, relay has switched
②	▲ ◄		Alternate flashing: The speed has risen above the set warning threshold.
②	▼		A speed undershoot has occurred. • Not flashing: Threshold undershot, tripping delay running • Flashing: Threshold undershot, tripping delay expired, relay has switched
②	▼ ◄		Alternate flashing: The speed has fallen below the set warning threshold.
③		rpm▲, rpm!▲	• Not flashing: Relay contact 11/12 open, relay contact 11/14 closed • Flashing: Delay time (ON delay or tripping delay) running • Masked out: Relay contact 11/12 closed, relay contact 11/14 open
		rpm▼, rpm!▼	

[1] If this symbol is repeated for an extended period, the connection to the IO-Link master has been interrupted during communication buildup. Perform a restart of the monitoring relay.

Note

The value shown on the display always corresponds to the currently measured value even if the displayed value is flashing because a threshold has been overshot or undershot. The symbol for a threshold overshoot or undershoot indicates the fault causing this if manual RESET (Mem = yes) is set. In this way, the user can check before a Reset whether the cause of error has been remedied and a Reset is likely to result in a successful outcome.

You can find more information on the switching response of the output relay K1 in the Chapter "Functionality (Page 157)".

10.5.2 Diagnostics via IO-Link

Diagnostics via IO-Link

The 3UG4851 speed monitoring relays with IO-Link connection provide an option for diagnostics via IO-Link.

The manufacturer-specific diagnostics listed in the table are reported via the diagnostics mechanism of IO-Link. The table below provides information on possible causes and remedial measures:

Table 10-3 Possible causes and remedial measures

Diagnostics and messages	Possible cause	Possible remedial measure
Invalid parameter	The set parameter is invalid.	Specify a parameter in accordance with the parameter table in the Chapter "Operation (Page 161)".
Self-test error/internal error	Fault in internal test.	Return the device to the manufacturer.
Value above (warning) threshold for overshoot	The set speed is higher than the set threshold for overshoot.	• Reduce the speed. • Set a higher threshold.
Value below (warning) threshold for undershoot	The set speed is lower than the set threshold for undershoot.	• Increase the speed. • Set a lower threshold.
Measured value is outside the range that can be measured	The measured speed is above or below the measurable range.	• Reduce the speed. • Increase the speed

The table below indicates how the manufacturer-specific diagnostics are reported:

Table 10-4 Diagnostics and messages

Diagnostics and messages	IO-Link event code [1]	PII [2]		Data set 92	Display information
		GE [3]	GW [4]		
Invalid parameter	0x6320	x	—	x	P.ERR
Self-test error/internal error	0x5000	x	—	x	ERR
Threshold for overshoot exceeded	0x8C10	x	—	x	▲
Threshold for undershoot violated	0x8C30	x	—	x	▼
Measured value is outside the range that can be measured	0x8C20	—	—	x	- - - -

[1] The manufacturer-specific diagnostic events listed in the table are reported to the IO-Link master via the diagnostics mechanism of IO-Link.

[2] With the "process input image" (see "3UG4851 speed monitoring relays (Page 299)"), you can determine via the group error (GE) bit or general warning (GW) bit in the user program whether detailed information on diagnostics or messages is present in diagnostic data set 92. If bit (= 1) is set, you can obtain detailed information on what caused a "group error" or "general warning" by reading data set 92.

[3] GE = Group error: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 301)").

[4] GW = General warning: You can find detailed information in diagnostics data set 92 (see the Chapter "System commands - data set (index) 2 (Page 301)").

x: Bit set

○: Not relevant

10.5.3 Reset

Reset

Resetting of the outputs is dependent on the "Reset response" parameter (see the Chapter "Reset response (Page 203)"). On the 3UG48 monitoring relays, the parameter can also be set via IO-Link.

The following settings can be selected:

- Automatic reset (Mem = no)
  The device is reset automatically as soon as a previously occurring error has been dealt with.
- Manual RESET (Mem = yes)
  To reset digitally adjustable devices, you must press both arrow keys simultaneously for more than 2.5 s after the cause of the error has been rectified. If the cause of the error has not been removed, a new error message appears immediately. Alternately, the devices (with deactivated retentive error memory) can be reset by switching the supply voltage on and off.

Note

The outputs can also be reset via the process image of the outputs (PIQ) by setting the "Reset" control command or using the corresponding system command (see the Chapter "Process data and data sets (Page 233)").

Note

With the "Local reset" parameter that can be set via the IO-Link, resetting locally on the device can be disabled.

Note

The warning threshold is always reset by autoreset.

10.6 Circuit diagrams

10.6.1 Internal circuit diagrams

Internal circuit diagrams 3UG4851

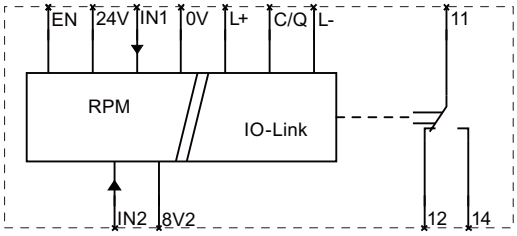


Figure 10-1 3UG4851 speed monitoring relay for IO-Link

10.6.2 Typical circuit diagrams

3UG4851

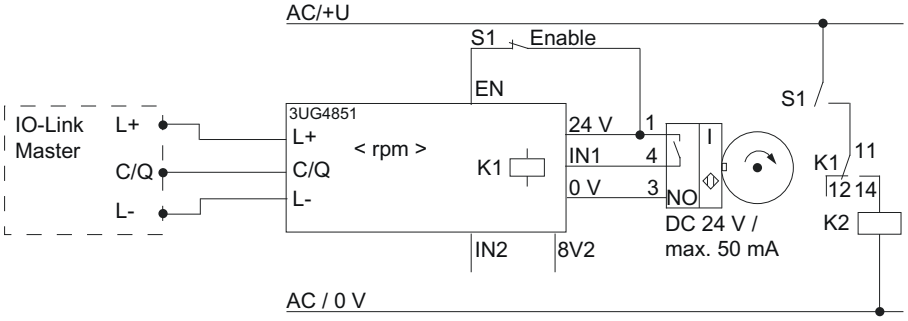


Figure 10-2 Speed monitoring with Enable input

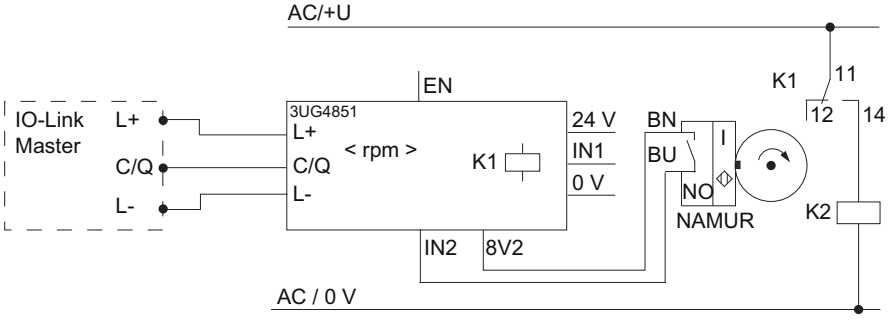


Figure 10-3 Speed monitoring without Enable input

10.7 Technical data

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

Accessories

11

11.1 Accessories for 3RR24 current monitoring relays

11.1.1 Sealable cover


Description

A sealable cover for use with all sizes (3RR2940) is available for the digitally adjustable 3RR24 current monitoring relays.

The sealable cover is used to protect the keys of the digitally adjustable current monitoring relays against unauthorized or unintentional manipulation.

Mounting

The diagram below shows an example mounting scenario based on mounting the sealable cover on the 3RR21 current monitoring relay with digital setting, size S0. The mounting sequence for the sealable cover for size S00 is exactly the same as that for size S0.

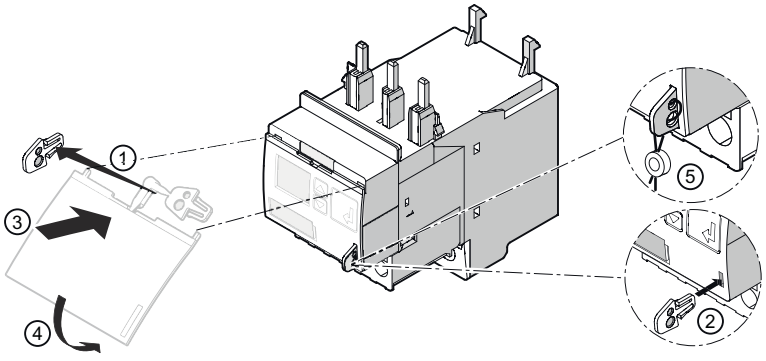

① Remove the key from the cover.
② Insert the key into the designated opening.
③ Attach the hooks on the cover to the openings on the current monitoring relay.
④ Tilt the cover down.
⑤ Lock the cover with the key connector to secure it against unauthorized removal.

Figure 11-1 Mounting the sealable cover on the 3RR2 current monitoring relay

11.1.2 Terminal support for stand-alone assembly

Description

For a stand-alone assembly or if an overload relay is being used at the same time, adapters for stand-alone installation are available for separate DIN rail mounting or screw mounting.

The accessories are exactly the same as the accessories for the 3RU21 thermal overload relay and the 3RB3 solid-state overload relay.


Table 11-1 Stand-alone assembly of the 3RR2 current monitoring relay

Size	Connection system	Terminal support for stand-alone assembly
S00	Screw-type	3RU2916-3AA01
	Spring-loaded	3RU2916-3AC01
S0	Screw-type	3RU2926-3AA01
	Spring-loaded	3RU2926-3AC01
S2	Screw-type	3RU2936-3AA01

Mounting

The terminal supports can be snapped onto 35 mm DIN rails according to DIN EN 50022. They can also be screw-mounted.

The figure below shows how the terminal support for stand-alone assembly is mounted and disassembled, based on the example of an analog setting current monitoring relay.

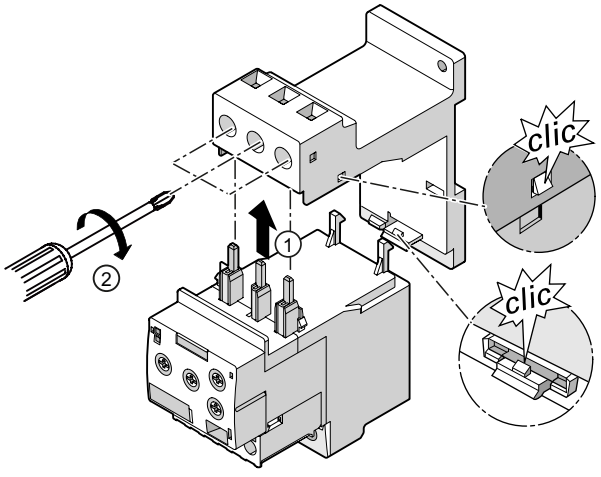


① Guide the current monitoring relay into the terminal support from below.

② Tighten the screws on the terminal support with a Pozidriv size 2 (S00) or Pozidriv size 3 (S0) screwdriver (tightening torque 0.8 to 1.2 Nm).

Check that the cable is clamped tight.


Figure 11-2 Mounting the terminal support (screw-type connection technology in the main circuit)

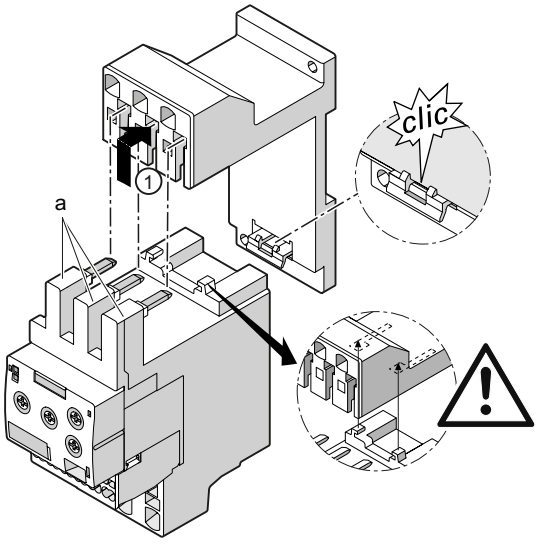

① Insert the contacts (a) into the central opening of the main terminals on the terminal support, with the contacts flush to the right. Make sure that the guide tabs are inserted into the designated slots on the terminal support.


Figure 11-3 Mounting the terminal support (spring-loaded connection technology in the main circuit)

Disassembly

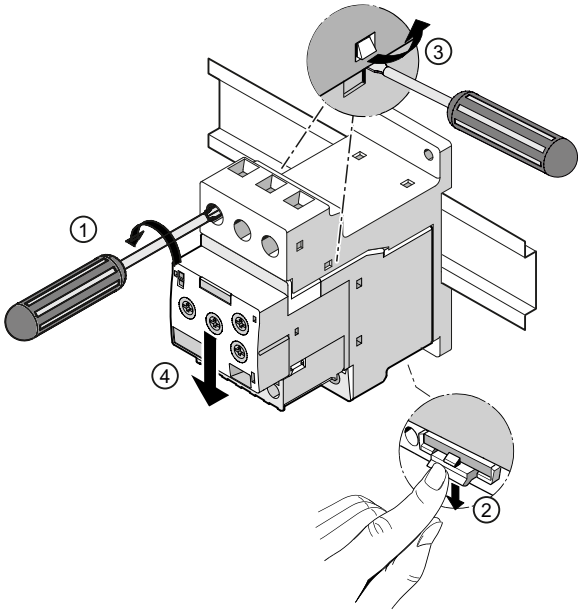

① Undo the screws on the main conductor terminals.
② Release the current monitoring relay by pushing down the clip on the underside of the terminal support.
③ Use a screwdriver to dislodge the terminal support from the current monitoring relay.
④ Pull the current monitoring relay down and away from the contactor.

Figure 11-4 Removing the terminal support (screw-type connection technology in the main circuit)

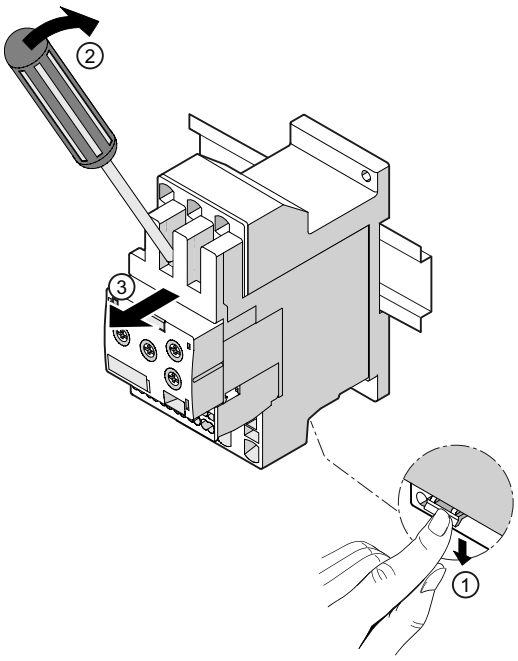

① Release the current monitoring relay by pushing down the clip on the underside of the terminal support.

② Position the screwdriver on the terminal support as shown in the figure. Carefully dislodge the current monitoring relay from the contactor.

③ Pull the current monitoring relay toward you and away from the terminal support.

Figure 11-5 Removing the terminal support (spring-loaded connection technology in the main circuit)

11.2 Accessories for 3UG48 monitoring relays

11.2.1 Sealable cover

Description

There is a uniform sealable cover for the monitoring relays with an overall width of 22.5 mm.

The sealable cover can be used to secure the actuators (rotary buttons, sliding switches, and keys) of the monitoring relays against unauthorized or unintentional manipulation.


Siemens also offers a sealable membrane (3TK2820-0AA00) for securing the monitoring relays with analog setting. The sealable membrane is affixed to the front of the device and secures rotary buttons and sliding switches against unintentional manipulation.

Note

The sealable membrane does not protect keys against unauthorized or unintentional manipulation.

Mounting

The figure below shows how to attach the 3RP1902 sealable cover to the monitoring relay.

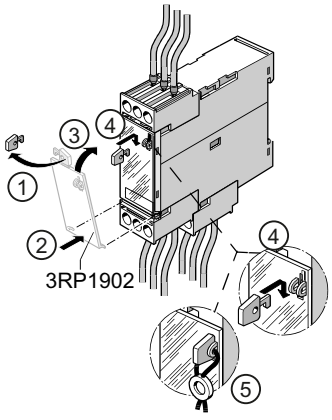

① Break off the clip on the sealable cover.
② Insert the sealable cover into the openings on the monitoring relay.
③ Fold up the sealable cover.
④ Insert the clip into the opening until it engages.
⑤ Seal the clip to secure it against unauthorized removal.

Figure 11-6 Mounting the sealable cover on the monitoring relay

11.2.2 Push-in lugs


Description

The 3RP1903 push-in lugs are available for the monitoring relays.

With the help of the push-in lugs, the monitoring relays can be secured with screws on a level surface (e.g. a wall). Two push-in lugs are required per device.

Mounting

The figure below shows how to attach the 3RP1903 push-in lugs to the monitoring relay.

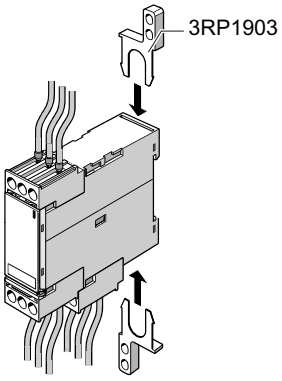

① Insert the push-in lugs at the top and bottom on the monitoring relay and tighten the push-in lugs with a screwdriver.

Figure 11-7 Attaching the push-in lugs on the monitoring relay

11.2.3 3UL23 residual current transformers for 3UG4825 monitoring relays

Description

3UL23 residual current transformers detect fault currents in machines and systems. Together with the residual current monitoring relay or the 3UF7510 SIMOCODE motor management and control device ground-fault module, residual current monitoring and ground-fault monitoring are possible. The 3UL23 residual current transformer is available in six sizes with bushing opening diameters of ∅ 35 mm, ∅ 55 mm, ∅ 80 mm, ∅ 110 mm, ∅ 140 mm, and ∅ 210 mm.


11.2.3.1 General information

Various circuit types with resulting fault currents

The following table shows various circuit types and the resulting fault currents in the event of a ground fault. Circuits 1 to 6 create pure AC fault currents or AC fault currents with a pulsating direct fault current component. This type of fault current can be detected by type A transformers in accordance with DIN VDE 0100-530, such as 3UL23 residual current transformers.

Note

3UG4.25 residual current monitoring relays are only suitable for use with 3UL23 residual current transformers.

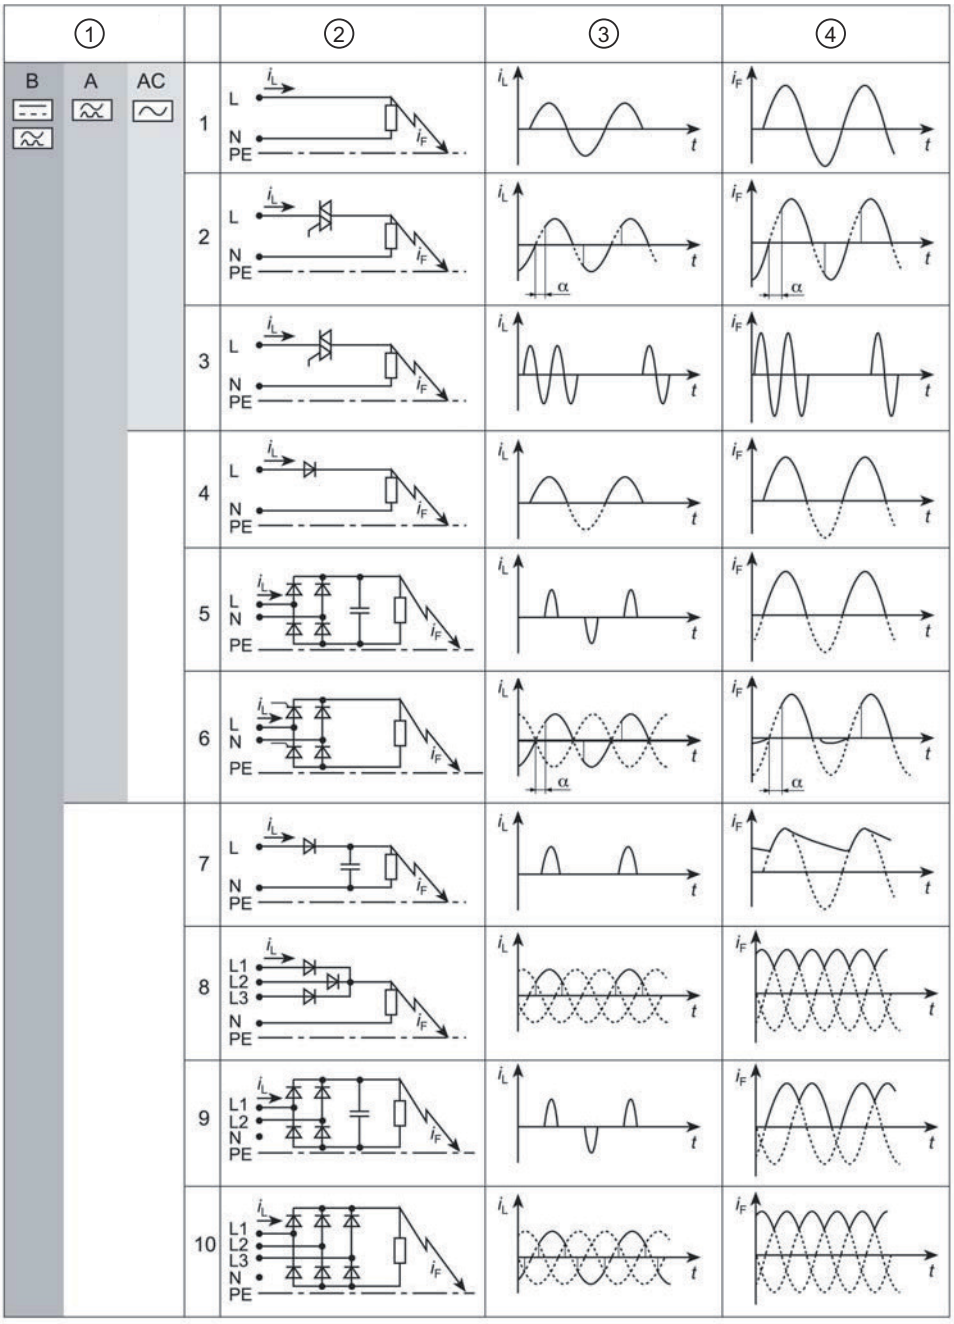

① Suitable FI type
② Circuit
③ Load current
④ Fault current

Figure 11-8 Possible fault current forms and suitable residual current devices

More information is available on the Internet (https://www.siemens.com/industrial-controls/support).

11.2.3.2 Installation specifications

Note

Please ensure strict adherence to the installation specifications for live cables.

⚠ WARNING

Open-circuit voltage may result in death, serious injury or material damage

The current transformer output is a constant current power supply. In accordance with U = R * I, the output voltage increases with an increasing resistance. If the connecting terminals of the current transformer are open, the output voltage may become high enough for you to put your life at risk or permanently damage the current transformer.

Avoid operating the unit when open. Operating a network for monitoring safely and without faults requires that the monitoring relay and the 3UL23 residual current transformer have been installed completely. It is absolutely necessary to short-circuit previously installed 3UL23 residual current transformers when the units are not connected to a monitoring relay.

3UL23 residual current transformer conductor cross-sections


In accordance with DIN EN 60204-1 "Safety of machinery", the current carrying capacity of conductors is limited depending on their cross-section. This results in the ideally suitable residual current transformer to be used as per the following table. Please observe potentially deviating, local installation specifications.

Order number	Bushing opening Diameter [mm]	Max. conductor cross-section 3P copper cable + N [mm²]	AWG [kcmil]	Rated current per phase [A]
3UL2302-1A	35	25	4	85
3UL2303-1A	55	50	1 / 0	150
3UL2304-1A	80	150	300	225
3UL2305-1A	110	240	500	400
3UL2306-1A	140	2 x 185	2 x 350/400	500
3UL2307-1A	210	2 x 240	2 x 500	630


3UL23 residual current transformers for external fault current monitoring

All live cables must be routed as close to the center of the transformer as possible. Any neutral conductor must be routed through the transformer. Grounded protective

conductors must not be routed through the transformer or need to be routed through the transformer in both directions.

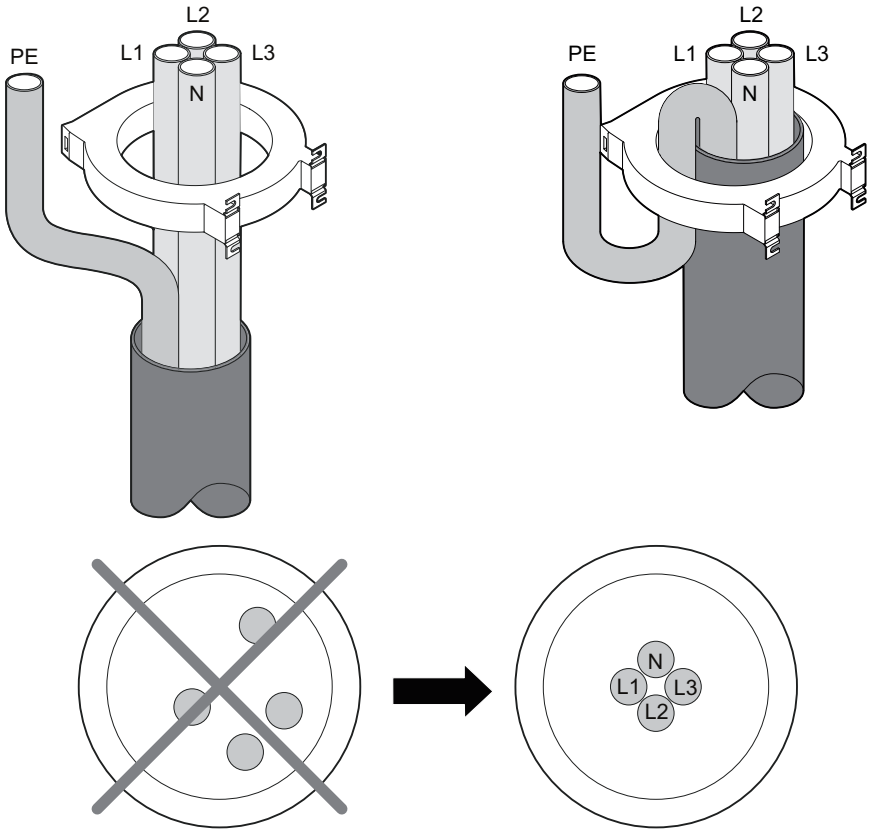


Route power cables around the residual current transformer in a straight line and ensure the area corresponds at minimum to the internal transformer diameter.

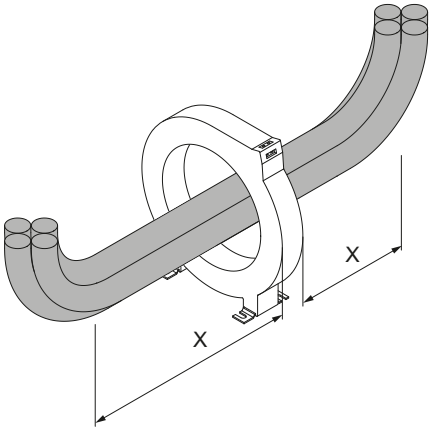

X > Ø residual current transformer

The internal transformer diameter must be at minimum twice the size of the power cable bundle diameter.

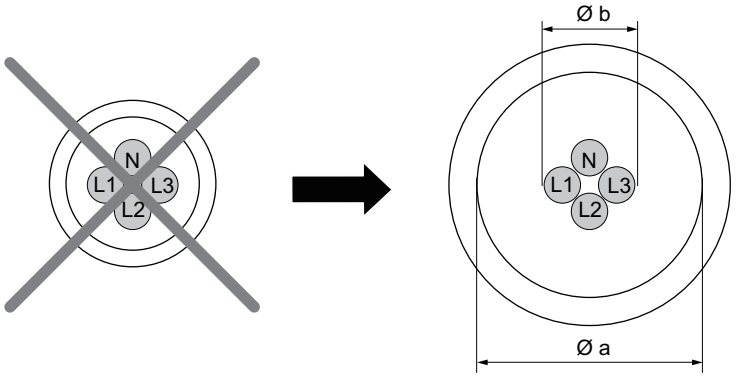

Ø a ≥ 2 x Ø b

Transformer connection

Transformer connecting cables must be twisted and not routed in parallel to live cables to protect from emitted interference. Keep the length of the connecting cables to a minimum. The resistance at the transformer connecting cable must not exceed 5 Ω to ensure correct fault current monitoring. This is ensured by the following limits given here as examples.

Conductor cross-section [mm²]	AWG/[kcmil]	Max. cable length [m]
0.5	20	70
1.0	18	140
1.5	16	210
2.5	14 / 12	300
4.0[1)]	10	550

1) only possible in the case of transformers with a 210 mm diameter

Note

We recommend using twisted cables.

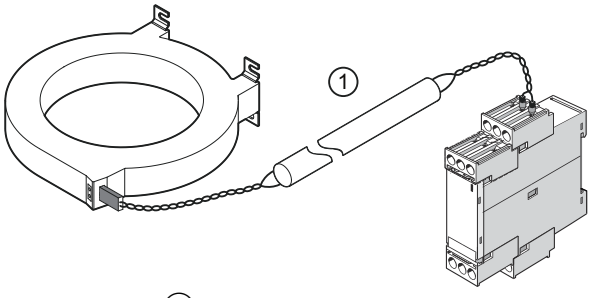


Figure 11-9 ① Maximum cable lengths (see table above)

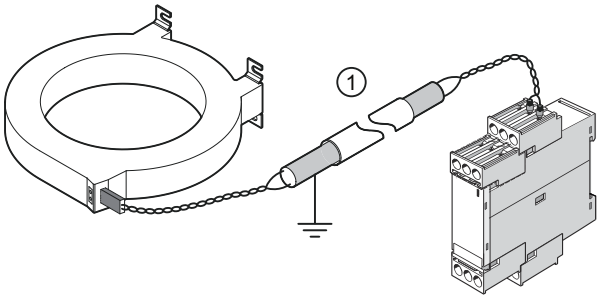


Figure 11-10 ① Length ≥ 10 m (shielded, twisted, grounded cables)

Note


Use shielded, twisted, and grounded cables for transformer connecting cables with a length of more than 10 m.

11.2.3.3 Potential for optimization

Potential for optimization in the event of extremely high currents, false tripping due to high starting currents or in environments with high EMC interference


1. Extend the ON-delay time to fade out fault currents measured during motor startup.
2. Extend the tripping delay time to prevent false tripping due to EMC interference.
3. Select a residual current transformer with a larger internal diameter. The reduced magnetic field strength that passes through the transformer due to the extended distance between power cables and transformer reduces the measuring accuracy but also the susceptibility to interference.

4. Route the transformer connecting cables at a greater distance to live cables
5. a) Using solid shield sleeves or wound shield sleeves made of soft iron sheet metal may be advisable to be able to monitor for small fault currents at extremely high rated currents. We recommend using a soft iron sheet metal shield with a thickness of 0.1 mm at minimum and fold it around the cable bundle several times so that the overall shield is 1 mm at minimum. The shielding sleeve length (L) must correspond to the internal diameter of the transformer used.

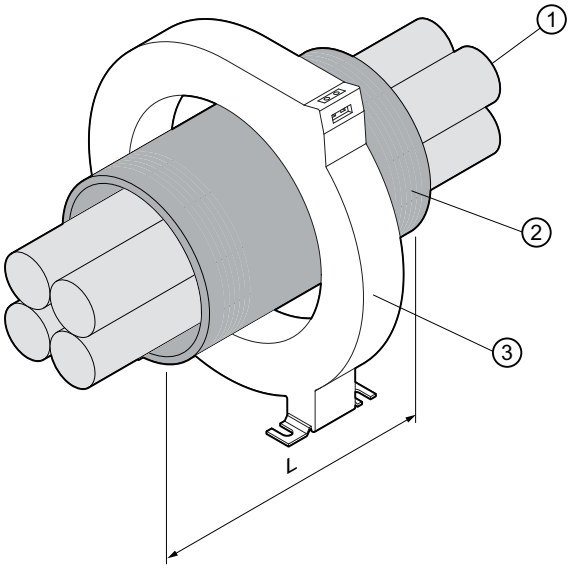

① Phase (and neutral conductor)
② Shield sleeve
③ Residual current transformer

b) A solid shield sleeve, e.g. turned from a normal, low-carbon tool steel must be precisely in contact with the internal ring of the residual current transformer. The wall thickness of the sleeve must be 1 mm at minimum, the length of the sleeve (L) must correspond to the internal diameter of the transformer used.

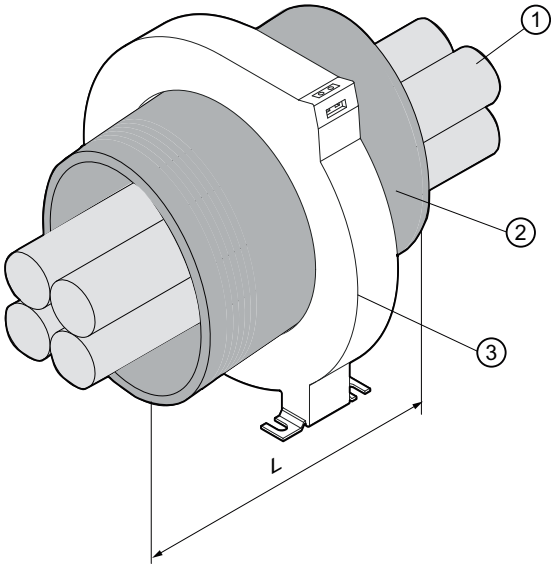

① Phase (and neutral conductor)
② Shield sleeve
③ Residual current transformer

11.2.3.4 Installation faults


For reasons of clarity, the representations show only the residual current transformer with the currents passing through it rather than the complete residual current monitoring unit and residual current transformer. If the vectorial sum of the currents passing through the residual current transformer does not equal zero, part of the current is bypassing the transformer to ground and the residual current monitoring relay triggers a warning or an alarm if the current is correspondingly high.

In some instances, false alarms may occur for no apparent reason. However, these represent installation faults.

The following examples demonstrate the most common installation faults.


Parallel connections of conductors

If several residual current monitoring relays are installed in one network, a conductor routed through several residual current transformers must not be connected to itself downstream of the transformer, as this would effectively represent a parallel connection of the conductor. This fault occurs particularly often with neutral conductors. This fault causes the currents to be distributed across the conductor. This means that the current flowing through the load to be monitored is no longer 100 % of the total current and all integrated monitoring relays measure fault currents.

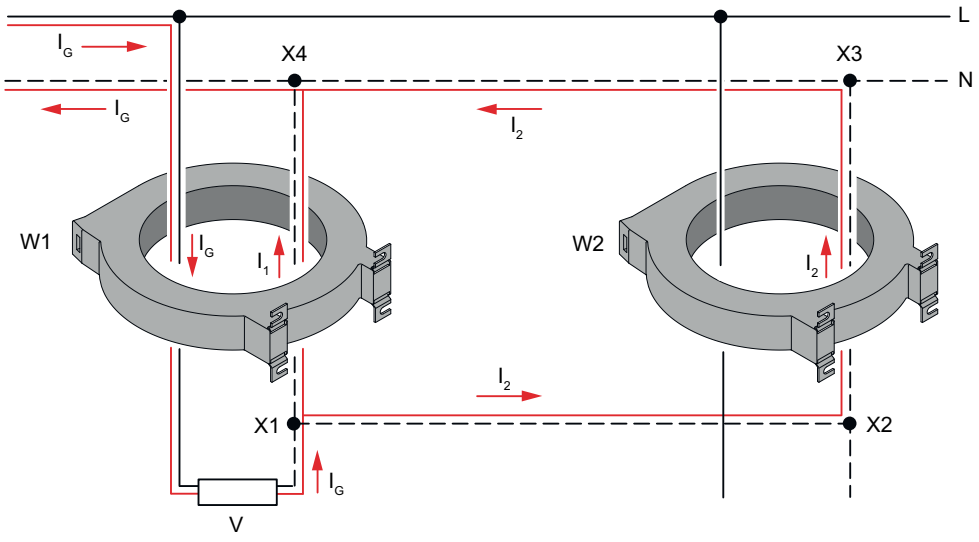


Mixing up conductors

In a network with several loads there is the risk that active conductors of loads that are to be separately monitored for fault currents can get mixed up. This fault leads to false tripping as the inflowing and outflowing currents are not always exactly the same strength, even if the loads are identical.

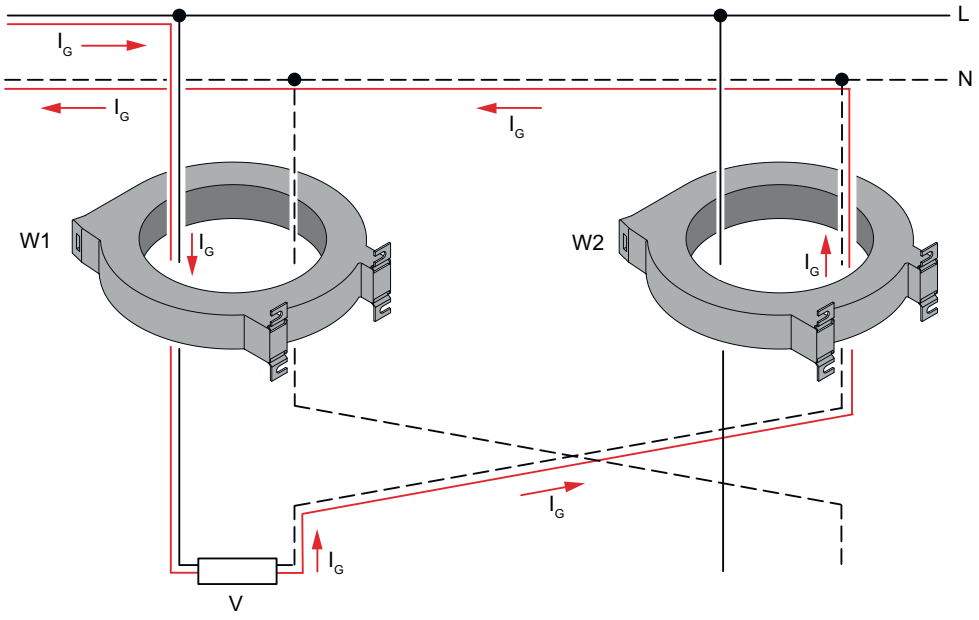

Routing contrary to the current flow

To be able to form the vectorial sum of currents to and from a load correctly, all active conductors must be routed through the residual current transformer from the same direction. Due to the restricted space in a control cabinet it may be easier to route the neutral conductor through the transformer in the opposite direction to the phase conductor. This means the vectorial sum of currents does not equal zero, even without a ground fault, and the residual current monitoring relay trips.

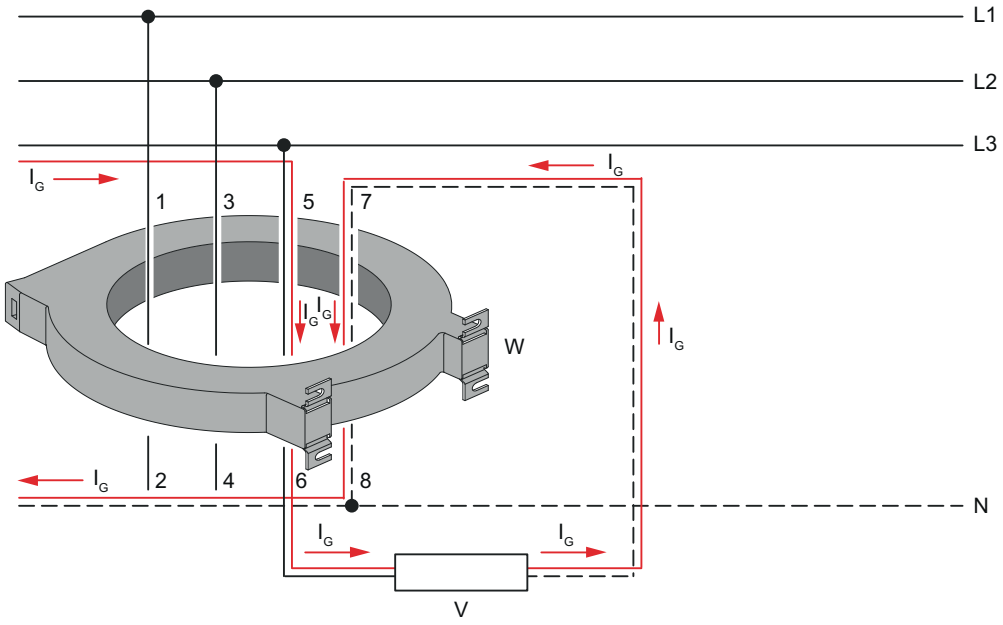

11.2.3.5 Internal circuit diagram

3UL23 internal circuit diagram


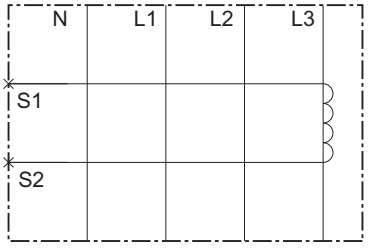


Figure 11-11 3UL23 residual current transformer

11.2.3.6 Installing

Wall mounting procedure

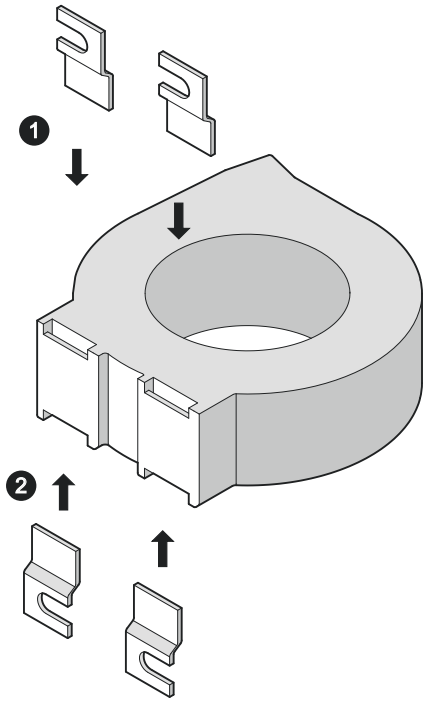

① / ② Insert the fixing lugs into the designated openings in the unit until they reach the stop.

③ Place the device against the wall surface prepared for establishing a screw connection.


④ Insert the head screws through the corresponding elongated holes in the fixing lugs.

⑤ Screw the device onto the level surface so that it is secure.

Mounting onto standard rail

Requirement: At the installation location, a horizontal 35-mm wide mounting rail in accordance with DIN EN 60715 has been properly secured.

Mounting onto standard rail is possible with residual-current transformers with bushing opening diameters of up to ∅ 55 mm only (3UL2302-1A, 3UL2303-1A).

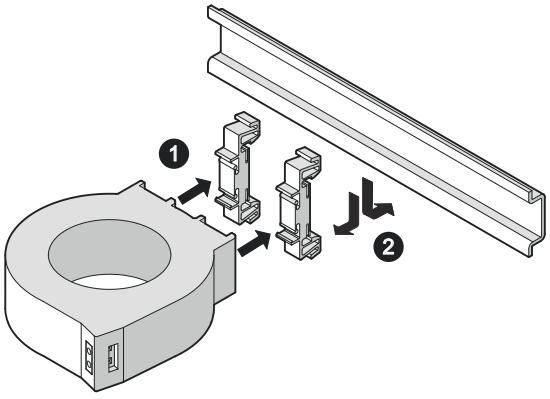

① Mount the holder (3UL2900) to the device.
② Mount the device on the rail.

11.2.3.7 Technical specifications in the Siemens SiePortal

Technical data sheet

You can find the technical specifications for the product in Siemens SiePortal (https://support.industry.siemens.com/cs/ww/en/ps/16368/td).

1. Enter the article number of the desired device in the "Products" field.
2. Click the "Technical specifications" link in the result.

11.2.3.8 Dimension drawings

3UL23 residual current transformer

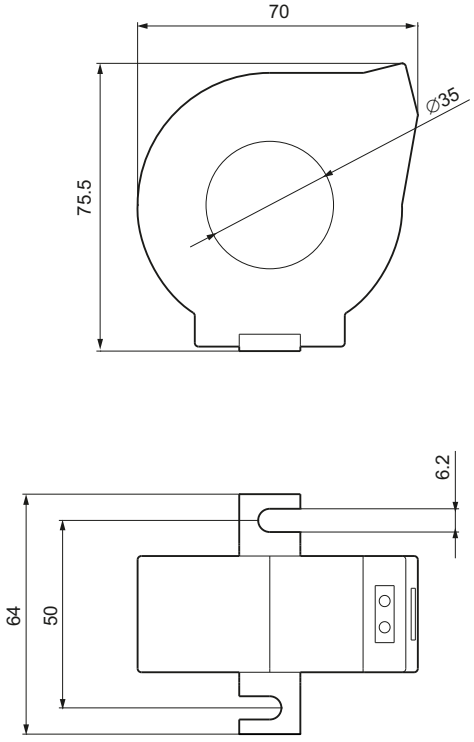


Figure 11-12 3UL2302-1A

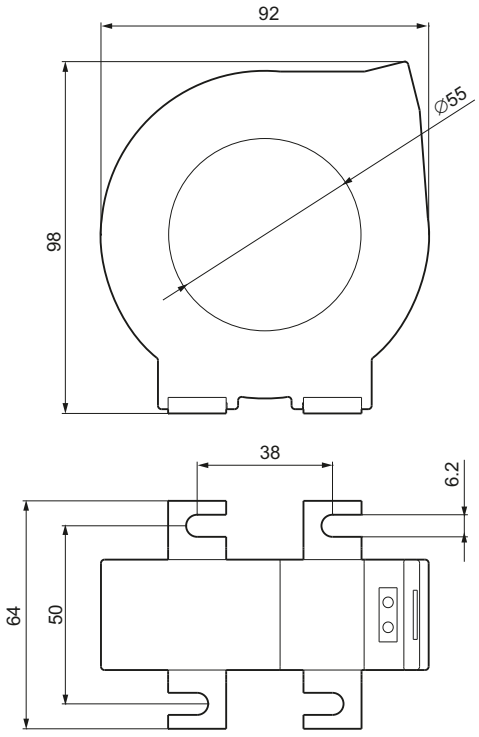


Figure 11-13 3UL2303-1A

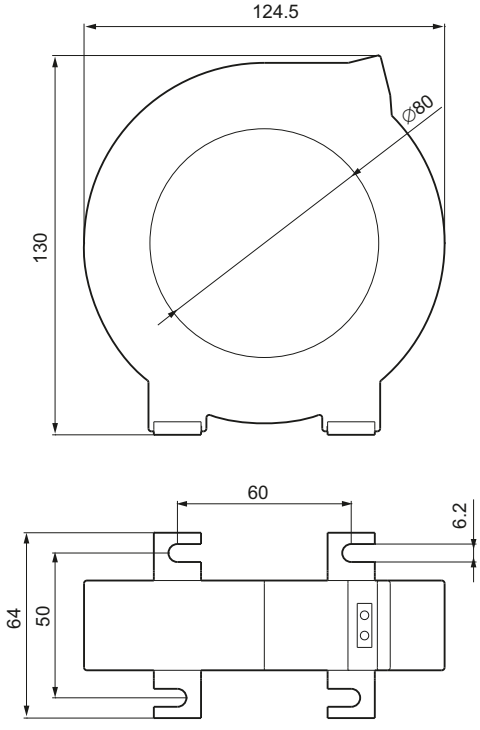


Figure 11-14 3UL2304-1A

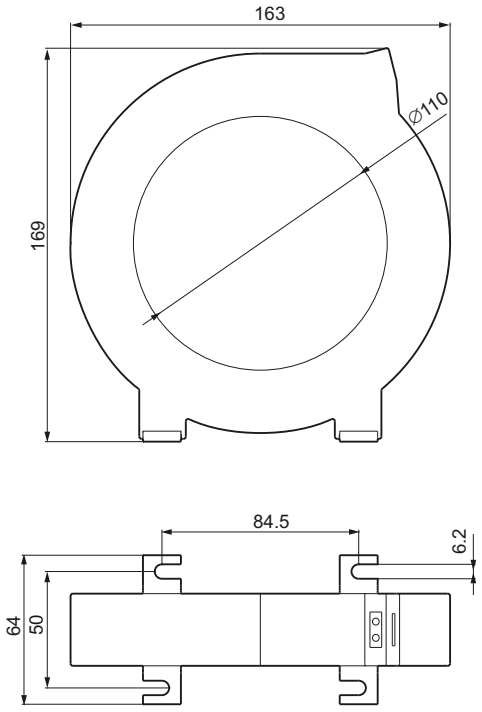


Figure 11-15 3UL2305-1A

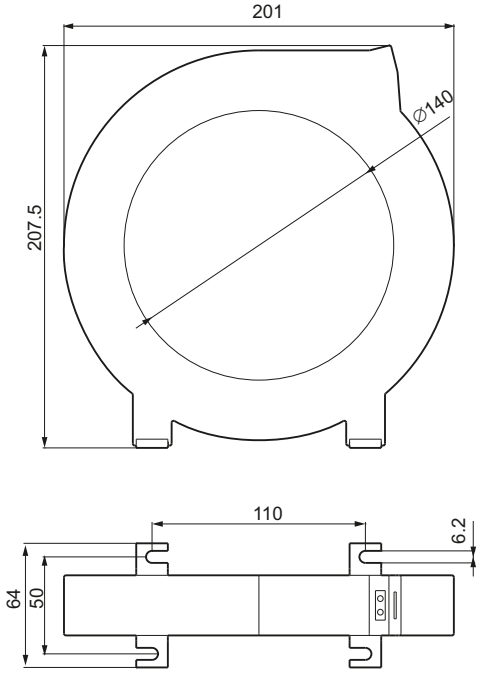


Figure 11-16 3UL2306-1A

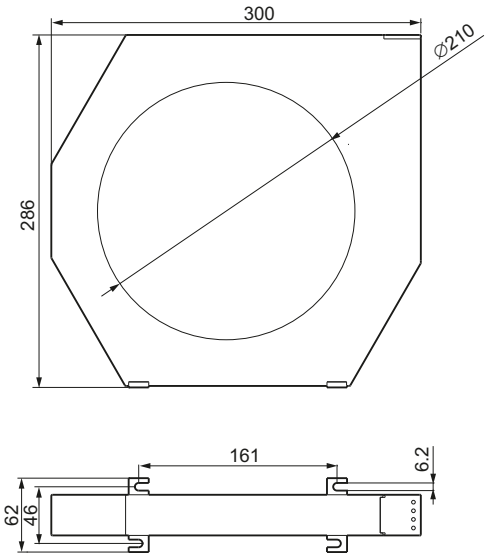


Figure 11-17 3UL2307-1A

Configuring the IO-Link

12

12.1 Combinations

IO-Link master and IO-Link device combinations are shown in the following table.

IO-Link master...	IO-Link device...	
	... according to IO-Link communication specification V1.0	**... according to IO-Link communication specification V1.1**
...according to IO-Link communication specification V1.0	Operation according to specification V1.0	Operation according to specification V1.0
...according to IO-Link communication specification V1.1	Operation according to specification V1.0	**Operation according to specification V1.1**[1)]

[1)] By selection of IODD V1.0.1, the device can be operated according to IO-Link communication specification V1.0.

12.2 Configuring with STEP 7 and the S7-PCT Port Configuration Tool

12.2.1 Basic procedure and prerequisites

Procedure when configuring IO-Link master and IO-Link devices

Configuration takes place in two steps with STEP 7, V5.4 SP5 or STEP 7 TIA Portal, V12.0 or higher:

1. Configuring the IO-Link master in *HW Config*. You can find IO-Link masters on the Internet (http://www.siemens.com/industrymall) under "Products & Services" > "Automation" > "Industrial communication" > "IO-Link" > "Master".
2. With the Port Configuration Tool *S7-PCT* , you configure the connected IO-Link devices.

Note

The block library for IO-Link (LIOLink) is available as download in the Siemens Industry Online Support (SIOS) via the following link: Library for IO-Link (LIOLink) (https://support.industry.siemens.com/cs/ww/en/view/82981502)

Note

An application example for using the device-specific blocks from the block library for IO-Link (LIOLink) can be found on the Internet (https://support.industry.siemens.com/cs/ww/en/view/90529409).

Requirements

- STEP 7 from V5.4 SP5 or STEP 7 TIA Portal from V12.0.
- The Port Configuration Tool *S7-PCT* is installed on the PG/PC.
  You can either install *S7-PCT* together with or STEP 7 or you can download it from the Internet (https://support.industry.siemens.com/cs/ww/en/view/32469496).
- IO-Link IODD files (IO Device Description) are installed in the *S7-PCT hardware catalog*. You can download all current IODD files for the SIRIUS devices from the Internet (https://support.industry.siemens.com/cs/ww/en/ps/15851/dl).
  IODD files for V1.0 and V1.1 are available for the combination of an IO-Link master and an IO-Link device according to the IO-Link communication specification V1.1. You may need IODD files according to the IO-Link communication specification V1.0 when replacing devices in existing installations.
- The GSD files of the IO-Link masters are already installed in *STEP 7 HW Config*. You can download all current GSD files for the Siemens IO-Link masters from the Internet (https://support.industry.siemens.com/cs/ww/en/ps/14288).

12.2.2 Configuration

Configuring the IO-Link master in *HW Config*

1. Start the SIMATIC Manager (*STEP 7*) or the TIA Portal and configure the project as described in the *STEP 7* online help.
2. Select the IO-Link master in the hardware catalog of *HW Config*.
3. Drag and drop the IO-Link master from the hardware catalog to the hardware configuration.
4. Select the IO-Link master in the hardware configuration (*STEP 7 V5.x*) / device view (*STEP 7* TIA).
5. Press the right mouse button and in the shortcut menu select "**Object Properties**" (*STEP 7 V5.x*) / "**Properties**" (*STEP 7* TIA).
   Result: The "**Properties**" window of the IO-Link master opens.
6. Check the settings of the addresses.
   Every IO-Link master port needs a corresponding overall address range depending on the IO-Link device used.

Configuring the IO-Link device with the S7-PCT Port Configuration Tool

1. Select the configured IO-Link master.
2. Press the right mouse button and select "**Start device tool**" (*STEP 7* TIA) / "**Configure IO-Link**" (*STEP 7 V5.x*) from the shortcut menu depending on the configuration tool used.
3. Select the IO-Link device in the component catalog of the S7-PCT Port Configuration Tool.
4. Drag the IO-Link device out of the component catalog to the required port of the IO-Link master.
5. Start by parameterizing the IO-Link device.
   More information is available in the *S7-PCT* online help.

12.3 Configuring with the S7-PCT port configuration tool (stand-alone)

12.3.1 Application

Configuration is always done with the S7-PCT Port Configuration Tool whenever no SIMATIC CPU is available and a SIMATIC IO-Link master is being used.

12.3.2 Basic procedure and prerequisites

Basic procedure when configuring IO-Link master and IO-Link devices with the S7-PCT Port Configuration Tool (stand-alone)

1. You configure the connected IO-Link devices with the *S7-PCT* Port Configuration Tool.

Requirements

- The *S7-PCT* Port Configuration Tool is installed on the PG/PC.
  You can either install *S7-PCT* together with STEP 7 V5.4 SP5 or higher or STEP 7 TIA Portal V12.0 or higher, or you can download it from the Internet (https://support.industry.siemens.com/cs/ww/en/view/32469496).
- IO-Link IODD files (IO Device Description) are installed in the *S7-PCT* hardware catalog. All current IODD files of the SIRIUS devices are available on the Internet (https://support.industry.siemens.com/cs/ww/en/ps/15851/dl).
  IODD files for V1.0 and V1.1 are available for the combination of an IO-Link master and an IO-Link device according to the IO-Link communication specification V1.1. You may need IODD files according to the communication specification V1.0 when replacing devices in existing installations.

Note

Configuring with S7-PCT stand-alone is not possible for the CPU versions of the ET 200.

12.3.3 Configuration

Configuring the IO-Link device with the S7-PCT Port Configuration Tool

1. Start the *S7-PCT* Port Configuration Tool.
2. Create a new project or open an existing project as described in the online help.
3. Double-click to select a bus category (PROFIBUS DP / PROFINET IO).
4. Double-click to select an IO-Link master.
5. Select the IO-Link device in the component catalog of the *S7-PCT* Port Configuration Tool.

6. Drag the IO-Link device out of the component catalog to the required port of the IO-Link master.
7. Load the configuration into the IO-Link master before parameterizing the IO-Link device.
8. Start by parameterizing the IO-Link device.
   More information is available in the *S7-PCT* online help.

Note

To be able to access the IO-Link master or an IO-Link device online, communication between the ET 200 and the higher-level controller must be active (BF LED on ET 200 interface module is off).

12.4 Block library for IO-Link (LIOLink)

The current block library for IO-Link (LIOLink) can be used for STEP 7 TIA Portal V16 and higher. For older STEP 7 versions, the article contains an archive download of an earlier version. The function block library for IO-Link (LIOLink) provides blocks and PLC data types to enable communication between the SIMATIC controller and IO-Link master or IO-Link device.

All blocks of the library are compatible with the SIMATIC S7-1200 / 1500 controller and mostly also with the SIMATIC S7-300 / 400 controller.

Basic blocks

The library contains the following blocks, among others:

- The LIOLink_Device block enables the reading and writing of acyclic data of an IO-Link device via the S7 program
- The LIOLink_Master block enables the backup (Backup) and restore (Restore) of device parameters and device settings of an IO-Link master via the S7 program (master exchange without engineering tool)

Device-specific blocks for simple communication with IO-Link devices

The library for IO-Link is available as download in the Siemens Industry Online Support (SIOS) via the following link:

Library for IO-Link (LIOLink) (https://support.industry.siemens.com/cs/ww/en/view/82981502)

Note

An application example for using the device-specific blocks for IO-Link can be found on the Internet (https://support.industry.siemens.com/cs/ww/en/view/90529409).

12.5 Replacing an IO-Link device

To replace an IO-Link device, the devices must be isolated from communication and disconnected from the power supply. After the connections have been restored and communication has been resumed, the parameterization can be restored according to the respective IO-Link communication specification:

- IO-Link communication specification V1.0: concerning the LIOLink_Device function block.
- IO-Link communication specification V1.1: via automatic parameterization under the ET 200SP

12.5.1 Replacing an IO-Link device according to the IO-Link communication specification V1.0

12.5.1.1 Procedure

Parameter data and configuration data specially optimized by the user for a specific application are stored in an IO-Link-Device. This data deviates in many cases from the default values stored in the IO-Link-Device.

In the event of replacement of an IO-Link-Device (referred to below as a "module"), the optimized data must be transferred to the new module because the parameters are stored only in the IO-Link device itself.

Data can be transferred via two channels:

- Module replacement with PG/PC
- Module replacement without PG/PC

12.5.1.2 Procedure with PG/PC

In the event of a replacement, a PG/PC is available with the SIMATIC project of the plant.

With the data stored in the SIMATIC project, and the *S7-PCT* port configuration tool, you transfer the parameters belonging to the replaced IO-Link-Device to the new IO-Link-Device.

12.5.1.3 Procedure without PG/PC

Requirements

- Implement the LIOLink_Device function block in the S7 program.
  You can download the LIOLink_Device function block and the description from the Internet (https://support.industry.siemens.com/cs/ww/en/view/82981502).

On completion of commissioning, a PG/PC with the project is no longer available. For backing up and restoring the parameter data and configuration data from or to a module, the LIOLink_Device function block is available for the SIMATIC S7 controllers.

With this function block, you back up all relevant data records of a module after commissioning, in a data block (DB), for example. In the event of a replacement, you write the relevant data from the data block to the replaced module with the LIOLink_Device function block.

Refer to the Appendix "Process data and data sets (Page 233)" for data records to be backed up in the case of a module.

Procedure

1. Install the block library for IO-Link (https://support.industry.siemens.com/cs/ww/en/view/82981502).
2. Use the LIOLink_Device function block as described in the documentation.
3. An application example for using the device-specific blocks from the block library for IO-Link (LIOLink) can be found on the Internet (https://support.industry.siemens.com/cs/ww/en/view/90529409).

12.5.2 Replacing an IO-Link device according to the IO-Link communication specification V1.1

Automatic saving of parameter data

If IO-Link masters and IO-Link devices according to the IO-Link Kommunikations-Spezifikation V1.1 are available, the "parameter server" function can be used to automatically back up parameter data.
When devices are replaced, this parameter data is written back to the new IO-Link device automatically on system startup.

References

A

Further references

You will find more information about the 3UG48/3RR24 monitoring relays for IO-Link on the Internet (http://support.automation.siemens.com/WW/view/en/20356134/133300).

In addition to this manual, please refer to the operating instructions and manuals for any accessories. You can download the relevant documentation from the Internet (http://www.siemens.com/sirius/manuals). Simply enter the article number of the relevant item into the search field.

Operating instructions

Title	Article number
SIRIUS monitoring relays for 3-phase current monitoring for IO-Link for mounting on contactors S00/S0 (3RR24)	3ZX1012-0RR24-0AA0
SIRIUS monitoring relays for 3-phase current monitoring for IO-Link for mounting on S2 contactors (3RR2443)	3ZX1012-0RR24-3AA1
SIRIUS monitoring relays for three-phase voltage monitoring for IO-Link (3UG4815 and 3UG4816)	3ZX1012-0UG48-1AA1
SIRIUS monitoring relays for single-phase current monitoring for IO-Link (3UG4822)	3ZX1012-0UG48-2AA1
SIRIUS monitoring relays for residual current monitoring for IO-Link (3UG4825)	3ZX1012-0UG48-0AA0
SIRIUS monitoring relays for single-phase voltage monitoring for IO-Link (3UG4832)	3ZX1012-0UG48-3AA1
SIRIUS monitoring relays for power factor cos phi and active power monitoring for IO-Link (3UG4841)	3ZX1012-0UG48-4AA1
SIRIUS monitoring relays for speed monitoring for IO-Link (3UG4851)	3ZX1012-0UG48-5AA1

(Warning) threshold for voltage asymmetry

Voltage asymmetry is the difference between the highest and the lowest phase voltage in relation to the highest phase voltage (Ux-y max - Ux-y min) / Ux-y max.

Note

Deviation from the definition according to IEC/NEMA

The definition given above for voltage asymmetry deviates from the definition according to IEC/NEMA. It usually results in a greater value for voltage asymmetry than that arrived at from the definition according to IEC/NEMA, so that a higher level of measuring accuracy is achieved.

Voltage asymmetry can be parameterized as "Threshold for voltage asymmetry" or as "Warning threshold for voltage asymmetry" (only on devices for IO-Link).

If the warning threshold is reached on device variants for IO-Link, this is transmitted cyclicly via IO-Link and the relevant bits are set in the diagnostics data set or the semiconductor output (terminal C/Q) is switched in SIO mode.

If the threshold has been reached, the output relays are switched accordingly and an IO-Link message may be sent.

Possible indications on the display: Asy (threshold), possibly Asy! (warning threshold)

(Warning) threshold for current asymmetry

Current asymmetry is the difference between the highest and lowest phase current in relation to the highest phase current ($I_{x\text{-}y\ max}$ - $I_{x\text{-}y\ min}$) / $I_{x\text{-}y\ max}$.

Note

Deviation from the definition according to IEC/NEMA

The definition of current asymmetry given above deviates from the definition according to IEC/NEMA. It usually results in a greater value for current asymmetry than that arrived at from the definition according to IEC/NEMA, so that a higher level of measuring accuracy is achieved.

Current asymmetry can be parameterized as "Threshold for current asymmetry" or as "Warning threshold for current asymmetry" (only on devices for IO-Link).

If the warning threshold is reached on device variants for IO-Link, this is transmitted cyclically via IO-Link and the relevant bits are set in the diagnostics data set, or the semiconductor output (terminal C/Q) is switched in SIO mode.

If the threshold has been reached, the output relays are switched accordingly and an IO-Link message may be sent.

Possible indications on the display: Asy (threshold), possibly Asy! (warning threshold)

Tripping delay time

If the measured value overshoots or undershoots the set limit value, the delay time that can be set using the "Tripping delay time" parameter starts. On expiry of this time, the switching contact changes state and a message may be sent via IO-Link.

Possible indications on the display:

- Tripping delay time in the case of voltage undershoot: U▼Del
- Tripping delay time in the case of voltage overshoot: U▲Del
- Tripping delay time in the case of (active) current undershoot: I▼Del
- Tripping delay time in the case of (active) current overshoot: I▲Del
- Tripping delay time in the case of speed undershoot: ▼Del
- Tripping delay time in the case of speed overshoot: ▲Del
- Tripping delay time for asymmetry: AsyDel
- Tripping delay time in the case of undershoot of the cos phi value: φ▼Del
- Tripping delay time in the case of overshoot of the cos phi value: φ▲Del

ON-delay time

The setting of the "ON-delay time" parameter prevents limit violations such as undershoots (typical of inductive loads) while the system engages from generating a switching response.

The ON-delay time starts in the following cases, depending on the parameter settings:

- **At restart**
  If a measurable signal is again detected after the lower measuring range limit has been undershot.
- **At Power-ON**
  Re-connection of the supply voltage (Power-ON) of the device after switching off the current flow (zero current).
- **At manual reset**
  A fault is acknowledged by a manual reset. Following this, the device behaves in the same way as when the supply voltage is switched on again.

Starting the ON-delay time via IO-Link

The ON-delay time can also be started through the process image of the outputs (PIQ) by setting the control command "Start ON delay time." This is a simple method of permitting brief load steps during operation if these are predictable.

The ON-delay time can be set either locally via the three keys on the device, or via IO-Link. The requirements governing the starting of the ON-delay time (Power-ON, manual reset and/or restart) can only be modified via IO-Link.

Note

After exiting the menu level SET, the ON-delay time starts again.

Start of the ON-delay

The following table shows the behavior of the ON-delay (onDel) with the 3UG48/3RR24 monitoring relays for IO-Link.

Device variants	Start of the ON-delay possible for:			
	"Power-ON" (device)	Automatic reset	Manual reset	"Power-ON" (load)
3UG4822	Yes	No	Yes	Yes
3UG4825	Yes	No	Yes	Yes
3UG4832	Yes	No	Yes	No
3UG4841	Yes	No	Yes	Yes
3UG4851	Yes	No	Yes	No
3RR24	Yes	No	Yes	Yes

You will find further information on the ON-delay time in the "Functionality" chapter for each monitoring relay.

Possible indications on the display:onDel

(Warning) threshold for undershoot

The device monitors a measured value for undershoot.

The measured value can be parameterized as "Threshold for undershoot" or as "Warning threshold for undershoot" (only on devices for IO-Link).

The setting for the "Warning threshold for undershoot" parameter defines the switching threshold of the relevant output relay prior to tripping due to a measured value undershoot.

If the set "Threshold for undershoot" parameter is undershot, the output relay will change its switching state after expiry of the set delay time and an IO-Link message may be sent. If the measured value has reached the relevant set hysteresis value, the output relay ("Reset response" parameter set to Autoreset) will immediately revert to its original state and a new IO-Link message may be sent.

Further response depends on the set reset response (see "Reset response" parameter).

You can find information on the switching response of the output relays in the "Functionality" chapters of the relevant monitoring relays.

Possible indications on the display:

- Current undershoot: I▼ (threshold),I!▼(warning threshold)
- Voltage undershoot: U▼ (threshold),U!▼ (warning threshold)

- Speed undershoot: rpm▼ (threshold),rpm!▼ (warning threshold)
- Cos phi undershoot: φ▼ (threshold),φ!▼ (warning threshold)
- Active current undershoot: I_r▼ (threshold),I_r!▼(warning threshold)

(Warning) threshold for overshoot

The device monitors a measured value for overshoot.

The measured value can be parameterized as "Threshold for overshoot" or as "Warning threshold for overshoot" (only on devices for IO-Link).

The setting for the "Warning threshold for overshoot" parameter defines the switching threshold of the relevant output relay prior to tripping due to a measured value overshoot.

If the set "Threshold for overshoot" parameter is overshot, the output relay will change its switching state after expiry of the set delay time and an IO-Link message may be sent. If the measured value has reached the relevant set hysteresis value, the output relay ("Reset response" parameter set to autoreset) will immediately revert to its original state and a new IO-Link message may be sent.

Further response depends on the set reset response (see "Reset response" parameter).

You can find information on the switching behavior of the output relays in the "Functionality" chapters of the relevant monitoring relays.

Possible indications on the display:

- Current overshoot: I▲ (threshold),I!▲ (warning threshold)
- Voltage overshoot: U▲ (threshold),U!▲ (warning threshold)
- Speed overshoot: rpm▲ (threshold),rpm!▲ (warning threshold)
- Cos phi overshoot: φ▲ (threshold),φ!▲ (warning threshold)
- Active current overshoot: I_r▲ (threshold),I_r!▲ (warning threshold)

Reset response

The setting of the "Reset response" parameter controls how the device behaves after tripping in the event of an error, and the subsequent reversion of the measured values to the normal range once the cause of the error has been dealt with.

The outputs are reset dependent on the setting of the "Reset response" parameter.
The following settings can be selected:

- Automatic reset
  If the device is set to automatic reset, the switching contact will respond once the normal range plus the hysteresis threshold have been reached. The device is reset automatically as soon as a previously occurring error has been dealt with. The overshoot or undershoot which triggered the response is not saved.
- Manual RESET
  If manual RESET is selected, the switching contact remains in the current switching state even if the measured value returns to a permissible value.

Possible indications on the display: Mem

Hysteresis

Hysteresis is the continuation of an effect within the hysteresis range after its cause has been removed; its purpose is to prevent repeated response in the threshold value range.

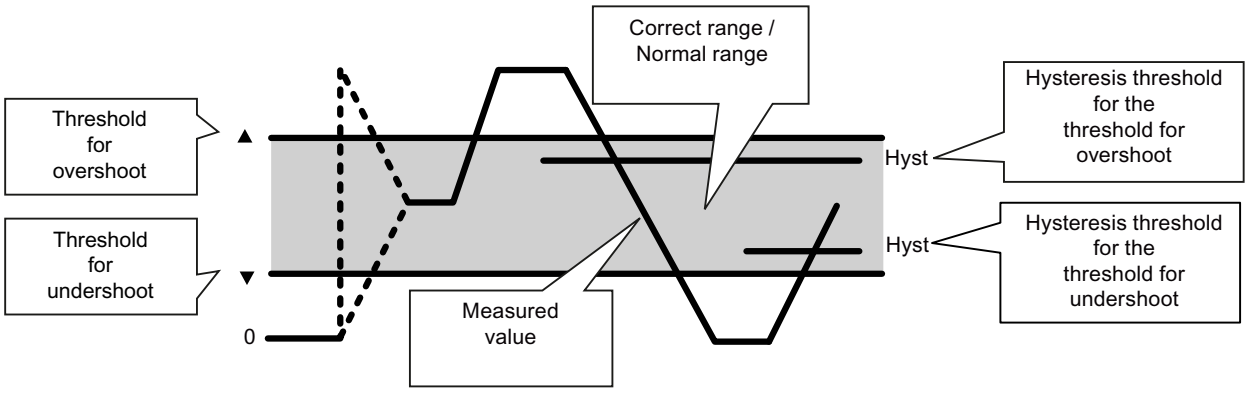


Figure B-1 Explanation of hysteresis

If, after the upper threshold value has been overshot to such an extent that switching was necessary, the measured value returns to the normal range, and switching over to the correct range will not take place until a measured value which undershoots the hysteresis threshold has been reached. The same applies if the lower threshold value is undershot.

The hysteresis is only active if the "Reset response" parameter is set to autoreset.

Possible indications on the display: Hyst

Phase failure monitoring

If the "phase failure monitoring" parameter is activated, an immediate shutdown is carried out in the event of a failure of one of the phases (or of the N conductor) to protect the application from follow-on damage.
Set delay times have no effect on phase failure monitoring.

The "phase failure monitoring" parameter on the 3UG48/3RR24 monitoring relays is set either locally via the three keys on the device, or via IO-Link.

Possible indications on the display: ⊣//⊢

Phase sequence monitoring

If the "Phase sequence monitoring" parameter has been activated and the load currents exhibit the wrong phase sequence, the changeover contact will change its switching status immediately (≤ 200 ms).

Possible indications on the display: ↷

Relay switching response

The "Relay switching response" parameter allows the user to adjust the switching response of an output relay. Several variations can be distinguished here:

- Closed-circuit principle (NC)
  With the closed-circuit principle, the output relay picks up when the voltage is applied (normally-open contact (NO) closed). The output relay drops out in the event of an error (normally-closed contact (NC) closed). If the supply voltage fails, the output relay also returns to this position so that a supply voltage failure is detected and reported.
  The semiconductor output responds as an NC contact, in other words, if a fault is detected, the output Q has a high resistance.
- Open-circuit principle (NO)
  With the open-circuit principle, the output relay only picks up in the event of an error (normally-open contact (NO) closed). Interruptions to the supply voltage are not displayed.
  The semiconductor output responds as an NO contact, in other words, if a fault is detected, the supply voltage is present at output Q.

Possible indications on the display:

- Closed-circuit principle: NC
- Open-circuit principle: NO

Blocking current monitoring

If the load current overshoots the value of the set threshold for overshoot (I▲) by a multiple of n during operation, a blocking current error has occurred. The tripping delay time that is running due to the current threshold overshoot is stopped and the outputs are switched.

Indication on the display: n x I▲

Scaling factor

The "scaling factor" parameter allows the user to set the number of pulses per revolution provided by the pulse encoder. This allows the revolutions per minute to be read direct on the display.

Possible indications on the display: Scale

Reclosing delay time

If autoreset is activated on the monitoring relay, the reclosing delay time will start as soon as the measured value to be monitored returns to the correct range after an overshoot or undershoot. The associated hysteresis threshold is taken into consideration here. At the end of this time the contacts switch back to normal operation.

The reclosing delay time permits motor cooling if the device has tripped due to a temperature rise.

Possible indications on the display: RsDel

Stabilization delay

An output is only switched to the "correct position" after switching on the supply voltage if all monitored measured values are stable for the duration of the stabilization delay. The monitoring functions are active within the stabilization delay. A threshold overshoot or undershoot in this time does not result in a fault, but instead in restarting of the stabilization delay.

The stabilization delay starts in the following cases:

- **At Power-ON**
  Reapplication of the supply voltage (Power-ON) of the device after disconnection of the current flow (zero current).
- **At manual reset**
  A fault is acknowledged by a manual reset. After this, the device responds in the same way as
  when the supply voltage is connected.

Starting the stabilization delay via IO-Link

The stabilization time can also be started through the process image of the outputs (PIQ) by setting the control command "Start stabilization time."

The "Stabilization time" parameter is set either locally using the three keys on the device, or via IO-Link. The requirements governing the starting of the stabilization delay (Power-ON and/or manual reset) can only be modified via IO-Link.

The stabilization of line voltage is useful, for example, in the case of generator operation.

Note

Whenever the menu level is exited SET, the stabilization time starts again.

Start of the stabilization time

The following table shows the behavior of the stabilization time (stDel) with the 3UG48/3RR24 monitoring relays for IO-Link.

Device variants	Start of the stabilization time possible for:			
	"Power-ON"	Automatic reset	Manual reset	Restart
3UG4815	Yes	No	Yes	No
3UG4816	Yes	No	Yes	No

You will find further information on the ON-delay time in the "Functionality" chapter for each monitoring relay.

Indication on the display: stDel

Transformer transmission factor

The "Transformer transmission factor" parameter allows the user to determine the transformation ratio of the current transformer used.

To measure higher AC currents than those immediately possible with the relevant current monitoring relay, current transformers/instrument transformers can be connected. The conversion factor of the transformer used can be set for correct display of the current values.

The "Transformer transmission factor" parameter is set either locally using the three keys on the device, or via IO-Link.

Indication on the display: Scale

Group diagnostics

The "Group diagnostics" parameter enables the user to enable or completely disable "Automatic signaling" via the fieldbus. The message bits "Group error" and "General warning" in the process image are not affected by this.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Group error diagnostics

The "Group error diagnostics" parameter enables the user to suppress "Automatic signaling" of all error messages via the fieldbus.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Local threshold change

The "Local threshold change" parameter enables the user to set product-specific limit values and warning thresholds for undershoot and overshoot locally on the monitoring relay. If the parameter is disabled, local setting on the device is prevented.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Local parameter change

The "Local parameter change" parameter enables the user to set product-specific parameters (e.g. delay times, hysteresis, or the relay switching response) locally on the monitoring relay. If the parameter is disabled, local setting on the device is prevented.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Local reset

The "Local reset" parameter enables the user to acknowledge the error message pending once an error has been detected directly on the monitoring device so that the normal monitoring function can be resumed. This requires the monitoring relay to be set to manual reset. If the parameter is disabled, fault acknowledgment on the device is prevented.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Retentive error memory

The "Retentive error memory" parameter enables the user to save all error messages in the device in the event of a power failure. The monitoring device is not reset in the event of power failure. If the parameter is enabled, automatic restart of the system is prevented if power is restored while a fault is active. This increases plant safety.

If the parameter is disabled, fault messages are discarded on power recovery.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Analog value coding

The "Analog value coding" parameter enables the user to transfer not just the measured value but also the unit and resolution of the analog measured value via the process image. This parameter can be used for device-specific setting of the value to be sent cyclically.

The Chapter "Analog value coding (Page 235)" contains a table listing the units and resolutions of the analog measured values to be transferred, as well as the assignment to the relevant monitoring relays.

The possible settings for this parameter are listed in the chapter titled "Process data and data sets (Page 233)". Changes to this parameter can only be made via IO-Link.

Switching cycle counter

The switching cycle counter is incremented by one each time a breaking operation is detected (transition from three-phase current flow to no current flow can be measured). The number of switching cycles can be used as an indicator of pending maintenance or replacement of switching elements. Arcs in breaking operations cause high loads and wear.

Runtime meter

The runtime meter gives the time during which there was a measurable current in at least two current paths.


The properties of the insulation material of the motor windings, for example, deteriorate during operation due to the thermal load. The runtime can be used as an indicator of pending maintenance or replacement of machine parts and system components.

Dimension drawings


C

C.1 Dimension drawings 3RR24 current monitoring relays

3RR2441-1AA40 (screw connection, S00)

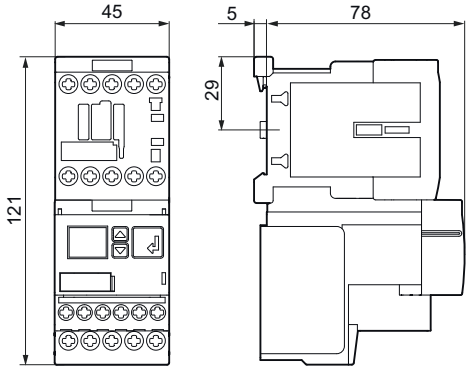


3RR2441-1AA40 with contactor

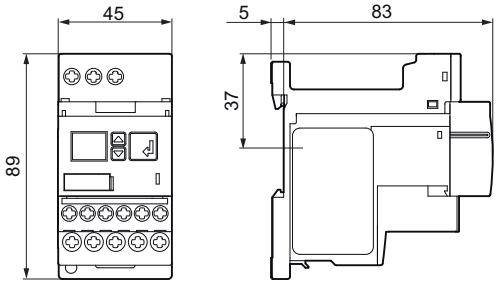


3RR2441-1AA40 with terminal support for stand-alone assembly

3RR2441-2AA40 (spring-loaded connection, S00)

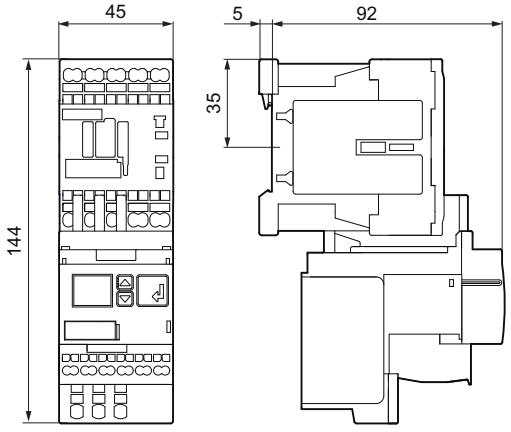


3RR2441-2AA40 with contactor

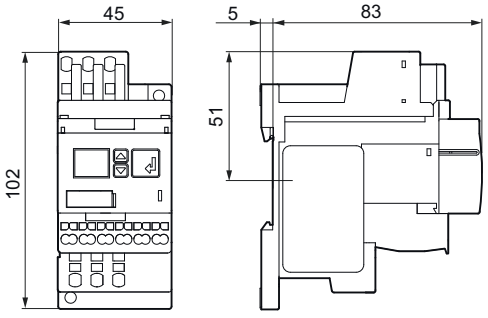


3RR2441-2AA40 with terminal support for stand-alone assembly

3RR2442-1AA40 (screw connection, S0)

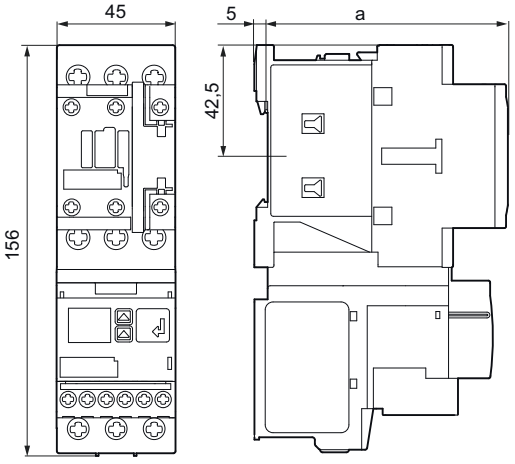


3RR2442-1AA40 with contactor

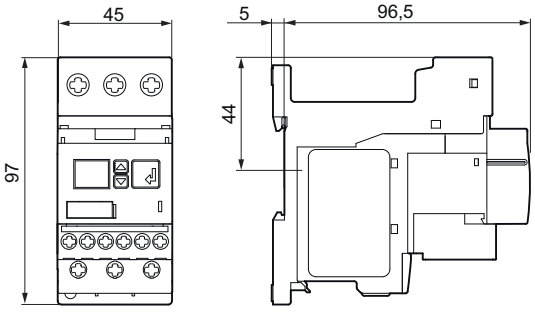


3RR2442-1AA40 with terminal support for stand-alone assembly

3RR2442-2AA40 (spring-loaded connection, S0)

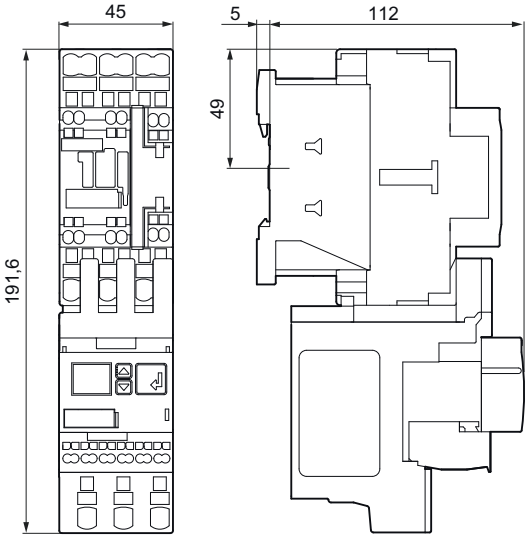


3RR2442-2AA40 with contactor

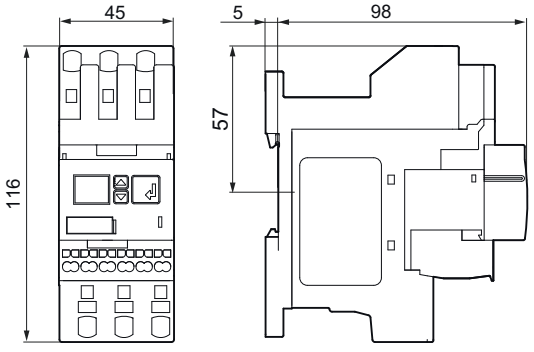

3RR2442-2AA40 with terminal support for stand-alone assembly


3RR2443-1AA40 (S2)

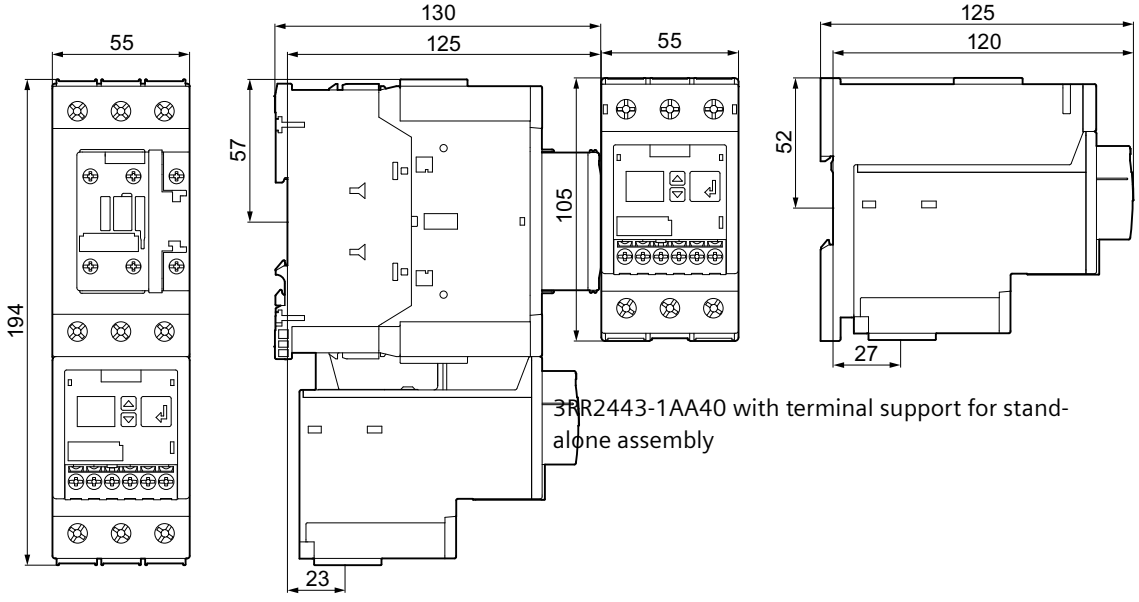

3RR2443-1AA40 with terminal support for stand-alone assembly

3RR2443-1AA40 with contactor

3RR2443-3AA40 (S2)

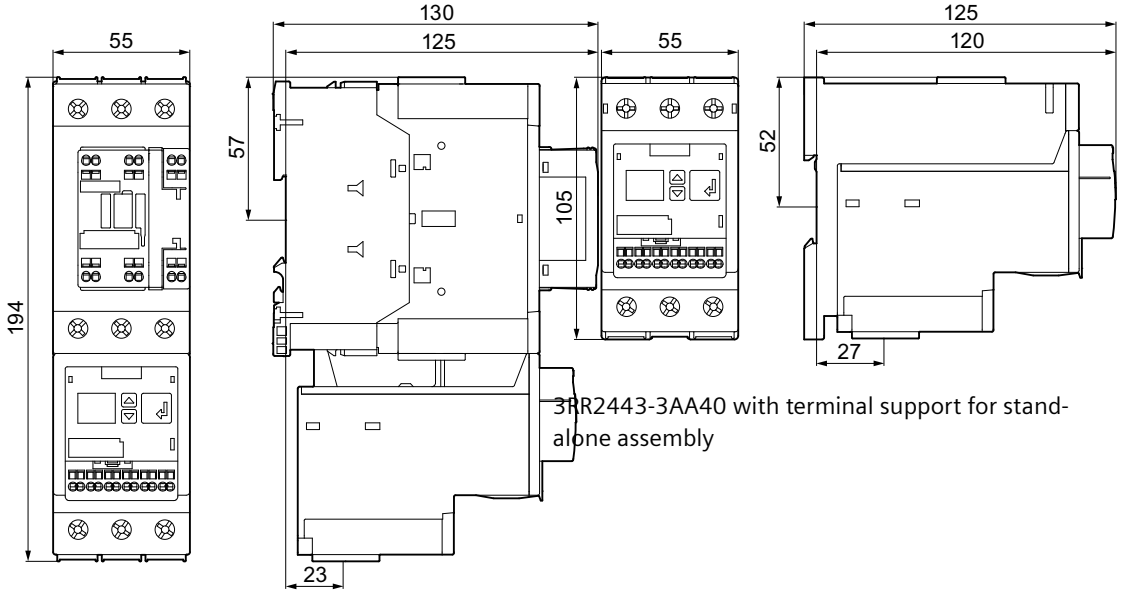

3RR2443-3AA40 with terminal support for stand-alone assembly

3RR2443-3AA40 with contactor

C.2 Dimension drawings 3UG4 monitoring relays. (3 connecting terminals)

3UG4. monitoring relays with 3 connecting terminals (screw-type connection)

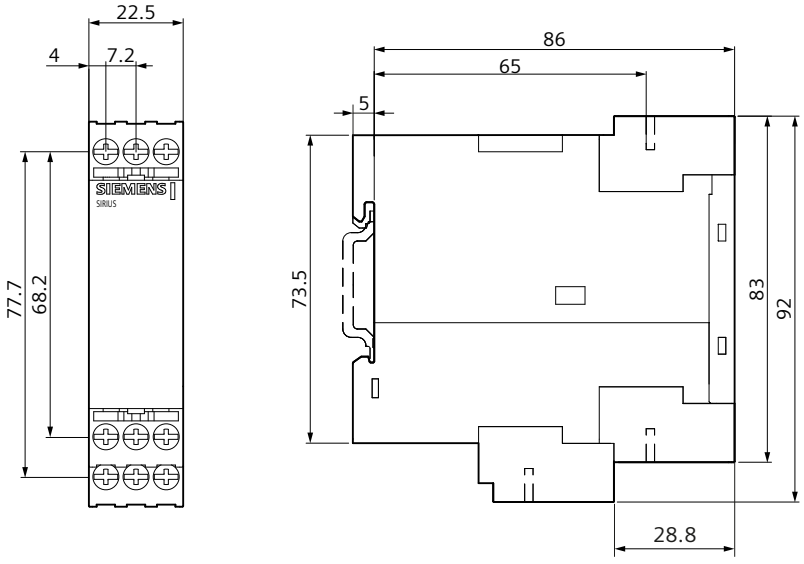


Figure C-1 3UG4. monitoring relays with 3 connecting terminals with screw-type connections

3UG4. monitoring relays with 3 connecting terminals (spring-loaded connections)

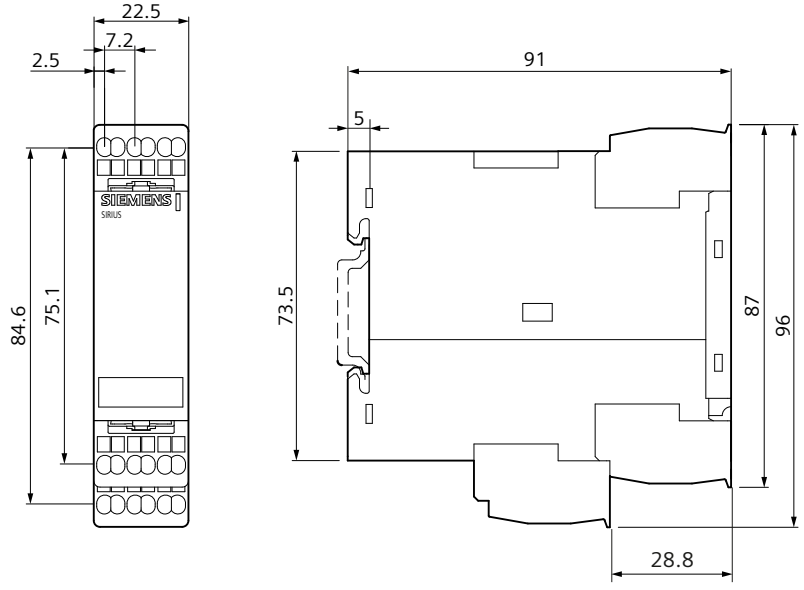


Figure C-2 3UG4. monitoring relays with 3 connecting terminals with spring-loaded connections

C.3 Dimension drawings 3UG4 monitoring relays. (4 connecting terminals)

3UG4. monitoring relays with 4 connecting terminals (screw-type connection)

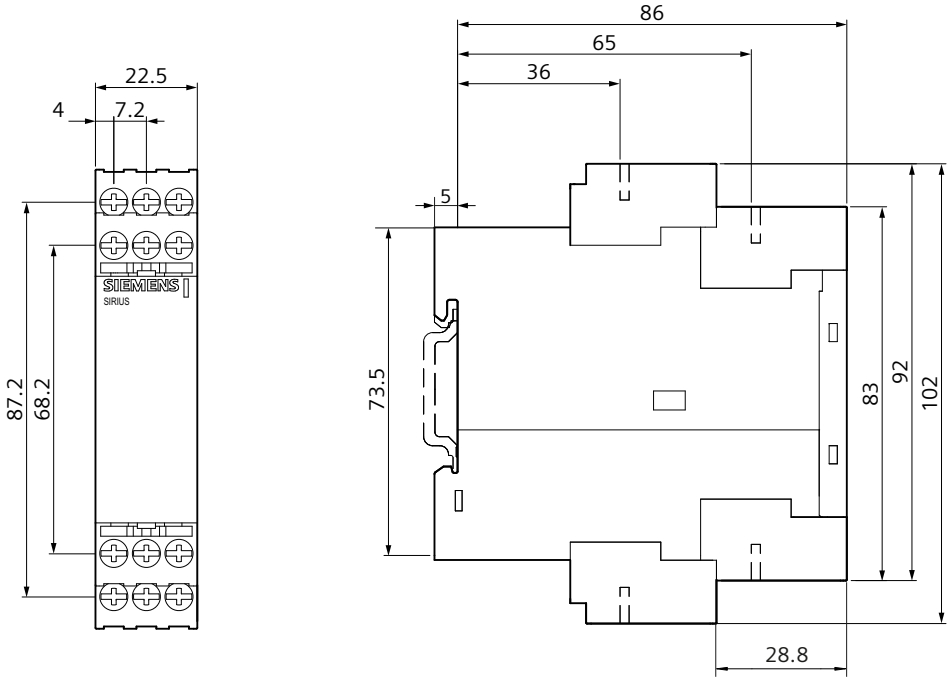


Figure C-3 3UG4. monitoring relays with 4 connecting terminals with screw-type connections

3UG4. monitoring relays with 4 connecting terminals (spring-loaded connections)

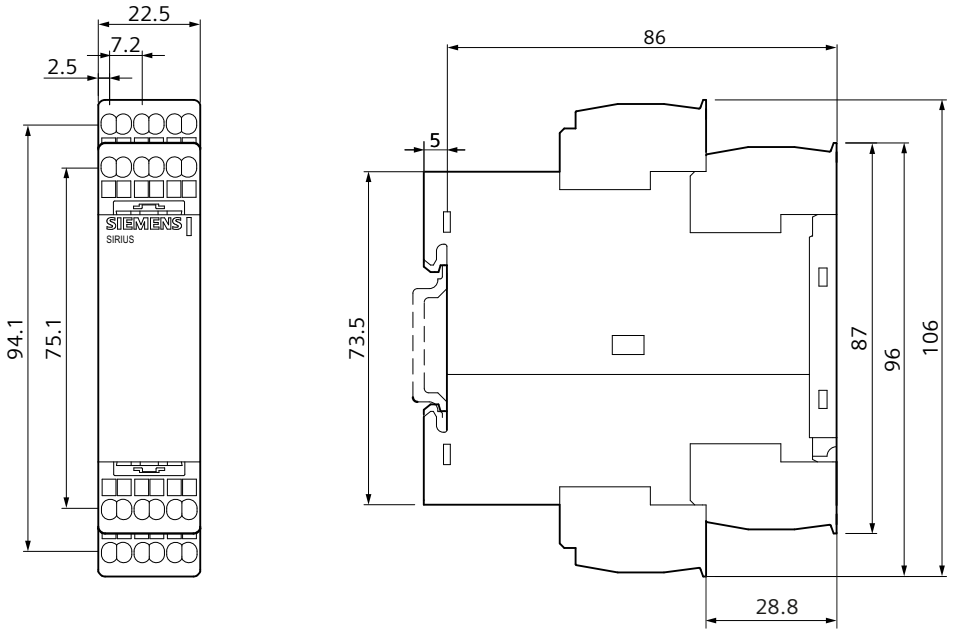
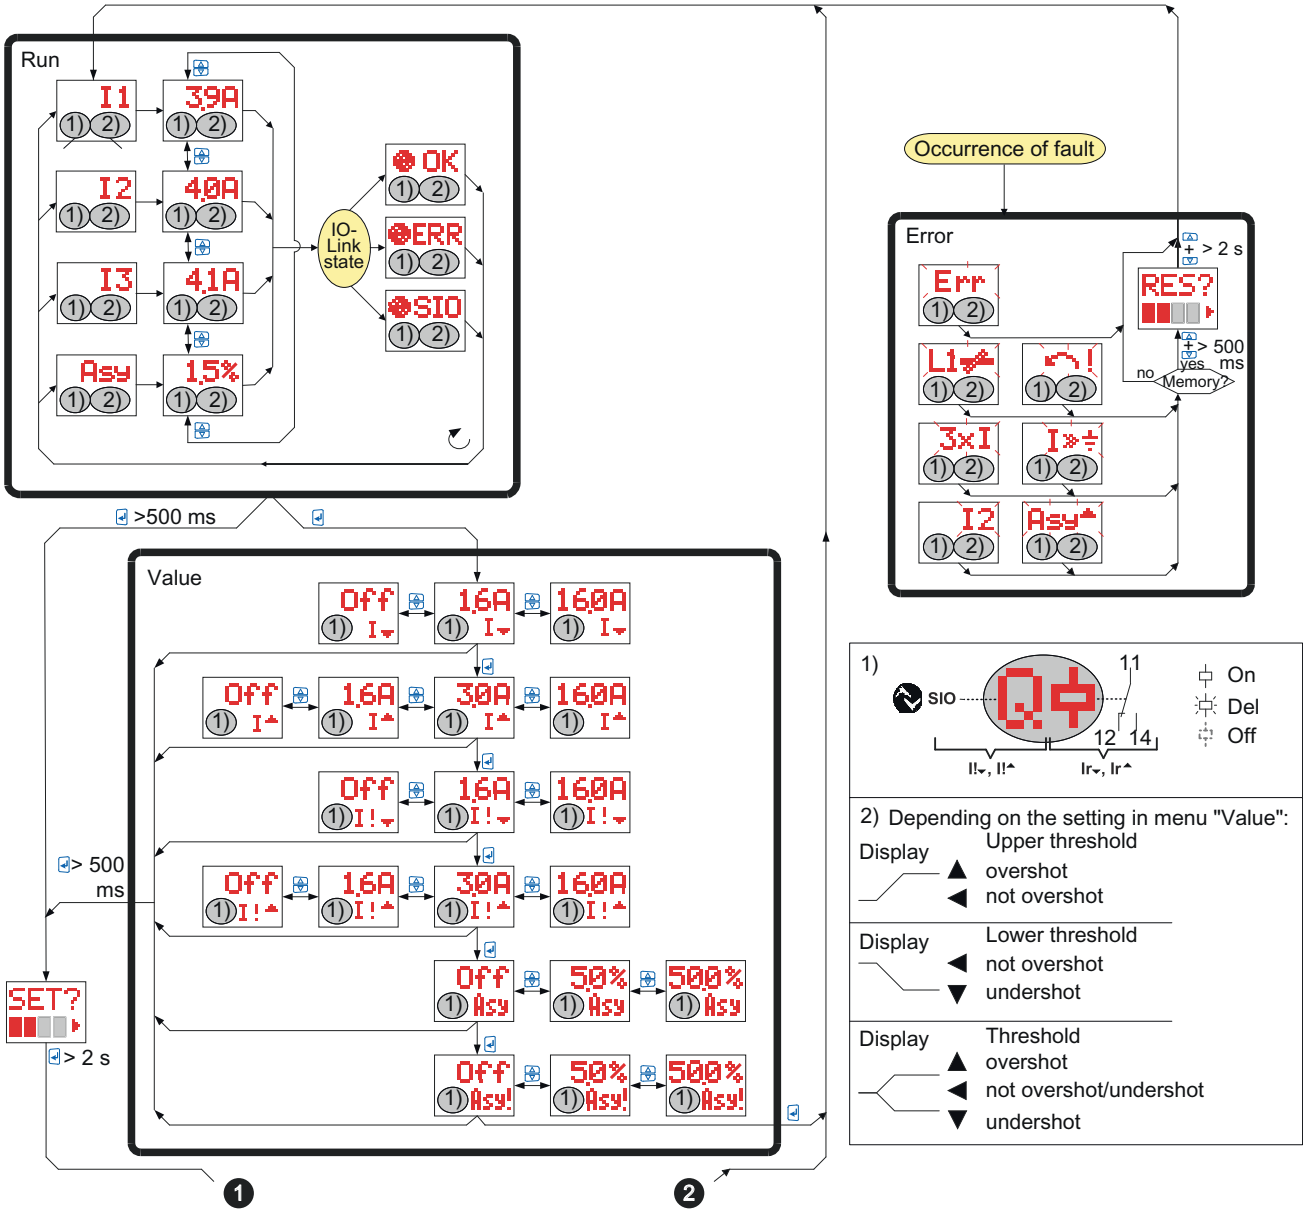


Figure C-4 3UG4. monitoring relays with 4 connecting terminals with spring-loaded connections

Menu-based operation

3RR2441



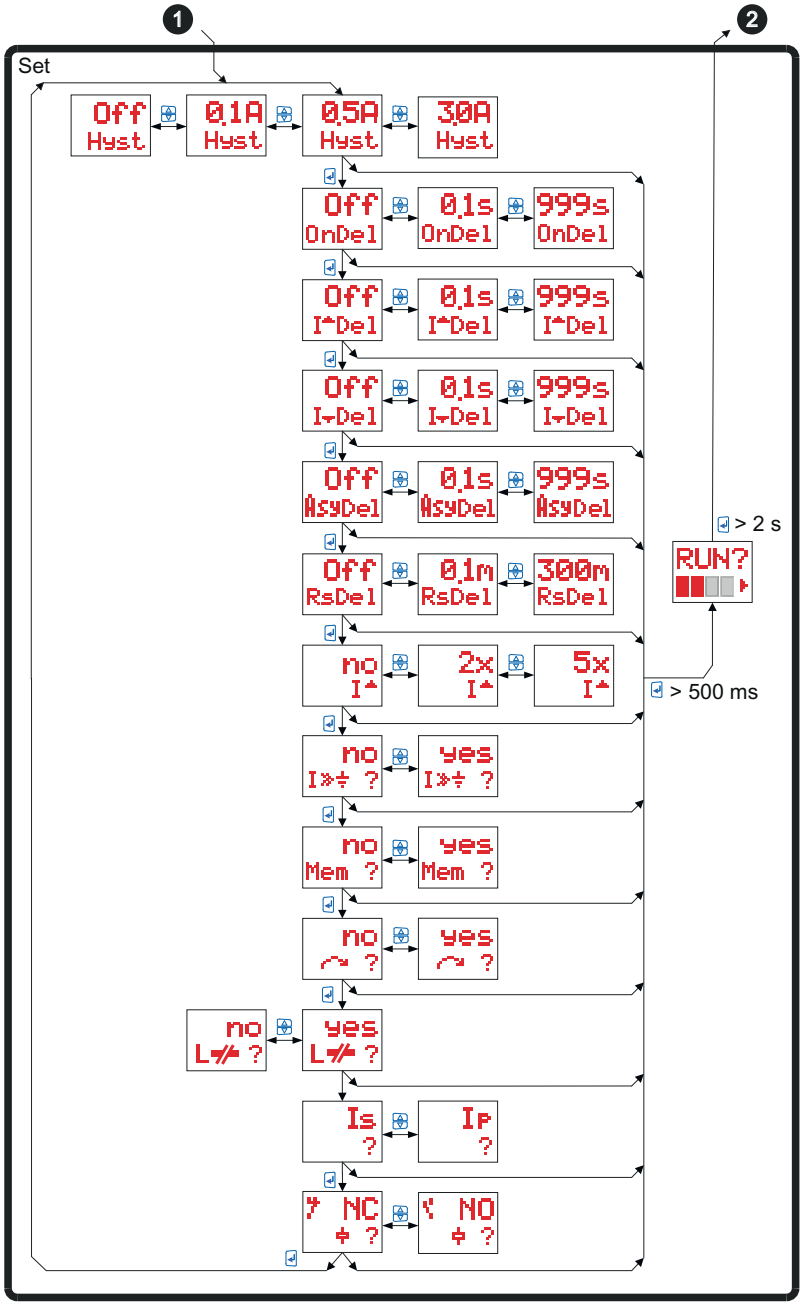
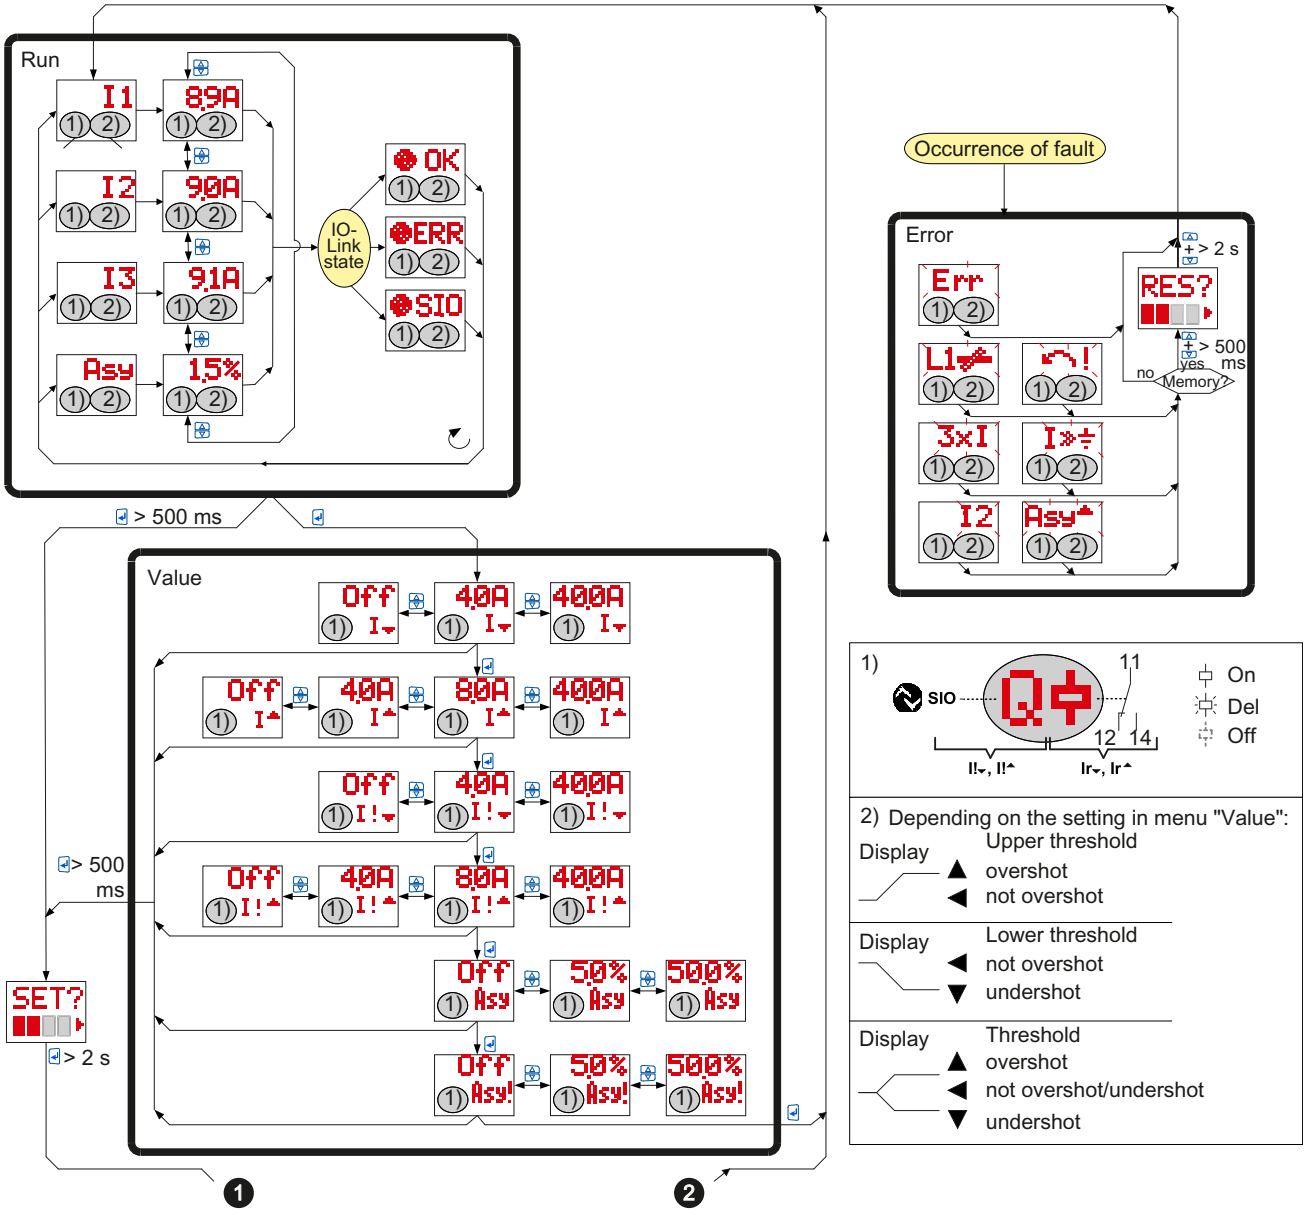


Figure D-1 Menu-based operation 3RR2441

3RR2442


Run
I1
8.9A
I2
9.0A
I3
9.1A
Asy
1.5%
IO-Link state
OK
ERR
SIO
> 500 ms
Value
Off
4.0A
40.0A
80.0A
Off
Asy
5.0%
50.0%
Asy!
> 500 ms
SET?
> 2 s
Occurrence of fault
Error
Err
RES?
> 2 s
> 500 ms
yes
no
Memory?
L1
3xI
I2
Asy
1)
SIO
11
12
14
On
Del
Off
2) Depending on the setting in menu "Value":
Display
Upper threshold
overshot
not overshot
Lower threshold
not overshot
undershot
Threshold
overshot
not overshot/undershot
undershot
1
2

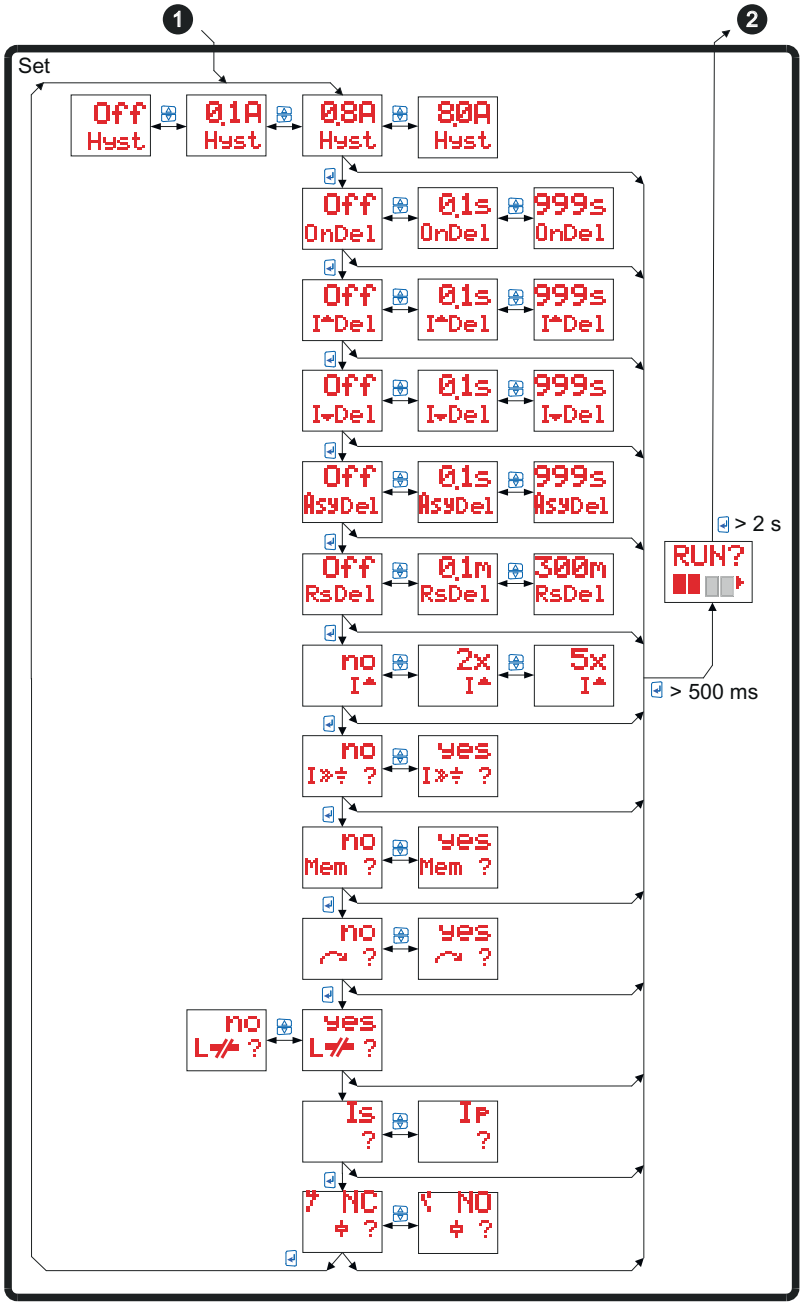
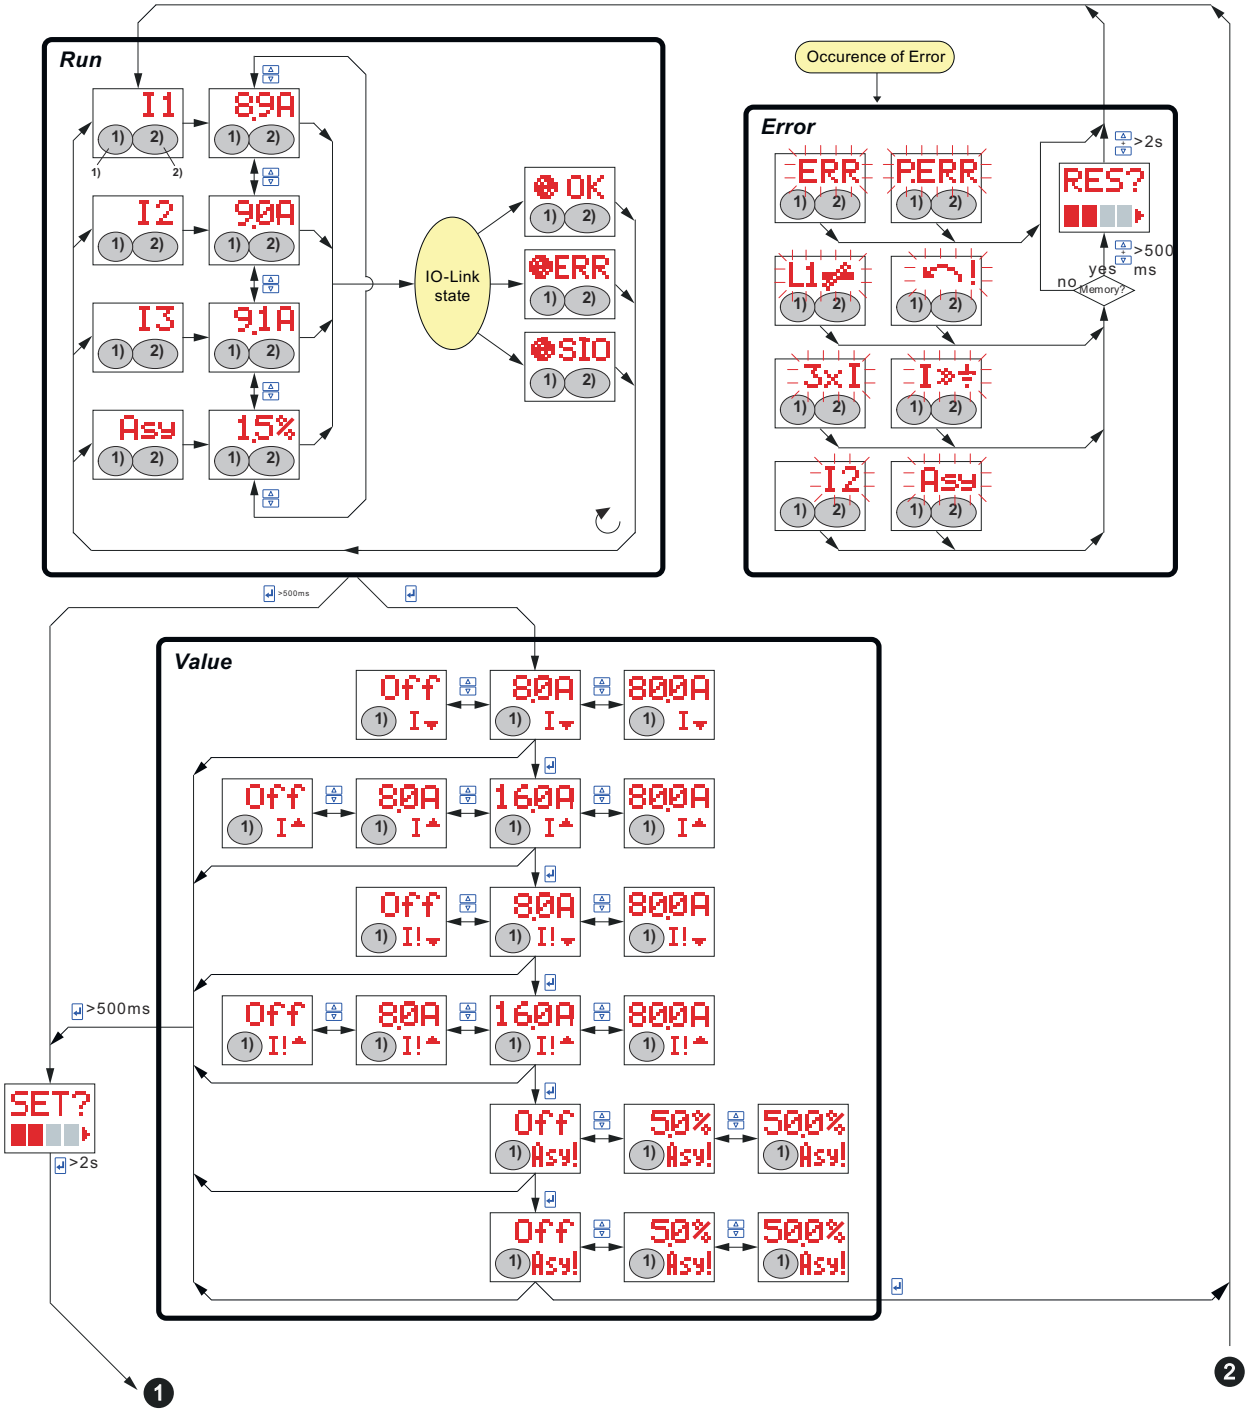


Figure D-2 Menu-based operation 3RR2442

3RR2443


Run
I1
8.9A
I2
9.0A
I3
9.1A
Asy
15%
IO-Link state
OK
ERR
SIO
Occurence of Error
Error
ERR
PERR
RES?
>2s
>500 ms
yes
no
Memory?
L1
I!
3xI
I»÷
I2
Asy
>500ms
Value
Off
8.0A
800A
16.0A
I
I!
Asy!
50%
500%
SET?
>2s
1
2

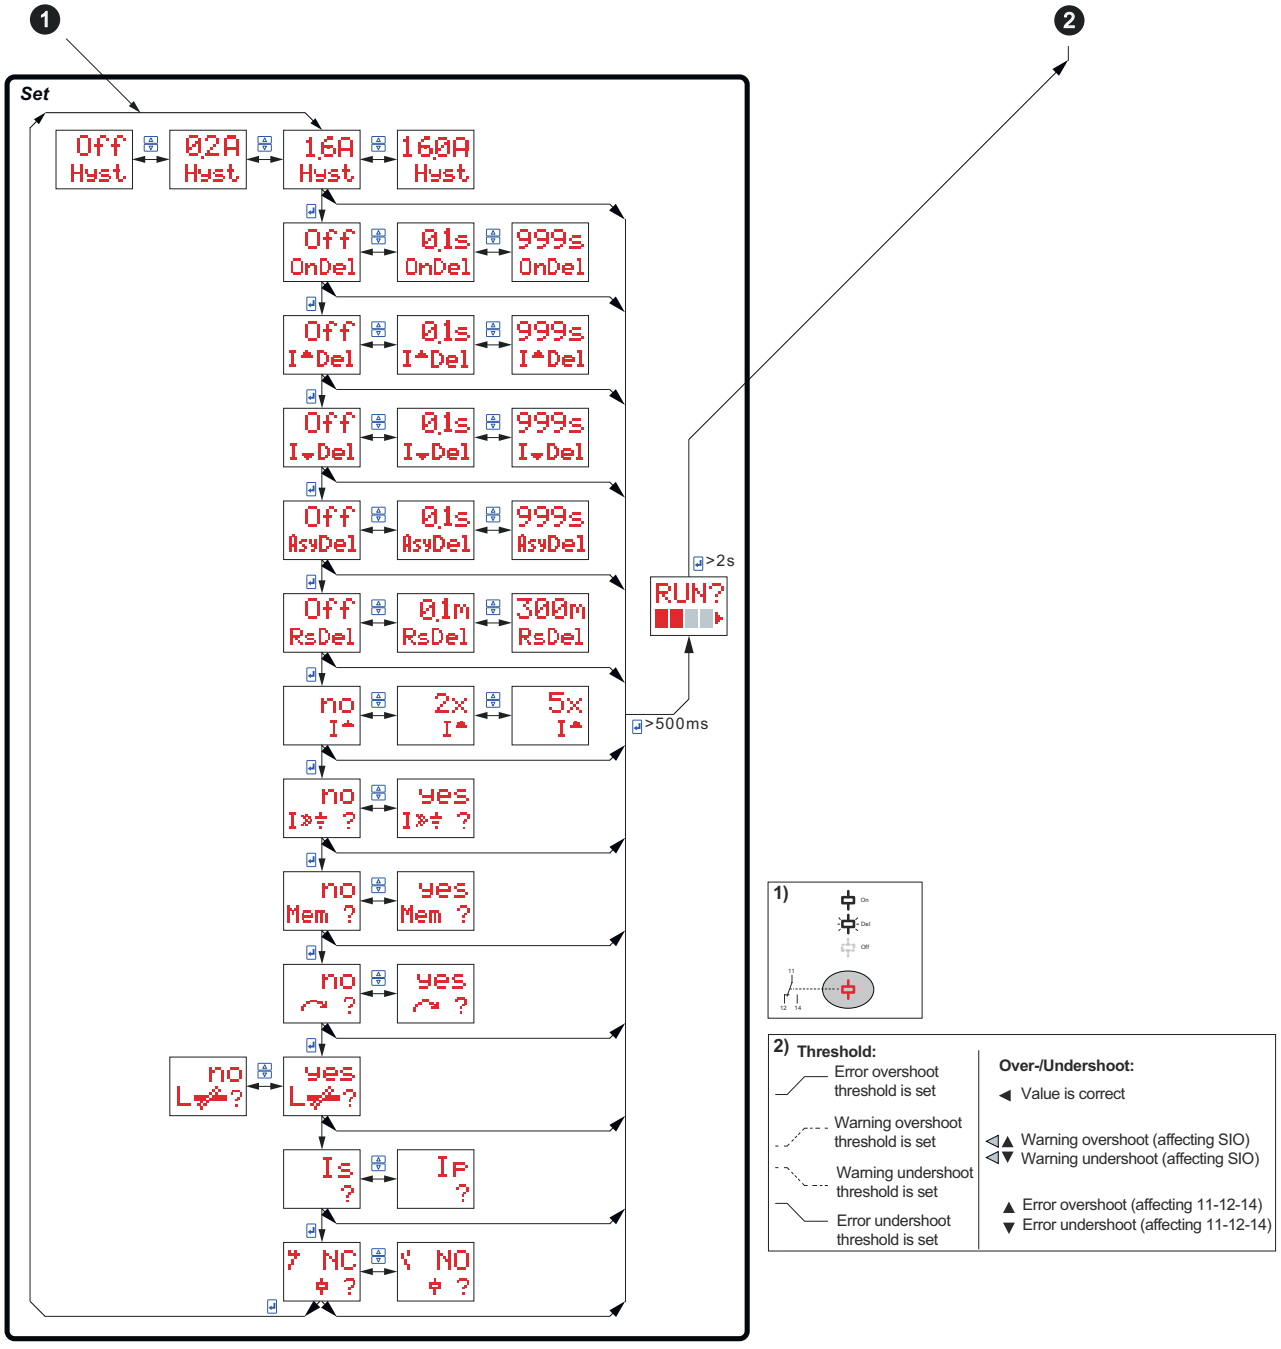


Figure D-3 Menu-based operation 3RR2443

3UG4815

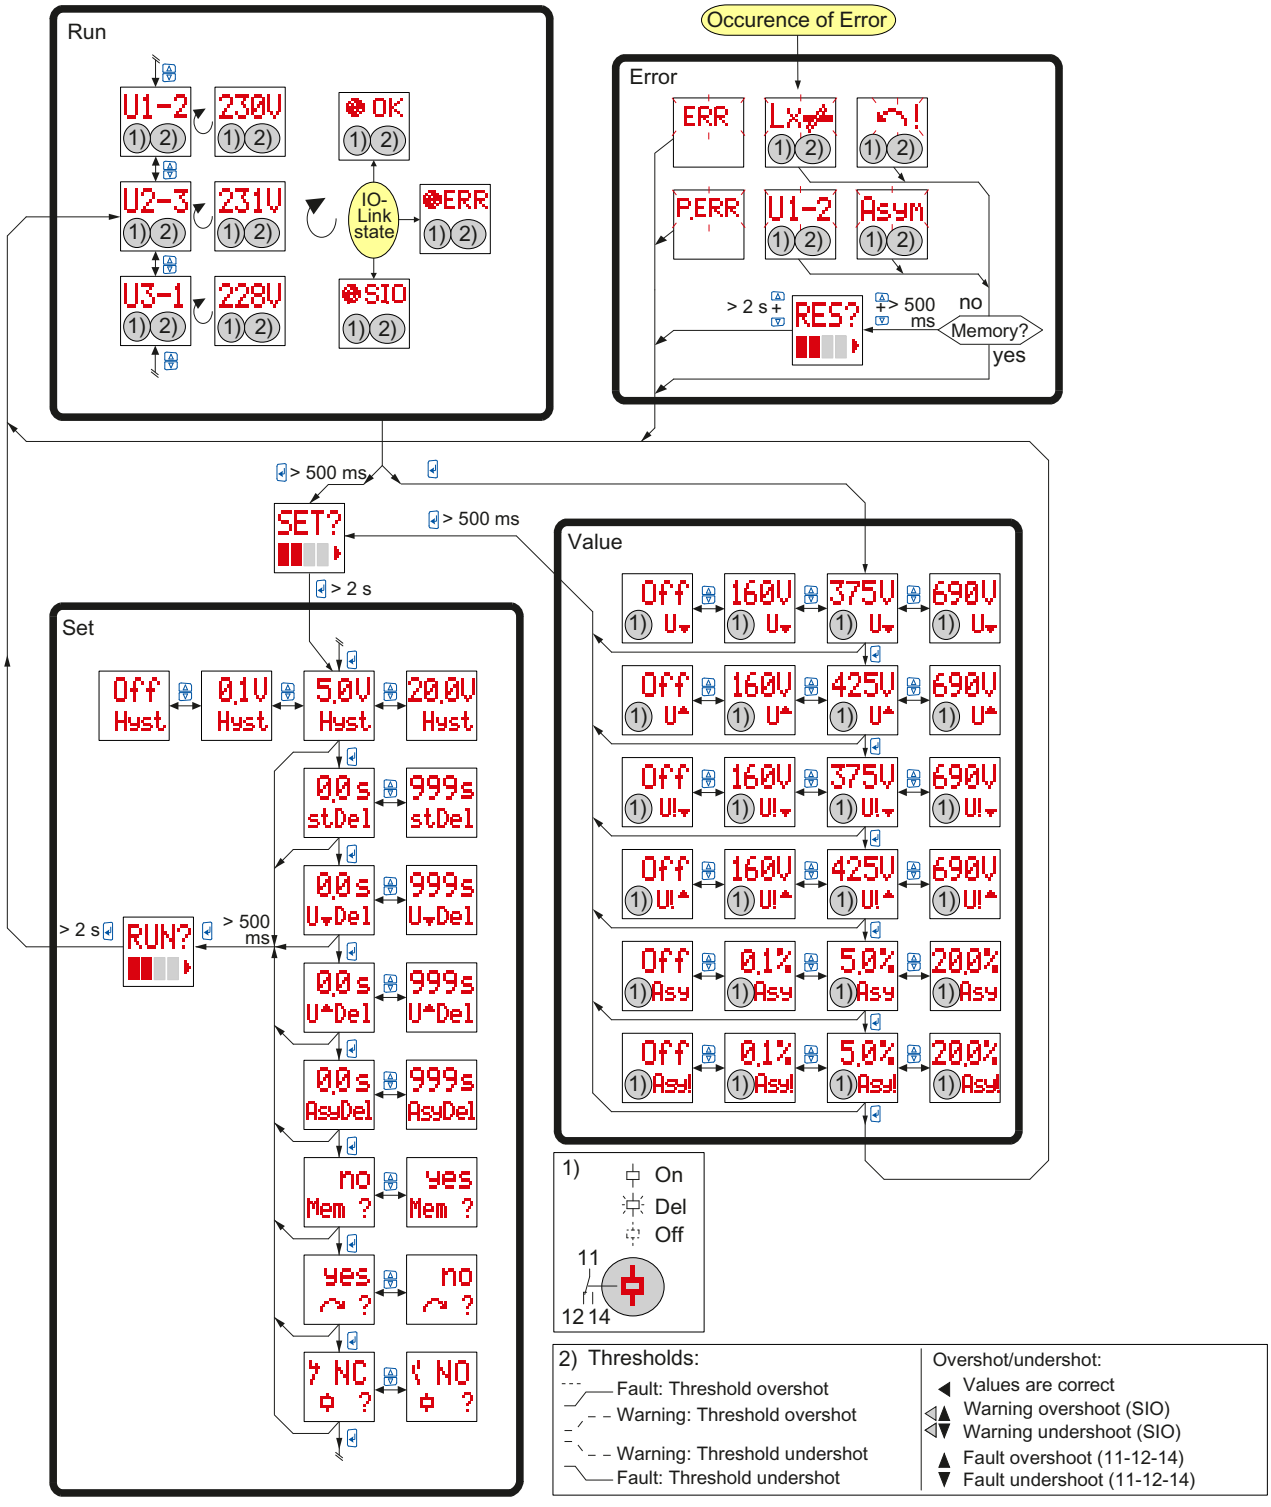


Figure D-4 Menu-based operation 3UG4815

3UG4816

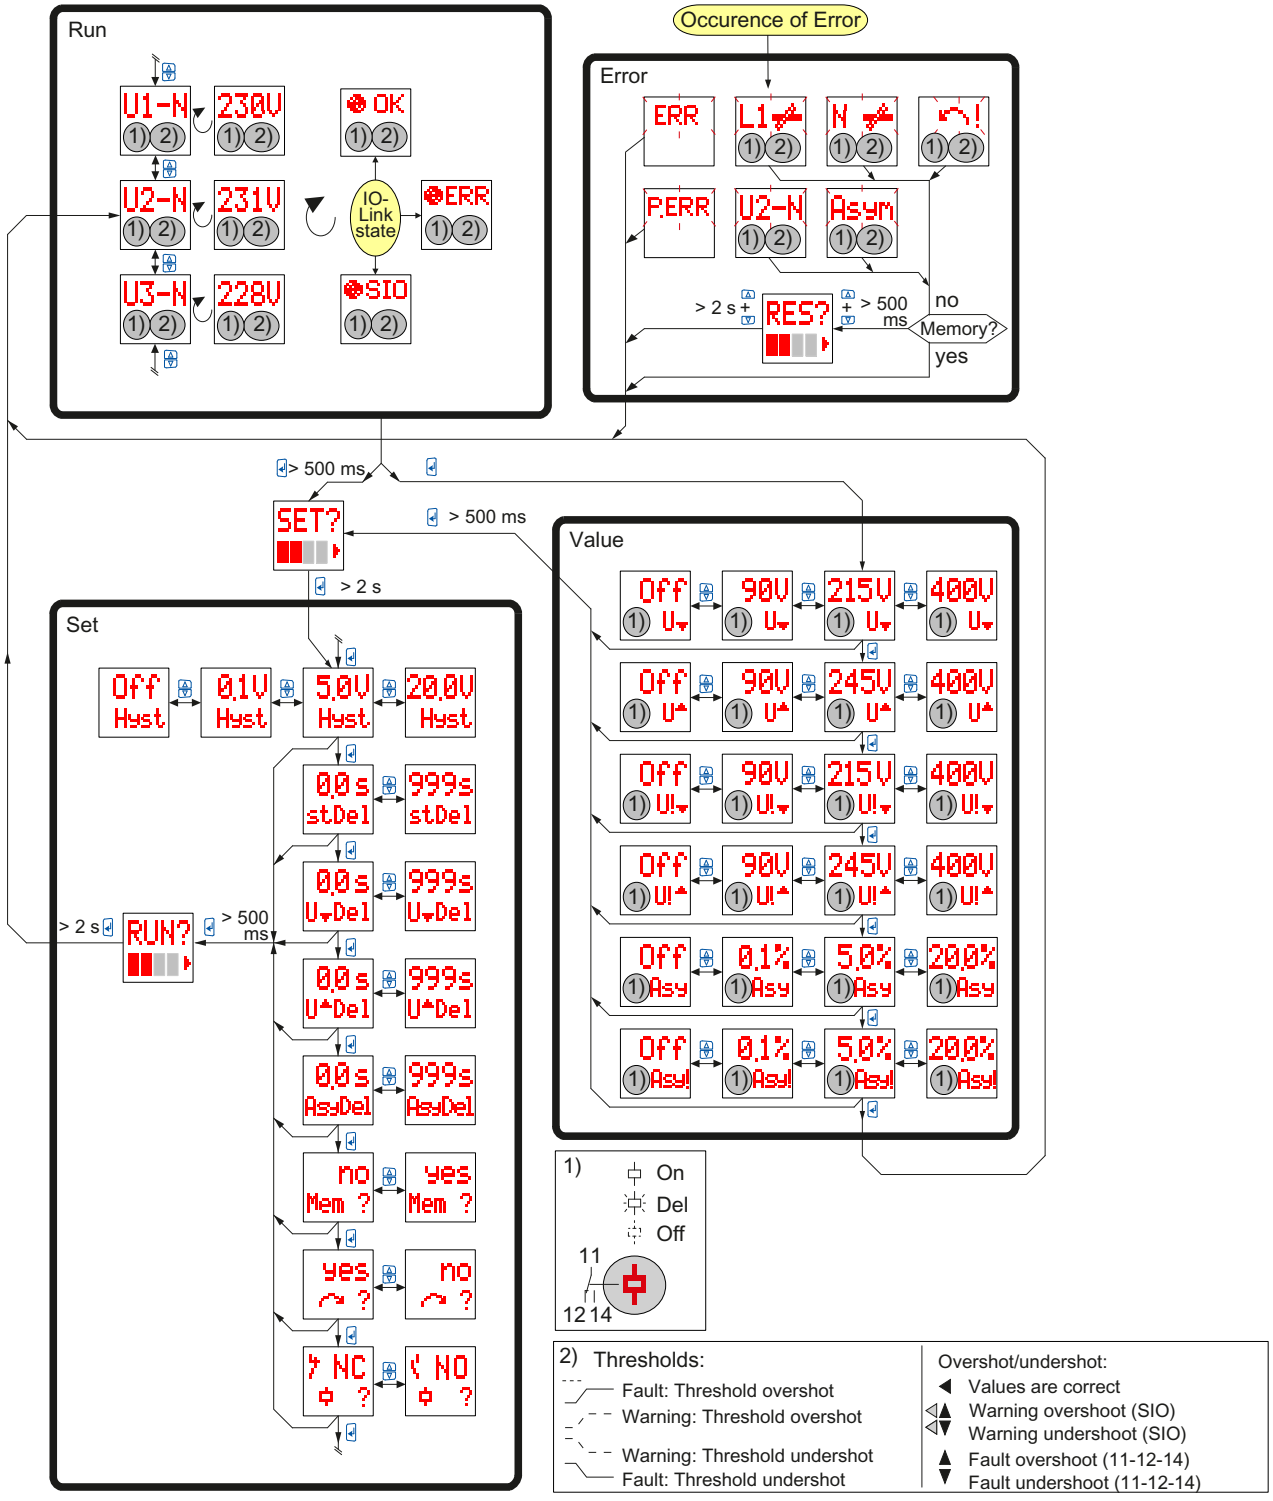


Figure D-5 Menu-based operation 3UG4816

3UG4822

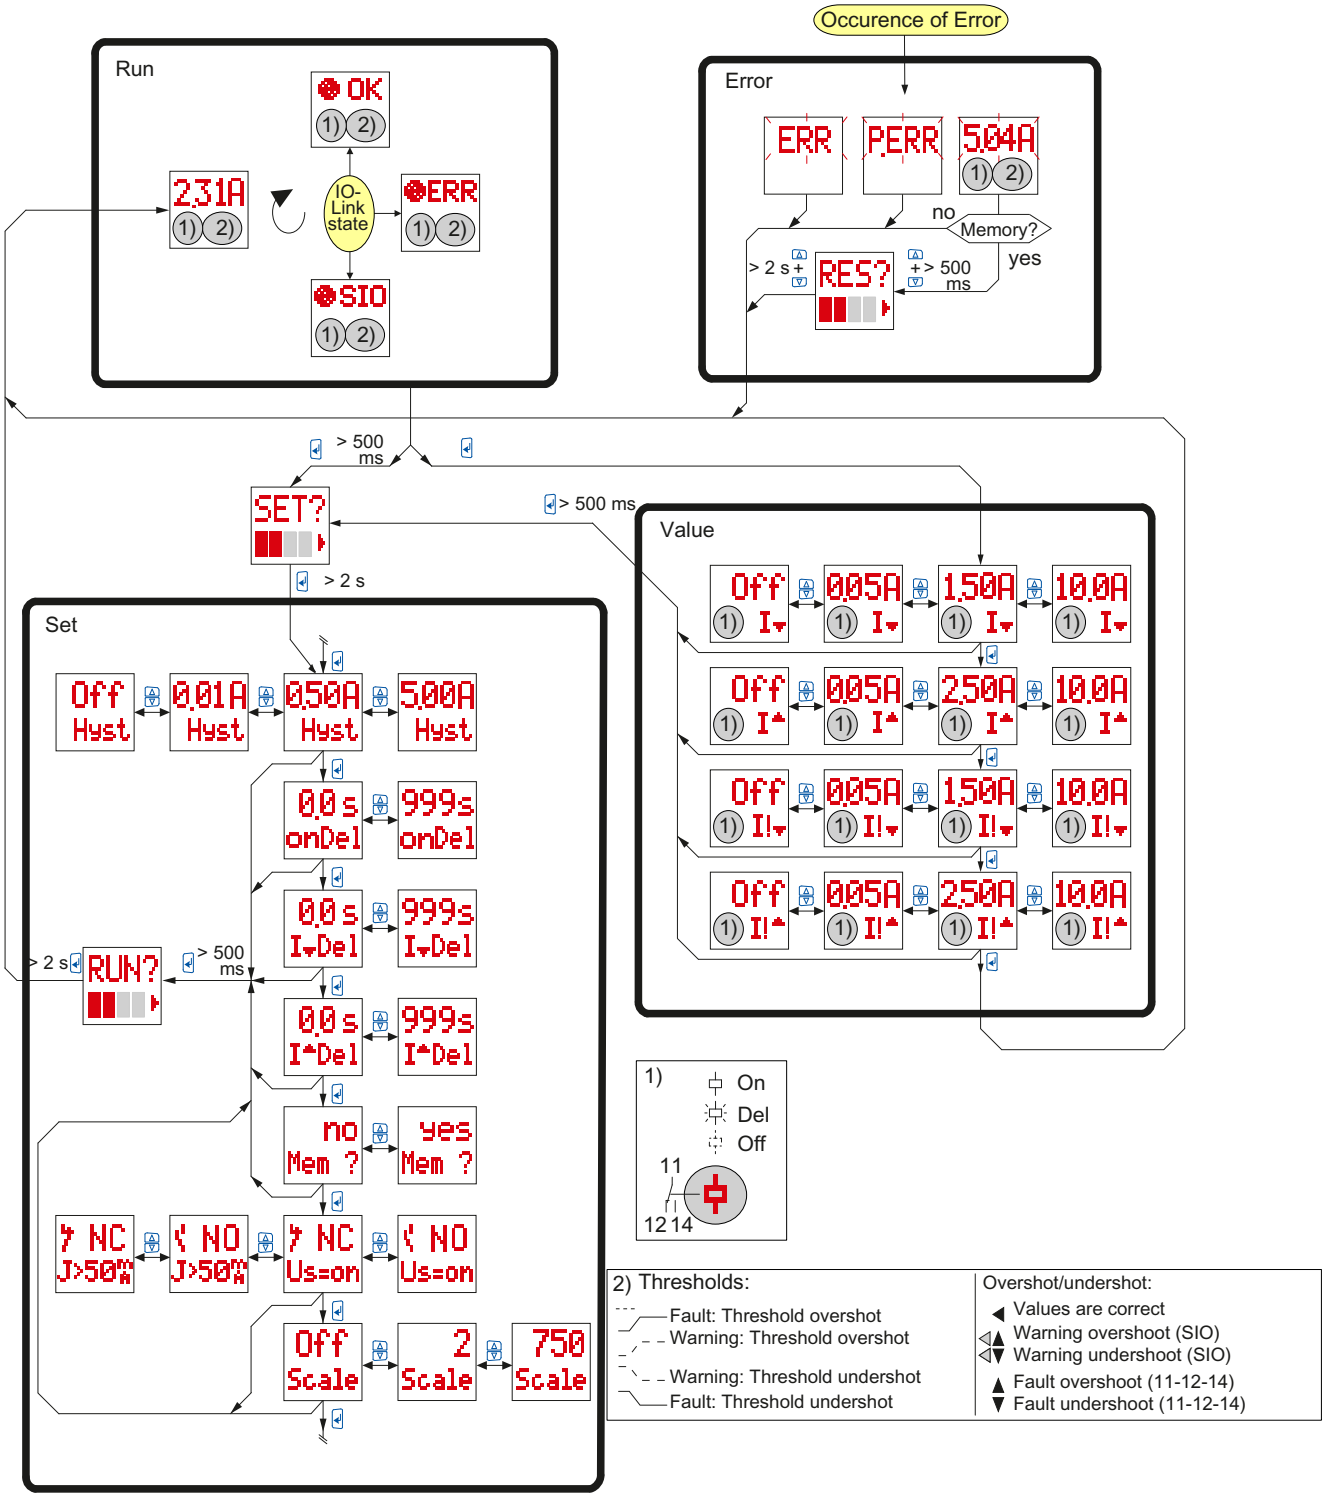


Figure D-6 Menu-based operation 3UG4822

3UG4825

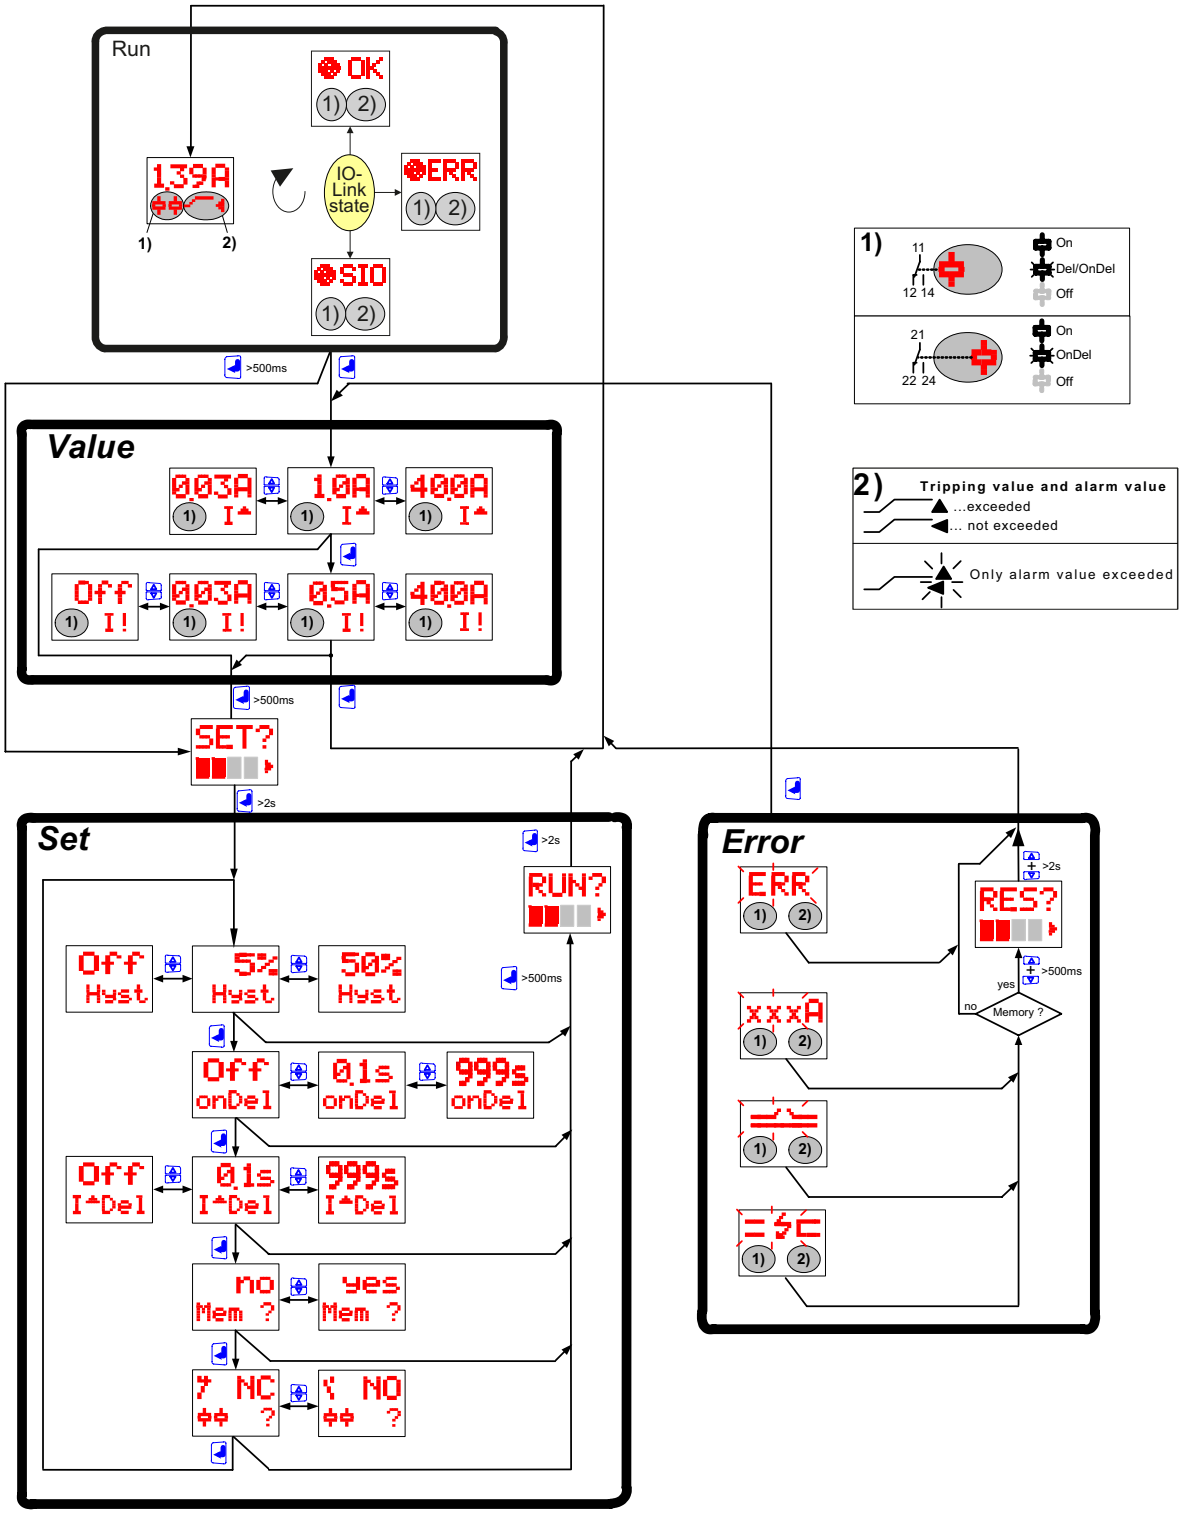


Figure D-7 Menu-based operation 3UG4825

3UG4832

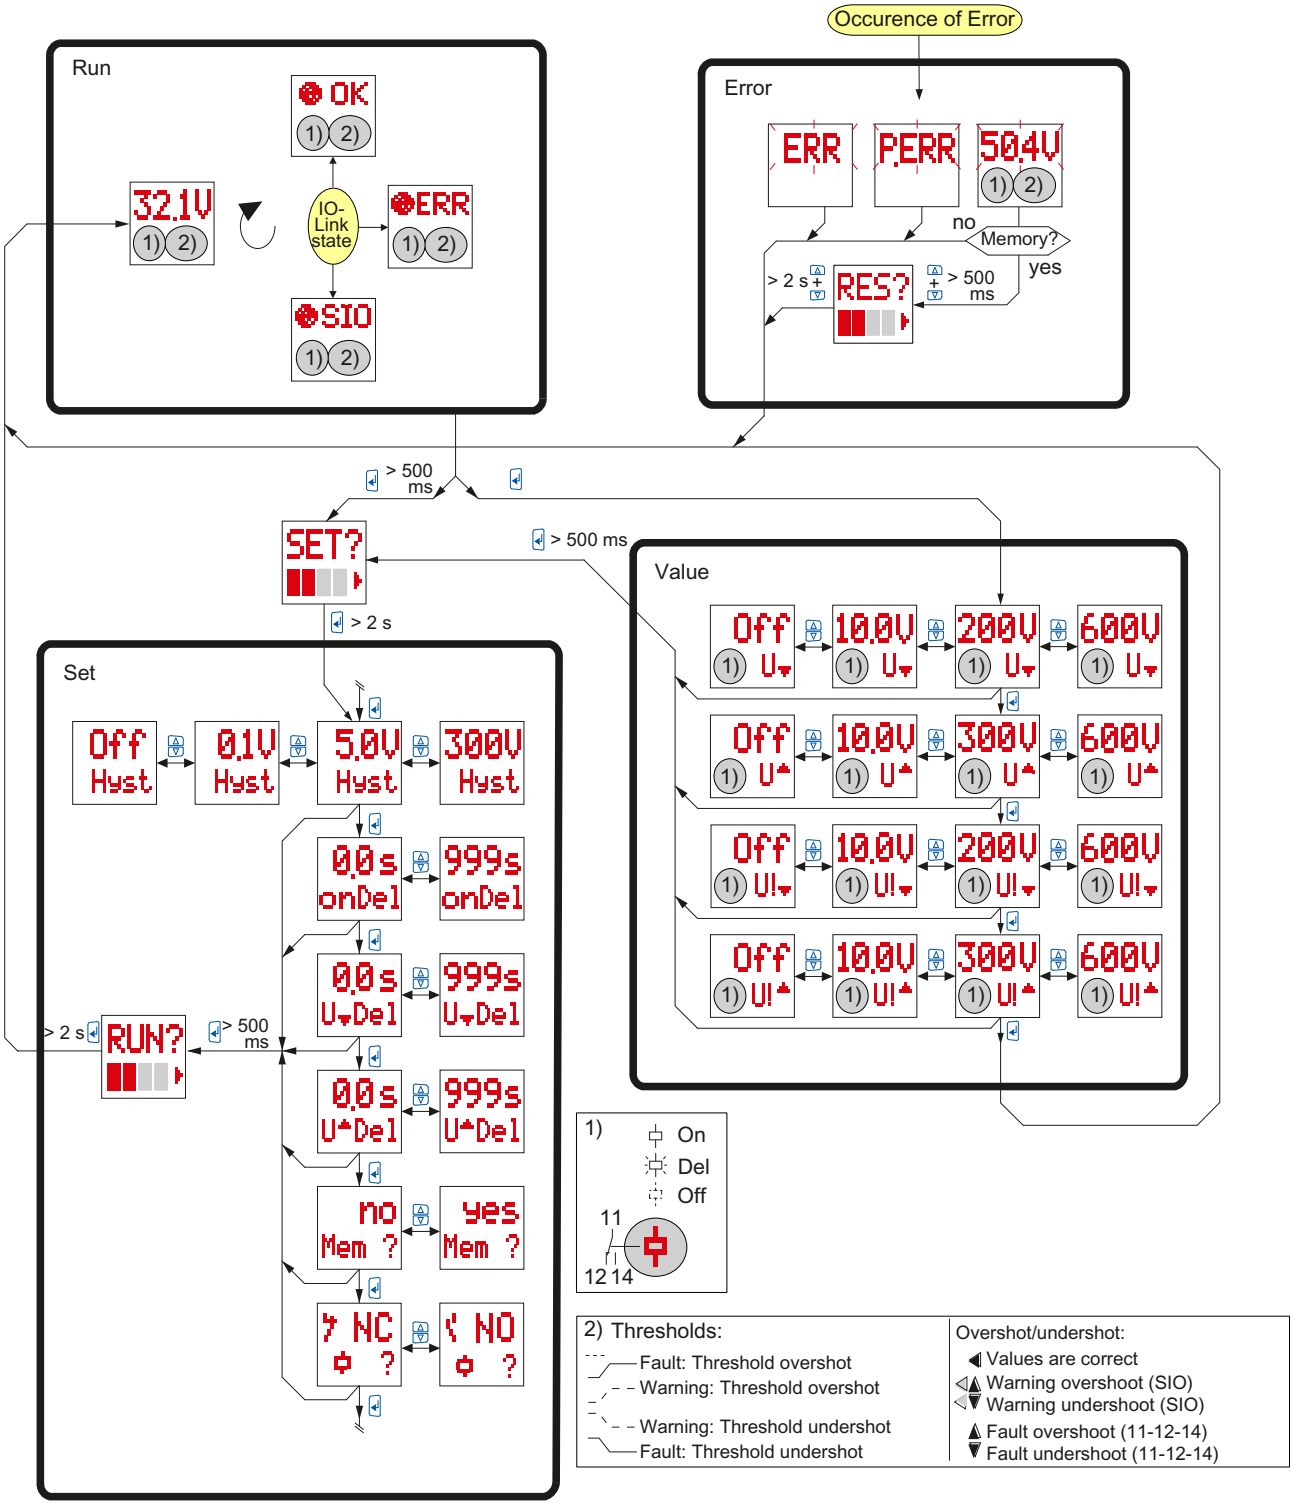


Figure D-8 Menu-based operation 3UG4832

3UG4841

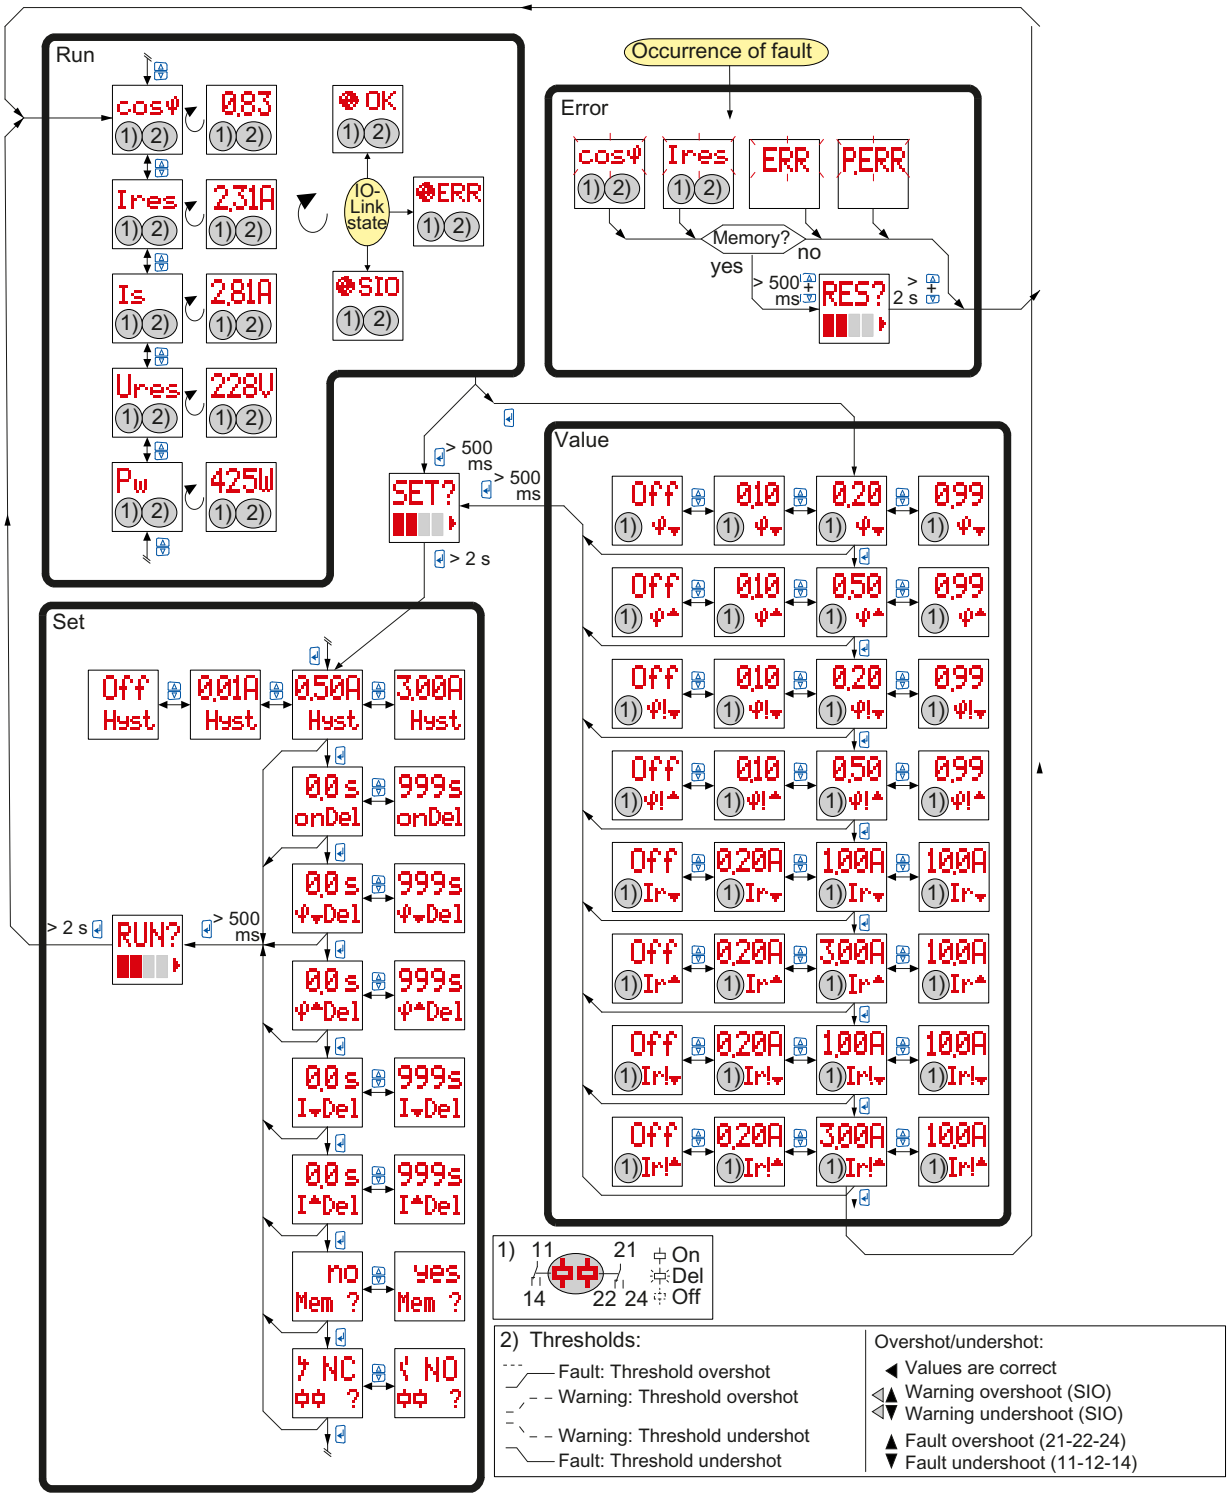


Figure D-9 Menu-based operation 3UG4841

3UG4851

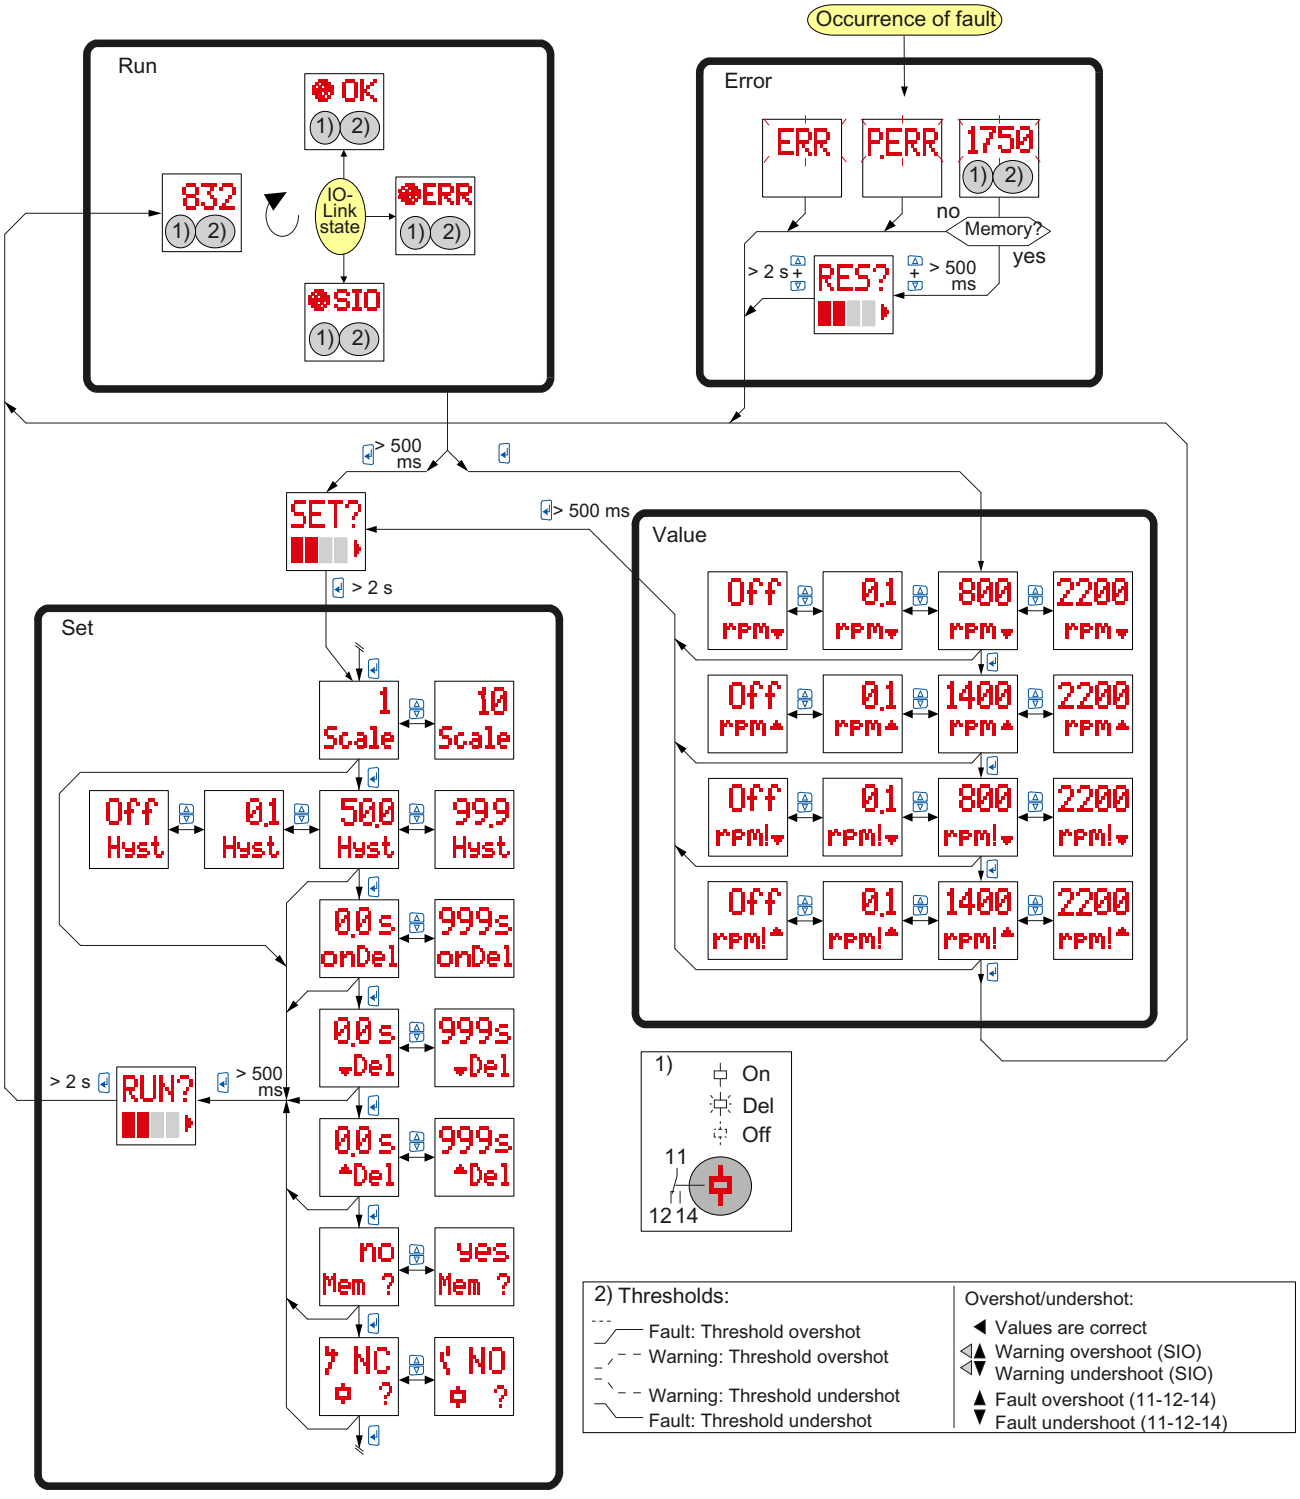


Figure D-10 Menu-based operation 3UG4851

Process data and data sets

E

E.1 Structure of the data sets

Table E-1 Device-independent data sets

Data set		Name	Access	Value	Length (bytes)
Address (dec)	**Subindex supported**				
0x00 (0)	Yes	**Parameter Page 0**	r	—	16
0x10 (16)	No	Vendor Name	r	Siemens AG	11
0x11 (17)	No	Vendor Text	r	Internet (http://support.automation.siemens.com/WW/view/en/29801139/130000)	64 max.
0x12 (18)	No	Product Name	r	*Device name*[1] (e.g. SIRIUS Line Monitoring Relay for IO-Link)	64 max.
0x13 (19)	No	Product ID	r	*Article number*[1] (e.g. 3UG4815-*AA40)	14
0x15 (21)	No	Serial Number	r	Place/Date Serial Number	16
0x16 (22)	No	Hardware Revision	r	*Hardware version* [1]	7
0x17 (23)	No	Firmware Revision	r	*Firmware version* [1]	7
0x18 (24)	No	Application Specific Name	r / w	—	max. 32[2]

[1] Value varies for each monitoring relay.

r: readable

w: writeable

[2] For 3RR244x firmware version 1.x, the max. value of 64 bytes applies.

E.2 IO-Link communication parameters

Table E-2 Parameter Page 0 - IO-Link communication parameters

Address	Name	Access	Description
0x00	Master Command	r / w	—
0x01	Master Cycle Time	r / w	—
0x02	Min. Cycle Time	r	0x49
0x03	M-Sequence Capability	r	0x2B[1)]
0x04	IO-Link Revision ID	r	0x11
0x05	Process data IN	r	0xCD[2)]
0x06	Process data OUT	r	0x10
0x07	Vendor ID 1	r	0x00
0x08	Vendor ID 2	r	0x2A
0x09	Device ID 1	r	Device-specific
0x0A	Device ID 2	r	Device-specific
0x0B	Device ID 3	r	Device-specific
0x0C	Function ID 1	r	0x00
0x0D	Function ID 2	—	0x00
0x0E	Reserved	—	—
0x0F	Reserved	—	—

1) For 3RR244x firmware version 1.x and all other 3UG4 devices, the value 0x11 applies.

2) For 3RR244x firmware version 1.x and all other 3UG4 devices, the value 0xC3 applies.

E.3 Analog value coding

Analog value coding

The table below shows the coding for the value as unit and resolution of the analog measured values to be transferred, as well as the assignment to the relevant monitoring relays.

Table E-3 Analog value coding

Coding	Meaning	Unit	Resolution	3RR24	3UG48						
					15	16	22	25	32	41	51
13	Revolutions per minute RPM	1 / min	1								✓
14	Residual current Ir	A	0.1					✓			
15	Residual current Ir	mA	0.1					✓			
16	Apparent current I / I1	A	0.01	✓			✓			✓	
17	Apparent current I2	A	0.01	✓							
18	Apparent current I3	A	0.01	✓							
19	Apparent current I1-I2-I3 min.	A	0.01	✓							
20	Apparent current I1-I2-I3 max.	A	0.01	✓							
21	Apparent current I1-I2-I3 avg.	A	0.01	✓							
28	Active current Ires / I1	A	0.01	✓						✓	
29	Active current I2	A	0.01	✓							
30	Active current I3	A	0.01	✓							
31	Active current I1-I2-I3 min.	A	0.01	✓							
32	Active current I1-I2-I3 max.	A	0.01	✓							
33	Active current I1-I2-I3 avg.	A	0.01	✓							
40	Active power	W	0.1							✓	
41	Active power[1)]	W	10	✓							
42	Apparent power[1)]	VA	10	✓							
43	Power factor / Cos phi		0.01	✓						✓	
44	Voltage U	V	0.1	✓					✓	✓	
45	Voltage L1-L2 / L1-N	V	0.1		✓	✓					
46	Voltage L2-L3 / L2-N	V	0.1		✓	✓					
47	Voltage L3-L1 / L3-N	V	0.1		✓	✓					
48	Voltage Lx-Ly max / Lx-N max	V	0.1		✓	✓					
49	Voltage Lx-Ly min / Lx-N min	V	0.1		✓	✓					

Coding	Meaning	Unit	Resolution	3RR24	3UG48						
					15	16	22	25	32	41	51
51	Current asymmetry (according to IEC/NEMA definition)	%	0.1	✓							
52	Current asymmetry (as defined by Siemens)	%	0.1	✓							
54	Voltage asymmetry (as defined by Siemens)	%	0.1		✓	✓					

[1] Supported from firmware version 2.x

Note

Entering the relevant value in the "Analog value coding" parameter defines which measured value will be cyclicly transmitted via IO-Link in the process input image (PII). Because this change is also possible during operation, the valid coding for analog value is also transmitted.

E.4 3RR24 current monitoring relays

Compatibility mode

The current firmware of the devices is firmware 2.x.

If a device with firmware 1.x is replaced with a device with firmware 2.x, it runs in compatibility mode and behaves like a device with firmware 1.x.

If a device with firmware 2.x is used with the current IODD, the device behaves as follows. Then, for example, 4 analog values are available in the cyclic process image. If it is used with IODD for firmware 1.x, it behaves like a device with firmware 1.x.

Process image of the outputs (PIQ)

The process image output contains the control commands for the 3RR24 current monitoring relays.

Table E-4 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process image input contains the most important status information of the 3RR24 current monitoring relays.

Table E-5 PII - status information for firmware version 2.x

DI (4 bytes)	PII
DI0.0	Ready
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI2.0 ... 2.7	Analog value coding 1 (see chapter Analog value coding (Page 235))
DI3.0 ... 3.7	Analog value coding 2 (see chapter Analog value coding (Page 235))
DI4.0 ... 4.7	Analog value coding 3 (see chapter Analog value coding (Page 235))
DI5.0 ... 5.7	Analog value coding 4 (see chapter Analog value coding (Page 235))

DI (4 bytes)	PII
DI6.0 ... 7.7	Analog value 1[2)]
DI8.0 ... 9.7	Analog value 2
DI10.0 ... 11.7	Analog value 3
DI12.0 ... 13.7	Analog value 4

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog values are a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Table E-6 PII - status information for firmware version 1.x

DI (2 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0	Analog value coding bit 0
DI1.1	Analog value coding bit 1
DI1.2	Analog value coding bit 2
DI1.3	Analog value coding bit 3
DI1.4	Analog value coding bit 4
DI1.5	Analog value coding bit 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Table E-7 Identification data of the 3RR24 current monitoring relays

DPP [1]	Data set	Access	Parameter	Length (bytes)	Default setting
Index (dec)	Index (dec)				
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			**Firmware version 2.x** 0x72 (for S00) 0x82 (for S0) 0x92 (for S2) **Firmware version 1.x** 0x71 (for S00) 0x81 (for S0) 0x91 (for S2)
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/29801139/130000)
—	0x12 (18)	r	Product Name	64 max.	S00: SIRIUS 3RR2441 3ph Current Monitoring Relay for IO-Link S0: SIRIUS 3RR2442 3ph Current Monitoring Relay for IO-Link S2: SIRIUS 3RR2443 3ph Current Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3RR2441-1AA40 3RR2441-2AA40 3RR2442-1AA40 3RR2442-2AA40 3RR2443-1AA40 3RR2443-3AA40
—	0x15 (21)	r	Serial Number	16	Place/Date Serial Number[2]
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

Data set (index) 2 - system commands

Table E-8 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1]	1	—

[1] Permissible system commands:

0x80 for device reset

0x81 reset for application

0x82 for factory reset

0x83 for back to box (only from firmware version 2.x)

Permitted manufacturer-specific system commands:

0xA0 for operating cycles counter reset
0xA1 for operating hours counter reset

Data set (index) 12 – Device access locks[1]

Table E-9 Data set (index) 12 – Device access locks

Byte.Bit	Description
Device access locks	
0.0	Parameter write access This lock prevents write access to all write/read parameters of the device with the exception of the parameter 'device access locks'.
0.1	Data storage This lock prevents write access to the device parameters via the data storage mechanisms.
0.2	Local parameterization This lock prevents the device settings from being changed via the local operator controls on the device

Byte.Bit	Description
Device access locks	
0.3	Local user interface The lock prevents access to the device settings and device displays via a local user interface on the device. The user interface is deactivated.
0.4 ... 1.7	Reserved

[1] Only applies from firmware version 1.x or from firmware version 2.x in compatibility mode.

Note

The following data sets can be read:

- Process data input (index) 40
- Process data output (index) 41
- Process data output (index) 67
- Process data input (index) 69

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Table E-10 Data set (index) 92 - diagnostics

Byte.Bit	Subindex	Description
Operating system functions 3RR24		
0.0 ... 15.7	1 ... 3	*Reserved*
16.0	4	Ready
16.1	5	Group error
16.2	6	Group warning
16.3	7	*Reserved*
16.4	8	*Reserved*
16.5	9	Parameter assignment active
16.6	10	Invalid parameter
16.7	11	Self-test error/internal error
18.0 ... 19.7	12	Parameter error number
20.0 ... 25.7	13	*Reserved*
Current monitoring		
26.0	14	ON-delay time running
26.1	15	Tripping delay time running (threshold for overshoot)
26.2	16	Tripping delay time running (threshold for undershoot)
26.3	17	Tripping delay time running (threshold for current asymmetry)
26.4	18	Reclosing delay time is running

Byte.Bit	Subindex	Description
27.0	19	Threshold for overshoot exceeded
27.1	20	Threshold for undershoot violated
27.2	21	Threshold for current asymmetry exceeded
27.3	22	Warning threshold for overshoot exceeded
27.4	23	Warning threshold for undershoot violated
27.5	24	Warning threshold for current asymmetry exceeded
27.6	25	*Reserved*
27.7	26	*Reserved*
28.0	27	*Reserved*
28.1	28	Phase failure L1
28.2	29	Phase failure L2
28.3	30	Phase failure L3
28.4	31	Overcurrent n x I_{max} L1
28.5	32	Overcurrent n x I_{max} L2
28.6	33	Overcurrent n x I_{max} L3
29.0	34	Threshold for fault current exceeded
29.1	35	Phase sequence L1-L2-L3
29.2	36	Phase sequence L3-L2-L1
29.3	38	Phase sequence error

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Table E-11 Data set (index) 94 (measured values)[1)]

Byte.Bit	Subindex	Description
Current monitoring		
0.0 ... 15.7	1 ... 3	*Reserved*
16.0 ... 17.7	4	Active current L1
18.0 ... 19.7	5	Active current L2
20.0 ... 21.7	6	Active current L3
22.0 ... 23.7	7	Active current min.
24.0 ... 25.7	8	Active current max.
26.0 ... 27.7	9	Active current avg.
28.0 ... 29.7	10	Apparent current L1
30.0 ... 31.7	11	Apparent current L2
32.0 ... 33.7	12	Apparent current L3
34.0 ... 35.7	13	Apparent current min.
36.0 ... 37.7	14	Apparent current max.

Byte.Bit	Subindex	Description
38.0 ... 39.7	15	Apparent current avg.
40.0 ... 41.7	16	Active voltage
42.0 ... 43.7	17	cos phi value
44.0 ... 45.7	18	Asymmetry Siemens
46.0 ... 47.7	19	Asymmetry IEC/NEMA
48.0 ... 51.7	20	Switching cycle counter
52.0 ... 55.7	21	Operating hours counter
56.0 ... 57.7	22	Active power[1)]
58.0 ... 59.7	23	Apparent power[1)]

[1)] Supported from firmware version 2.x

Note

Switching cycle counter and operating hours counter

The two counter values are available only in data set 94 and cannot be transmitted cyclically in the process image.

Note

If a measured value is outside the measuring range, all measured values dependent on it will be set to 7FFF (invalid value).

Data set (index) 95 (measured values - floating point)

Data set 95 contains the same values as data set 94 in floating-point format. The values are stated with a high resolution and precision.

Note

Data set 95 is supported from firmware version 2.x.

Table E-12 Data set (index) 95 (measured values - floating point)

Byte.Bit	Subindex	Description
Current monitoring		
0.0 ... 15.7	1 ... 3	*Reserved*
16.0 ... 19.7	4	Active current L1
20.0 ... 23.7	5	Active current L2
24.0 ... 27.7	6	Active current L3
28.0 ... 31.7	7	Active current min.
32.0 ... 35.7	8	Active current max.
36.0 ... 39.7	9	Active current avg.
40.0 ... 43.7	10	Apparent current L1

Byte.Bit	Subindex	Description
44.0 ... 47.7	11	Apparent current L2
48.0 ... 51.7	12	Apparent current L3
52.0 ... 55.7	13	Apparent current min.
56.0 ... 59.7	14	Apparent current max.
60.0 ... 63.7	15	Apparent current avg.
64.0 ... 67.7	16	Active voltage
68.0 ... 71.7	17	cos phi value
72.0 ... 75.7	18	Asymmetry Siemens
76.0 ... 79.7	19	Asymmetry IEC/NEMA
80.0 ... 83.7	20	Switching cycle counter
84.0 ... 87.7	21	Operating hours counter
88.0 ... 91.7	22	Active power
92.0 ... 95.7	23	Apparent power

Data set (index) 131 (parameter), firmware version 2.x

Note

Bits that are not described in the tables below are reserved and should be ignored.

Table E-13 Data set (index) 131 (parameter), firmware version 2.x

Byte.Bit	Subindex	Description
Operating system functions		
0.0 ... 15.7	1 ... 3	*Reserved*
16.0	4	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	5	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	6	*Reserved*
16.3	7	*Reserved*
16.4	8	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	9	Local parameter change Default: [1] [0] disabled [1] enabled

Byte.Bit	Subindex	Description
16.6	10	Local reset Default: [1] [0] disabled [1] enabled
16.7	11	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	12	Analog value coding value 1 Default: [20]
18.0 ... 18.7	13	Analog value coding value 2 Default: [43]
Current monitoring		
19.0 ... 19.7	14	Analog value coding value 3 Default: [44]
20.0 ... 20.7	15	Analog value coding value 4 Default: [51]
28.0	17	Reset response Default: [1] [0] manual [1] automatic
29.0	19	ON-delay time (at power-on) Default: [1] [0] disabled [1] enabled
29.2	20	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
29.4	21	ON-delay time (on restart) Default: [1] [0] disabled [1] enabled
30.0	22	Phase failure monitoring Default: [1] [0] disabled [1] enabled
30.2	23	Phase sequence monitoring Default: [0] [0] disabled [1] enabled
30.4	24	Load current monitoring (apparent current I_S/active current I_P) Default: [0] [0] I_S - apparent current [1] I_p - active current
30.6	25	Residual current monitoring Default: [0] [0] disabled [1] enabled

Byte.Bit	Subindex	Description		
31.0	26	Asymmetry algorithm Default: [0] [0] Siemens [1] IEC/NEMA		
32.0 ... 33.7	27	ON-delay time Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
34.0 ... 35.7	28	Tripping delay time (in the case of current overshoot) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
36.0 ... 37.7	29	Tripping delay time (in the case of current undershoot) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
38.0 ... 39.7	30	Tripping delay time (in the case of current asymmetry) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
40.0 ... 41.7	31	Reclosing delay time Type: INT16 Resolution: 0.1 min = 1 Default: 0 Min: 1 or 0 (disabled) Max: 3000 * 0.1 min = 300 min.		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
42.0 ... 43.7	32	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 3 Min: 1.6 or 0 (disabled) Max: 160 * 0.1 A = 16 A	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 4.0 or 0 (disabled) Max: 400 * 0.1 A = 40 A	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 16 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
44.0 ... 45.7	33	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 1.6 Min: 1.6 or 0 (disabled) 160 * 0.1 A = 16 A	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 4.0 Min: 4.0 or 0 (disabled) 400 * 0.1 A = 40 A	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A

Byte.Bit	Subindex	Description		
46.0 ... 47.7	34	Threshold for current asymmetry Type: INT16 Resolution: 0.1% = 1 Default: 0 Min: 50 Max: 500		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
48.0 ... 49.7	35	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 3 Min: 1.6 or 0 (disabled) Max: 160 * 0.1 A = 16 A	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 4.0 or 0 (disabled) Max: 400 * 0.1 A = 40 A	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 16 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2**)
50.0 ... 51.7	36	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 1.6 Min: 1.6 or 0 (disabled) 160 * 0.1 A = 16 A	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 4.0 Min: 4.0 or 0 (disabled) 400 * 0.1 A = 40 A	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
52.0 ... 53.7	37	Warning threshold for current asymmetry Type: INT16 Resolution: 0.1% = 1 Default: 0 Min: 50 Max: 500		
54.0 ... 55.7	38	*Reserved*		
56.0 ... 57.7	39	*Reserved*		
58.0 ... 59.7	40	*Reserved*		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
60.0 ... 61.7	41	Hysteresis (current) Type: INT16 Resolution: 0.1 A = 1 Default: 0.5 Min: 0.1 or 0 (disabled) Max: 30 * 0.1 A = 3 A	Hysteresis (current) Type: INT16 Resolution: 0.1 A = 1 Default: 0.8 Min: 0.1 or 0 (disabled) Max: 80 * 0.1 A = 8 A	Hysteresis (current) Type: INT16 Resolution: 0.1 A Default: 1.6 Min: 0.1 or 0 (disabled) Max: 160 * 0.1 A = 16 A
62.0 ... 63.7	42	Blocking current monitoring [1)] Type: INT16 Default: [0] Min: 2 or 0 (disabled) Max: 5		

Byte.Bit	Subindex	Description
64.0 ... 64.7	43	*Reserved*
65.0	44	Relay switching behavior Default: [0] [0] Closed-circuit principle NC [1] Open-circuit principle NO

[1)] You can disable or enable blocking current monitoring. After enabling it, enter a factor between 2 and 5. It defines when blocking current monitoring trips.

Note

The hysteresis value of the threshold and the warning threshold for current asymmetry is fixed at 40% of the set threshold or warning threshold.

Data set (index) 131 (parameter), firmware version 1.x

Note

Bits that are not described in the tables below are reserved and should be ignored.

Table E-14 Data set (index) 131 (parameter), firmware version 1.x

Byte.Bit	Subindex	Description
Operating system functions		
0.0 ... 15.7	1 ... 3	*Reserved*
16.0	4	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	5	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	6	*Reserved*
16.3	7	*Reserved*
16.4	8	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	9	Local parameter change Default: [1] [0] disabled [1] enabled

Byte.Bit	Subindex	Description
16.6	10	Local reset Default: [1] [0] disabled [1] enabled
16.7	11	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	12	Analog value coding Type: BYTE Default: 20 Min: 0 (disabled) Max: 255
18.0 ... 23.7	13	*Reserved*
Current monitoring		
24.0 ... 24.1	14	Reset response Default: [1] [0] manual [1] automatic
24.2 ... *24.4*	15	*Reserved*
25.0 ... 25.1	16	ON-delay time (at power-on) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	17	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	18	ON-delay time (on restart) Default: [1] [0] disabled [1] enabled
26.0 ... 26.1	19	Phase failure monitoring Default: [1] [0] disabled [1] enabled
26.2 ... 26.3	20	Phase sequence monitoring Default: [0] [0] disabled [1] enabled
26.4 ... 26.5	21	Load current monitoring (apparent current I_S/active current I_P) Default: [0] [0] I_S - apparent current [1] I_p - active current
26.6 ... 26.7	22	Residual current monitoring Default: [0] [0] disabled [1] enabled

Byte.Bit	Subindex	Description		
27.0 ... 27.1	23	Asymmetry algorithm Default: [0] [0] Siemens [1] IEC/NEMA		
28.0 ... 29.7	24	ON-delay time Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
30.0 ... 31.7	25	Tripping delay time (in the case of current overshoot) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
32.0 ... 33.7	26	Tripping delay time (in the case of current undershoot) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
34.0 ... 35.7	27	Tripping delay time (in the case of current asymmetry) Type: INT16 Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s		
36.0 ... 37.7	28	Reclosing delay time Type: INT16 Resolution: 0.1 min = 1 Default: 0 Min: 1 or 0 (disabled) Max: 3000 * 0.1 min = 300 min.		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
38.0 ... 39.7	29	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 3 Min: 1.6 or 0 (disabled) Max: 160 * 0.1 A = 16 A	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 4.0 or 0 (disabled) Max: 400 * 0.1 A = 40 A	Threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 16 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
40.0 ... 41.7	30	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 1.6 Min: 1.6 or 0 (disabled) 160 * 0.1 A = 16 A	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 4.0 Min: 4.0 or 0 (disabled) 400 * 0.1 A = 40 A	Threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A

Byte.Bit	Subindex	Description		
42.0 ... 43.7	31	Threshold for current asymmetry Type: INT16 Resolution: 0.1% = 1 Default: 0 Min: 50 Max: 500		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
44.0 ... 45.7	32	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 3 Min: 1.6 or 0 (disabled) Max: 160 * 0.1 A = 16 A	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 4.0 or 0 (disabled) Max: 400 * 0.1 A = 40 A	Warning threshold for overshoot Type: INT16 Resolution: 0.1 A = 1 Default: 16 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
46.0 ... 47.7	33	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 1.6 Min: 1.6 or 0 (disabled) 160 * 0.1 A = 16 A	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 4.0 Min: 4.0 or 0 (disabled) 400 * 0.1 A = 40 A	Warning threshold for undershoot Type: INT16 Resolution: 0.1 A = 1 Default: 8 Min: 8.0 or 0 (disabled) Max: 800 * 0.1 A = 80 A
48.0 ... 49.7	34	Warning threshold for current asymmetry Type: INT16 Resolution: 0.1% = 1 Default: 0 Min: 50 Max: 500		
50.0 ... 51.7	35	*Reserved*		
52.0 ... 53.7	36	*Reserved*		
54.0 ... 55.7	37	*Reserved*		
		3RR2441 (S00)	**3RR2442 (S0)**	**3RR2443 (S2)**
56.0 ... 57.7	38	Hysteresis (current) Type: INT16 Resolution: 0.1 A = 1 Default: 0.5 Min: 0.1 or 0 (disabled) Max: 30 * 0.1 A = 3 A	Hysteresis (current) Type: INT16 Resolution: 0.1 A = 1 Default: 0.8 Min: 0.1 or 0 (disabled) Max: 80 * 0.1 A = 8 A	Hysteresis (current) Type: INT16 Resolution: 0.1 A Default: 1.6 Min: 0.1 or 0 (disabled) Max: 160 * 0.1 A = 16 A
58.0 ... 59.7	39	Blocking current monitoring [1)] Type: INT16 Default: [0] Min: 2 or 0 (disabled) Max: 5		
60.0 ... 60.7	40	*Reserved*		
61.0 ... 61.1	41	Relay switching behavior Default: [0] [0] Closed-circuit principle NC [1] Open-circuit principle NO		

Byte.Bit	Subindex	Description
61.2 ... 61.3	42	*Reserved*
61.4 ... 61.5	43	*Reserved*

[1] You can disable or enable blocking current monitoring. After enabling it, enter a factor between 2 and 5. It defines when blocking current monitoring trips.

Note

The hysteresis value of the threshold and the warning threshold for current asymmetry is fixed at 40% of the set threshold or warning threshold.

E.5 3UG4815 line monitoring relay

Process image of the outputs (PIQ)

The process output image contains the control commands for the 3UG4815 line monitoring relays.

Table E-15 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start stabilization delay
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process input image contains the most important status information of the 3UG4815 line monitoring relays.

Table E-16 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x01
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Line Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4815-1AA40 3UG4815-2AA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.5.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-17 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

1) Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-18 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Line monitoring	
26.0	Stabilization delay running
26.1	Tripping delay time running (threshold for overshoot)
26.2	Tripping delay time running (threshold for undershoot)
26.3	Tripping delay time running (threshold for voltage asymmetry)

Byte.Bit	Description
27.0	Threshold for overshoot exceeded
27.1	Threshold for undershoot violated
27.2	Threshold for voltage asymmetry exceeded
27.3	Warning threshold for overshoot exceeded
27.4	Warning threshold for undershoot violated
27.5	Warning threshold for voltage asymmetry exceeded
27.6	*Reserved*
27.7	*Reserved*
28.0	*Reserved*
28.1	Phase failure L1
28.2	Phase failure L2
28.3	Phase failure L3
28.4	*Reserved*
28.5	Phase sequence L1-L2-L3
28.6	Phase sequence L3-L2-L1
28.7	Phase sequence error

Note

On phase failure, no further device-specific diagnostics are reported. The bits in diagnostic data set 92 (except for phase failure) are set to 0.
The measured values in data set 94 are set to 7FFF (invalid value).

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-19 Data set (index) 94 (measured values)

Byte.Bit	Description
Line monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	Voltage U L1-L2 Min: 160 V Max: 690 V

Byte.Bit	Description
18.0 ... 19.7	Voltage U L2-L3 Min: 160 V Max: 690 V
20.0 ... 21.7	Voltage U L3-L1 Min: 160 V Max: 690 V
22.0 ... 23.7	Voltage U Lx-Ly min Min: 160 V Max: 690 V
24.0 ... 25.7	Voltage U Lx-Ly max Min: 160 V Max: 690 V
26.0 ... 27.7	*Reserved*
28.0 ... 29.7	*Reserved*
30.0 ... 31.7	*Reserved*
32.0 ... 33.7	*Reserved*
34.0 ... 35.7	*Reserved*
36.0 ... 37.7	Asymmetry Min: 0 % Max: 20 %

Note

If a measured value is outside the measuring range or a phase failure is detected, all measured values will be set to 7FFF (invalid value).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-20 Data set (index) 131 (parameters)

Byte.Bit	Description
Operating system functions	
0.0 ... 15.7	*Reserved*

Byte.Bit	Description
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 48 Min: 0 (disabled) Max: 255
Line monitoring	
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	*Reserved*
25.0 ... 25.1	Stabilization delay (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	Stabilization delay (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	*Reserved*
26.0 ... 26.1	*Reserved*

Byte.Bit	Description
26.2 ... 26.3	Phase sequence monitoring Default: [1] [0] disabled [1] enabled
28.0 ... 29.7	Stabilization delay Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
30.0 ... 31.7	Tripping delay time (in the case of voltage overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 33.7	Tripping delay time (in the case of voltage undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
34.0 ... 35.7	Tripping delay time (in the case of asymmetry) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
36.0 ... 37.7	Threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 4250 Min: 1600 or 0 (disabled) Max: 6900 * 0.1 V = 690 V
38.0 ... 39.7	Threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 3750 Min: 1600 or 0 (disabled) Max: 6900 * 0.1 V = 690 V
40.0 ... 41.7	Threshold for voltage asymmetry Type: INT Resolution: 0,1 % = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0,1 % = 20 %
42.0 ... 43.7	Warning threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 4250 Min: 1600 or 0 (disabled) Max: 6900 * 0.1 V = 690 V

Byte.Bit	Description
44.0 ... 45.7	Warning threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 3750 Min: 1600 or 0 (disabled) Max: 6900 * 0.1 V = 690 V
46.0 ... 47.7	Warning threshold for voltage asymmetry Type: INT Resolution: 0,1 % = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0,1 % = 20 %
48.0 ... 49.7	*Reserved*
50.0 ... 51.7	*Reserved*
52.0 ... 53.7	*Reserved*
54.0 ... 55.7	Hysteresis Type: INT Resolution: 0.1 V = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0.1 V = 20 V
56.0 ... 57.7	Hysteresis (asymmetry) Type: INT Resolution: 0,1 % = 1 Default: 20 Min: 1 or 0 (disabled) Max: 50 * 0,1 % = 5 %
58.0 ... 58.1	Relay switching response Default: [0] [0] Closed-circuit principle (NC) [1] Open-circuit principle (NO)
58.2 ... 58.3	*Reserved*
58.4 ... 58.5	*Reserved*

E.6 3UG4816 line monitoring relay

Process image of the outputs (PIQ)

The process output image contains the control commands for the 3UG4816 line monitoring relays.

Table E-21 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start stabilization delay
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process input image contains the most important status information of the 3UG4816 line monitoring relays.

Table E-22 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x11
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Line Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4816-1AA40 3UG4816-2AA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.6.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-23 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

1) Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-24 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Line monitoring	
26.0	Stabilization delay running
26.1	Tripping delay time running (threshold for overshoot)
26.2	Tripping delay time running (threshold for undershoot)
26.3	Tripping delay time running (threshold for voltage asymmetry)

Byte.Bit	Description
27.0	Threshold for overshoot exceeded
27.1	Threshold for undershoot violated
27.2	Threshold for voltage asymmetry exceeded
27.3	Warning threshold for overshoot exceeded
27.4	Warning threshold for undershoot violated
27.5	Warning threshold for voltage asymmetry exceeded
27.6	*Reserved*
27.7	*Reserved*
28.0	*Reserved*
28.1	Phase failure L1
28.2	Phase failure L2
28.3	Phase failure L3
28.4	Phase failure N conductor
28.5	Phase sequence L1-L2-L3
28.6	Phase sequence L3-L2-L1
28.7	Phase sequence error
29.0 ... 29.7	Reserved

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-25 Data set (index) 94 (measured values)

Byte.Bit	Description
Line monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	*Reserved*
18.0 ... 19.7	*Reserved*
20.0 ... 21.7	*Reserved*
22.0 ... 23.7	*Reserved*
24.0 ... 25.7	*Reserved*
26.0 ... 27.7	Voltage U L1-N Min: 90 V Max: 400 V

Byte.Bit	Description
28.0 ... 29.7	Voltage U L2-N Min: 90 V Max: 400 V
30.0 ... 31.7	Voltage U L3-N Min: 90 V Max: 400 V
32.0 ... 33.7	Voltage U Lx-N min Min: 90 V Max: 400 V
34.0 ... 35.7	Voltage U Lx-N max Min: 90 V Max: 400 V
36.0 ... 37.7	Asymmetry Min: 0 % Max: 20 %

Note

If a measured value is outside the measuring range or a phase failure or neutral failure is detected, all measured values will be set to 7FFF (invalid value).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-26 Data set (index) 131 (parameters)

Byte.Bit	Designation
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled

Byte.Bit	Designation
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 48 Min: 0 (disabled) Max: 255
Line monitoring	
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	*Reserved*
25.0 ... 25.1	Stabilization delay (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	Stabilization delay (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	*Reserved*
26.0 ... 26.1	*Reserved*
26.2 ... 26.3	Phase sequence monitoring Default: [1] [0] disabled [1] enabled
28.0 ... 29.7	Stabilization delay Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s

Byte.Bit	Designation
30.0 ... 31.7	Tripping delay time (in the case of voltage overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 33.7	Tripping delay time (in the case of voltage undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
34.0 ... 35.7	Tripping delay time (in the case of asymmetry) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
36.0 ... 37.7	Threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 2450 Min: 900 or 0 (disabled) Max: 4000 * 0.1 V = 400 V
38.0 ... 39.7	Threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 2150 Min: 900 or 0 (disabled) Max: 4000 * 0.1 V = 400 V
40.0 ... 41.7	Threshold for voltage asymmetry Type: INT Resolution: 0,1 % = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0,1 % = 20 %
42.0 ... 43.7	Warning threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 2450 Min: 900 or 0 (disabled) Max: 4000 * 0.1 V = 400 V
44.0 ... 45.7	Warning threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 2150 Min: 900 or 0 (disabled) Max: 4000* 0.1 V = 400 V

Byte.Bit	Designation
46.0 ... 47.7	Warning threshold for voltage asymmetry Type: INT Resolution: 0,1 % = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0,1 % = 20 %
48.0 ... 49.7	*Reserved*
50.0 ... 51.7	*Reserved*
52.0 ... 53.7	*Reserved*
54.0 ... 55.7	Hysteresis Type: INT Resolution: 0.1 V = 1 Default: 50 Min: 1 or 0 (disabled) Max: 200 * 0.1 V = 20 V
56.0 ... 57.7	Hysteresis (asymmetry) Type: INT Resolution: 0,1 % = 1 Default: 20 Min: 1 or 0 (disabled) Max: 50 * 0,1 % = 5 %
58.0 ... 58.1	Relay switching response Default: [0] [0] Closed-circuit principle (NC) [1] Open-circuit principle (NO)
58.2 ... 58.7	*Reserved*
59.0 ... 59.7	Reserved

E.7 3UG4822 current monitoring relays

Process image of the outputs (PIQ)

The process output image contains the control commands for the 3UG4822 current monitoring relays.

Table E-27 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process input image contains the most important status information of the 3UG4822 current monitoring relays.

Table E-28 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x31
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Current Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4822-1AA40 3UG4822-2AA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.7.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-29 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

1) Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-30 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Current monitoring	
26.0	ON-delay time running
26.1	Tripping delay time running (threshold for overshoot)
26.2	Tripping delay time running (threshold for undershoot)
26.3	*Reserved*

Byte.Bit	Description
27.0	Threshold for overshoot exceeded
27.1	Threshold for undershoot violated
27.2	Warning threshold for overshoot exceeded
27.3	Warning threshold for undershoot violated
27.4	*Reserved*

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-31 Data set (index) 94 (measured values)

Byte.Bit	Description
Current monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	Current I1 (PA)[1), 2)] Min: 0.05 A Max: 10 A (when the transformer transmission factor is deactivated)
18.0 ... 19.7	*Reserved*
20.0 ... 21.7	*Reserved*
22.0 ... 23.7	*Reserved*
24.0 ... 25.7	*Reserved*
26.0 ... 27.7	*Reserved*
28.0 ... 31.7	Current I1[1)] Min: 0.05 A Max: 10 A (when the transformer transmission factor is deactivated)
32.0 ... 35.7	*Reserved*
36.0 ... 39.7	*Reserved*
40.0 ... 43.7	*Reserved*
44.0 ... 47.7	*Reserved*
48.0 ... 51.7	*Reserved*

Byte.Bit	Description
56.0 ... 57.7	Active power
58.0 ... 59.7	Apparent power

1) An overshoot of the measurement range is signaled when the maximum permissible continuous thermal current (I = 15 A) is exceeded.

2) The maximum primary current when a current transformer is used is 750 A.

Note

If a measured value is outside the measurable range, all measured values will be set to 7FFF (invalid value).

E.7.2 Measured values - data set (index) 95

Data set (index) 95 - measured values

Data set 95 contains the same values as data set 94 in floating-point format. The values are stated with a high resolution and precision.

Table E-32 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0 ... 19.7	Active current L1
20.0 ... 23.7	Active current L2
24.0 ... 27.7	Active current L3
28.0 ... 31.7	Active current min.
32.0 ... 35.7	Active current max.
36.0 ... 39.7	Active current avg.
40.0 ... 43.7	Apparent current L1
44.0 ... 47.7	Apparent current L2
48.0 ... 51.7	Apparent current L3
52.0 ... 55.7	Apparent current min.
56.0 ... 59.7	Apparent current max.
60.0 ... 63.7	Apparent current avg.
64.0 ... 67.7	Voltage
68.0 ... 71.7	Power factor/Cos phi
72.0 ... 75.7	Current asymmetry (as defined by Siemens)
76.0 ... 79.7	Current asymmetry (according to IEC/NEMA definition)
80.0 ... 83.7	Switching cycle counter
84.0 ... 87.7	Operating hours counter

Byte.Bit	Description
88.0 ... 91.7	Active power
92.0 ... 95.7	Apparent power

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-33 Data set (index) 131 (parameters)

Byte.Bit	Designation
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled

Byte.Bit	Designation
17.0 ... 17.7	Analog value coding Type: BYTE Default: 16 Min: 0 (disabled) Max: 255
Current monitoring	
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	*Reserved*
25.0 ... 25.1	ON-delay time (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	ON-delay time (at restart) Default: [0] [0] disabled [1] enabled
26.0 ... 27.7	ON-delay time Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
28.0 ... 29.7	Tripping delay time (in the case of current overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
30.0 ... 31.7	Tripping delay time (in the case of current undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 35.7	Threshold for overshoot[1)] Type: INT Resolution: 0.01 A = 1 Default: 250 Min: 5 or 0 (disabled) Max: 1000 * 0.01 A = 10 A

Byte.Bit	Designation
36.0 ... 39.7	Threshold for undershoot[1)] Type: INT Resolution: 0.01 A = 1 Default: 150 Min: 5 or 0 (disabled) Max: 1000 * 0.01 A = 10 A
40.0 ... 43.7	Warning threshold for overshoot[1)] Type: INT Resolution: 0.01 A = 1 Default: 250 Min: 5 or 0 (disabled) Max: 1000 * 0.01 A = 10 A
44.0 ... 47.7	Warning threshold for undershoot[1)] Type: INT Resolution: 0.01 A = 1 Default: 150 Min: 5 or 0 (disabled) Max: 1000 * 0.01 A = 10 A
48.0 ... 51.7	*Reserved*
52.0 ... 55.7	*Reserved*
56.0 ... 59.7	Hysteresis Type: INT Resolution: 0.01 A = 1 Default: 50 Min: 1 or 0 (disabled) Max: 500 * 0.01 A = 5 A
60.0 ... 61.7	Transformer transmission factor Type: INT Default: [OFF] Min: OFF or 2 Max: 750[2)]
62.0 ... 62.1	Relay switching response Default: [00] [00] Closed-circuit principle NC, I > 50 mA [01] Open-circuit principle NO, I > 50 mA [10] Closed-circuit principle NC, U_s = on [11] Open-circuit principle NO, U_s = on
62.2 ... 62.7	*Reserved*

1) Setting OFF for the transformer transmission factor defines a measurement range of 0.05 A to 10 A.

2) The maximum value refers to a current transformer with a secondary current of 1 A. The measuring range of the primary current is limited to 750 A.

E.8 3UG4825 residual current monitoring relay

Process image of the outputs (PIQ)

The process output image contains the control commands for the 3UG4825 current monitoring relays.

Table E-34 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process input image contains the most important status information of the 3UG4825 residual current monitoring relays.

Table E-35 PII - status information

DI (4 bytes)	PII
DI0.0	1: Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	Status output relay K2[1)]
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1]	Data set	Access	Parameter	Length (bytes)	Default setting
Index (dec)	**Index (dec)**				
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x41
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Residual Current Monitoring Relay 3UG4825 for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4825-*CA40
—	0x15 (21)	r	Serial Number	16	Place/Date Number
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.8.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-36 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

[1)] Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-37 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	General warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
17.0 ... 17.7	*Reserved*
18.0 ... 19.7	Parameter error number
Fault current monitoring	
26.0	ON-delay time running
26.1	Tripping delay time running (threshold for overshoot)
26.2	*Reserved*

Byte.Bit	Description
26.3	Initialization time running after applying the control supply voltage
27.0	Threshold for overshoot exceeded
27.1	*Reserved*
27.2	Warning threshold for overshoot exceeded
27.3	*Reserved*
27.4	*Reserved*
27.5	*Reserved*
28.0	Wire break
28.1	Short-circuit
28.2	Measuring range overshoot
29.0 ... 29.7	*Reserved*

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-38 Data set (index) 94 (measured values)

Byte.Bit	Description
Fault current monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	Residual current Ir (PA) Min: 0.0 A Max: 43.0 A
18.0 ... 21.7	Residual current Ir Min: 0.0 A Max: 43.0 A

Note

If a measured value is outside the measurable range, all measured values will be set to 7FFF (invalid value).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-39 Data set (index) 131 (parameters)

Byte.Bit	Description
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 14 Min: 0 (disabled) Max: 255
Fault current monitoring	

Byte.Bit	Description
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	*Reserved*
25.0 ... 25.1	ON-delay time (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	ON-delay time (at restart) Default: [0] [0] disabled [1] enabled
26.0 ... 27.7	ON-delay time Type: INT Resolution: 0.1 s = 1 Default: 0 (disabled) Max: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
28.0 ... 29.7	Tripping delay time (in the case of current overshoot) Type: INT Resolution: 0.1 s = 1 Default: 1 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
30.0 ... 31.7	*Reserved*
32.0 ... 33.7	Threshold for overshoot Type: INT Resolution: 0.01 A = 1 Default: 100 Min: 3 Max: 4000 * 0.01 A = 40 A
34.0 ... 35.7	*Reserved*
36.0 ... 37.7	Warning threshold for overshoot Type: INT Resolution: 0.01 A = 1 Default: 50 Min: 3 or 0 (disabled) Max: 4000 * 0.01 A = 40 A
38.0 ... 39.7	*Reserved*
40.0 ... 41.7	*Reserved*
42.0 ... 43.7	*Reserved*

Byte.Bit	Description
44.0 ... 45.7	Hysteresis (current) Type: INT Resolution: 1 % = 1 Default: 5 Min: 5 or 0 (disabled) Max: 50 *1 % = 50 %
46.0 ... 46.7	*Reserved*
47.0 ... 47.1	Relay switching response Default: 0 [0] Closed-circuit principle NC [1] Open-circuit principle NO Min: 0 Max: 1
47.2 ... 47.3	*Reserved*
47.4 ... 47.5	*Reserved*

E.9 3UG4832 voltage monitoring relay

Process image of the outputs (PIQ)

The process image of the outputs contains the control commands for the 3UG4832 voltage monitoring relays.

Table E-40 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process image of the inputs contains the most important status information of the 3UG4832 voltage monitoring relays.

Table E-41 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x21
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Voltage Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4832-1AA40 3UG4832-2AA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.9.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-42 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

1) Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-43 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Voltage monitor	
26.0	ON-delay time running
26.1	Tripping delay time running (threshold for overshoot)
26.2	Tripping delay time running (threshold for undershoot)
27.0	Threshold for overshoot exceeded

Byte.Bit	Description
27.1	Threshold for undershoot violated
27.2	Warning threshold for overshoot exceeded
27.3	Warning threshold for undershoot violated
27.4	*Reserved*
27.5	*Reserved*

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-44 Data set (index) 94 (measured values)

Byte.Bit	Description
Voltage monitor	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	Voltage U1[1)] Min: 10 V Max: 600 V
18.0 ... 19.7	*Reserved*
20.0 ... 21.7	*Reserved*
22.0 ... 23.7	*Reserved*
24.0 ... 25.7	*Reserved*
26.0 ... 27.7	*Reserved*

[1)] A measuring range overshoot is signaled when a voltage of 690 V is exceeded.

Note

If a measured value is outside the measurable range, all measured values will be set to 7FFF (invalid value).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-45 Data set (index) 131 (parameters)

Byte.Bit	Designation
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 44 Min: 0 (disabled) Max: 255
Voltage monitor	

Byte.Bit	Designation
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	Reserved
25.0 ... 25.1	ON-delay time (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	*Reserved*
26.0 ... 27.7	ON-delay time Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
28.0 ... 29.7	Tripping delay time (in the case of voltage overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
30.0 ... 31.7	Tripping delay time (in the case of voltage undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 33.7	Threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 3000 Min: 100 or 0 (disabled) Max: 6000 * 0.1 V = 600 V
34.0 ... 35.7	Threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 2000 Min: 100 or 0 (disabled) Max: 6000 * 0.1 V = 600 V
36.0 ... 37.7	Warning threshold for overshoot Type: INT Resolution: 0.1 V = 1 Default: 3000 Min: 100 or 0 (disabled) Max: 6000 * 0.1 V = 600 V

Byte.Bit	Designation
38.0 ... 39.7	Warning threshold for undershoot Type: INT Resolution: 0.1 V = 1 Default: 2000 Min: 100 or 0 (disabled) Max: 6000 * 0.1 V = 600 V
40.0 ... 41.7	*Reserved*
42.0 ... 43.7	*Reserved*
44.0 ... 45.7	Hysteresis Type: INT Resolution: 0.1 V = 1 Default: 50 Min: 1 or 0 (disabled) Max: 3000 * 0.1 V = 300 V
46.0 ... 46.1	Relay switching response Default: [0] [0] Closed-circuit principle (NC) [1] Open-circuit principle (NO)
46.2 ... 46.7	*Reserved*
47.0 ... 47.7	*Reserved*

E.10 3UG4841 cos phi and active current monitoring relay

Process image of the outputs (PIQ)

The process image of the outputs contains the control commands for the 3UG4841 cos phi and active current monitoring relays.

Table E-46 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process image of the inputs contains the most important status information of the 3UG4841 cos phi and active current monitoring relays.

Table E-47 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	Status output relay K2[1)]
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1] Index (dec)	Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x51
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS Power Factor / Active Current Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4841-1CA40 3UG4841-2CA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.10.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-48 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

1) Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-49 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Cos phi and active current monitoring	
26.0	ON-delay time running
26.1	Tripping delay time running (threshold for overshoot: cos phi value)
26.2	Tripping delay time running (threshold for undershoot: cos phi value)
26.3	Tripping delay time running (threshold for overshoot: active current value)

Byte.Bit	Description
26.4	Tripping delay time running (threshold for undershoot: active current value)
27.0	Threshold value for overshoot exceeded (cos phi value)
27.1	Threshold value for undershoot violated (cos phi value)
27.2	Threshold for overshoot exceeded (active current value)
27.3	Threshold for undershoot violated (active current value)
27.4	Warning threshold for overshoot exceeded (cos phi value)
27.5	Warning threshold for undershoot violated (cos phi value)
27.6	Warning threshold for overshoot exceeded (active current value)
27.7	Warning threshold for undershoot violated (active current value)
28.0 ... 28.7	*Reserved*
29.0 ... 29.7	*Reserved*

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-50 Data set (index) 94 (measured values)

Byte.Bit	Description
Cos phi and active current monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	cos phi value (PA) Min: 0 Max: 0.99
18.0 ... 19.7	Active current I_R / I_{RES} (PA) Min: 0,2 A Max: 10 A
20.0 ... 21.7	Apparent current I_S (PA) Min: 0,2 A Max: 10 A
22.0 ... 23.7	Active voltage U (PA) Min: 30 V Max: 690 V
24.0 ... 25.7	Active power P_W (PA) Min: 6 W Max: 6900 W
26.0 ... 27.7	*Reserved*
28.0 ... 29.7	*Reserved*

Byte.Bit	Description
30.0 ... 33.7	Active current I_R / I_{RES} (PA) Min: 0,2 A Max: 10 A
34.0 ... 37.7	Apparent current I_S Min: 0,2 A Max: 10 A
38.0 ... 41.7	Active power P_W Min: 6 W Max: 6900 W
42.0 ... 45.7	*Reserved*
46.0 ... 49.7	*Reserved*

Note

If a measured value is outside the measurable range, all measured values will be set to 7FFF (invalid value).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-51 Data set (index) 131 (parameters)

Byte.Bit	Description
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*

Byte.Bit	Description
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 43 Min: 0 (disabled) Max: 255
Cos phi and active current monitoring	
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.4	*Reserved*
25.0 ... 25.1	ON-delay time (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.4 ... 25.5	ON-delay time (at restart) Default: [0] [0] disabled [1] enabled
26.0 ... 27.7	ON-delay time Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
28.0 ... 29.7	Tripping delay time (in the case of overshoot of the cos phi value) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s

Byte.Bit	Description
30.0 ... 31.7	Tripping delay time (in the case of undershoot of the cos phi value) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 33.7	Tripping delay time (in the case of active current overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
34.0 ... 35.7	Tripping delay time (in the case of active current undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
36.0 ... 36.7	Threshold for overshoot of the cos phi value Type: INT Resolution: 0,01 = 1 Default: 50 Min: 1 or 0 (disabled) Max: 99 * 0,01 = 0,99
37.0 ... 37.7	Threshold for undershoot of the cos phi value Type: INT Resolution: 0,01 = 1 Default: 20 Min: 1 or 0 (disabled) Max: 99 * 0,01 = 0,99
38.0 ... 41.7	Threshold for overshoot of the active current value Type: INT Resolution: 0.1 A = 1 Default: 30 Min: 2 or 0 (disabled) Max: 100 * 0.1 A = 10 A
42.0 ... 45.7	Threshold for undershoot of the active current value Type: INT Resolution: 0.1 A = 1 Default: 10 Min: 2 or 0 (disabled) Max: 10.0 * 0.1 A = 10 A
46.0 ... 46.7	Warning threshold for overshoot of the cos phi value Type: INT Resolution: 0,01 = 1 Default: 50 Min: 1 or 0 (disabled) Max: 99 * 0,01 = 0,99

Byte.Bit	Description
47.0 ... 47.7	Warning threshold for undershoot of the cos phi value Type: INT Resolution: 0,01 = 1 Default: 20 Min: 1 or 0 (disabled) Max: 99 * 0,01 = 0,99
48.0 ... 51.7	Warning threshold for overshoot of the active current value Type: INT Resolution: 0.1 A = 1 Default: 30 Min: 2 or 0 (disabled) Max: 100 * 0.1 A = 10 A
52.0 ... 55.7	Warning threshold for undershoot of the active current value Type: INT Resolution: 0.1 A = 1 Default: 10 Min: 2 or 0 (disabled) Max: 100 * 0.1 A = 10 A
56.0 ... 56.7	*Reserved*
57.0 ... 57.7	*Reserved*
58.0 ... 61.7	*Reserved*
62.0 ... 65.7	*Reserved*
66.0 ... 66.7	Hysteresis (cos phi) Type: INT Resolution: 0,01 = 1 Default: 10 Min: 10 or 0 (disabled) Max: 20 * 0,01 = 0,2
67.0 ... 67.7	*Reserved*
68.0 ... 71.7	Hysteresis (active current) Type: INT Resolution: 0.1 A = 1 Default: 5 Min: 1 or 0 (disabled) Max: 30 * 0.1 A = 3.0 A
72.0 ... 72.1	Relay switching response Default: [0] [0] Closed-circuit principle (NC) [1] Open-circuit principle (NO)
72.2 ... 72.7	*Reserved*
73.0 ... 73.7	*Reserved*

E.11 3UG4851 speed monitoring relays

Process image of the outputs (PIQ)

The process image of the outputs contains the control commands for the 3UG4851 speed monitoring relays.

Table E-52 PIQ - control commands

DO (2 bytes)	PIQ
DO0.0	1: Start ON-delay time
DO0.1	---
DO0.2	---
DO0.3	1: Reset
DO0.4	---
DO0.5	---
DO0.6	---
DO0.7	---
DO1.0 - DO1.7	---

Process image of the inputs (PII)

The process image of the inputs contains the most important status information of the 3UG4851 speed monitoring relays.

Table E-53 PII - status information

DI (4 bytes)	PII
DI0.0	Ready
DI0.1	---
DI0.2	1: Group error
DI0.3	1: General warning
DI0.4	Status output relay K1[1)]
DI0.5	---
DI0.6	---
DI0.7	---
DI1.0 - DI1.5	Analog value coding bits 0 to 5
DI1.6	---
DI1.7	---
DI2.0 - DI3.7	Analog value[2)]

[1)] 0: Contact .1 / .2 closed 1: Contact .1 / .4 closed

[2)] The analog value is a 16-bit integer value. Together with the analog value coding (DI1.0 - DI1.5), which defines the unit and resolution of the analog value, this results in the complete measured value. You can find the analog value codings accepted by the monitoring relay in the chapter "Analog value coding (Page 235)".

Identification data

Identification data refers to data stored in a module that supports users in the following areas:

- When checking the system configuration
- When locating modified system hardware
- When troubleshooting a system.

Modules can be uniquely identified using the identification data.

Identification data

DPP [1]	Data set	Access	Parameter	Length (bytes)	Default setting
Index (dec)	Index (dec)				
0x07 (7)	—	r	Vendor ID	2	0x00
0x08 (8)	—	r			0x2A
0x09 (9)	—	r	Device ID	3	0x09
0x0A (10)	—	r			0x08
0x0B (11)	—	r			0x61
—	0x10 (16)	r	Vendor Name	11	SIEMENS AG
—	0x11 (17)	r	Vendor Text	64 max.	Internet (http://support.automation.siemens.com/WW/view/en/37432258/133200)
—	0x12 (18)	r	Product Name	64 max.	SIRIUS RPM Monitoring Relay for IO-Link
—	0x13 (19)	r	Product ID	14	3UG4851-1AA40 3UG4851-2AA40
—	0x16 (22)	r	Hardware Revision	7	*Hardware version* [2]
—	0x17 (23)	r	Firmware Revision	7	*Firmware version* [2]
—	0x18 (24)	r / w	Application Specific Name	32 max.	—

[1] Direct Parameter Page

[2] Value varies for each monitoring relay.

E.11.1 System commands - data set (index) 2

Data set (index) 2 - system commands

Table E-54 Data set (index) 2 - system commands

Data set Index (dec)	Access	Parameter	Length (bytes)	Default setting
0x02 (2)	w	System Command[1)]	1	—

[1)] Permissible vendor-specific system commands:
0x80 for Device Reset
0x82 for Factory Reset

Data set (index) 92 - diagnostics

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-55 Data set (index) 92 - diagnostics

Byte.Bit	Description
Operating system functions 3UG4	
0.0 ... 15.7	*Reserved*
16.0	Ready
16.1	Group error
16.2	Group warning
16.3	*Reserved*
16.4	*Reserved*
16.5	Parameter assignment active
16.6	Invalid parameter
16.7	Self-test error/internal error
18.0 ... 19.7	Parameter error number
Speed monitoring	
26.0	ON-delay time running
26.1	Tripping delay time running (threshold for overshoot)
26.2	Tripping delay time running (threshold for undershoot)
27.0	Threshold for overshoot exceeded

Byte.Bit	Description
27.1	Threshold for undershoot violated
27.2	Warning threshold for overshoot exceeded
27.3	Warning threshold for undershoot violated
27.4	*Reserved*
27.5	*Reserved*
28.0	Sensor - Measuring range overshoot
28.1 ... 28.7	*Reserved*
29.0 ... 29.7	*Reserved*

Data set (index) 94 (measured values)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-56 Data set (index) 94 (measured values)

Byte.Bit	Description
Speed monitoring	
0.0 ... 15.7	*Reserved*
16.0 ... 17.7	Speed Min: 0 Max: 2200

Note

If a measured value is outside the measurable range, all measured values will be set to 7FFF (invalid value).

Note

The speed cannot be lower than 0 rpm.
Undershoot of the measurement range is signaled when 10 min / scaling factor have elapsed without a measurement pulse (e.g. 1 min for a scaling factor of 10).

Data set (index) 131 (parameters)

Note

Bits that are not described in the tables below are reserved and should be ignored.

Note

Sub-indices are not supported.

Table E-57 Data set (index) 131 (parameters)

Byte.Bit	Description
Operating system functions	
0.0 ... 15.7	*Reserved*
16.0	Group diagnostics Default: [1] [0] disabled [1] enabled
16.1	Group error diagnostics Default: [1] [0] disabled [1] enabled
16.2	*Reserved*
16.3	*Reserved*
16.4	Local threshold change Default: [1] [0] disabled [1] enabled
16.5	Local parameter change Default: [1] [0] disabled [1] enabled
16.6	Local reset Default: [1] [0] disabled [1] enabled
16.7	Retentive error memory Default: [0] [0] disabled [1] enabled
17.0 ... 17.7	Analog value coding Type: BYTE Default: 13 Min: 0 (disabled) Max: 255
Speed monitoring	

Byte.Bit	Description
24.0 ... 24.1	Reset response Default: [1] [0] manual [1] automatic
24.2 ... 24.2	*Reserved*
25.0 ... 25.1	ON-delay time (at Power ON) Default: [1] [0] disabled [1] enabled
25.2 ... 25.3	ON-delay time (at manual reset) Default: [1] [0] disabled [1] enabled
25.3 ... 25.4	*Reserved*
26.0 ... 27.7	ON-delay time Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
28.0 ... 29.7	Tripping delay time (in the case of speed overshoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
30.0 ... 31.7	Tripping delay time (in the case of speed undershoot) Type: INT Resolution: 0.1 s = 1 Default: 0 Min: 1 or 0 (disabled) Max: 9999 * 0.1 s = 999.9 s
32.0 ... 33.7	Threshold for speed overshoot Type: INT Default: 1400 rpm Min: 0.1 rpm or 0 (disabled) Max: 2200 rpm
34.0 ... 35.7	Threshold for speed undershoot Type: INT Default: 800 rpm Min: 0.1 rpm or 0 (disabled) Max: 2200 rpm
36.0 ... 37.7	Warning threshold for speed overshoot Type: INT Default: 1400 rpm Min: 0.1 rpm or 0 (disabled) Max: 2200 rpm
38.0 ... 39.7	Warning threshold for speed undershoot Type: INT Default: 800 rpm Min: 0.1 rpm or 0 (disabled) Max: 2200 rpm

Byte.Bit	Description
40.0 ... 41.7	*Reserved*
42.0 ... 43.7	*Reserved*
44.0 ... 45.7	Hysteresis Type: INT Resolution: 0,1 Default: 50 Min: 1 or 0 (disabled) Max: 999 * 0,1 = 99.9
46.0 ... 46.1	Relay switching response Default: [0] [0] Closed-circuit principle (NC) [1] Open-circuit principle (NO)
46.2 ... 46.3	*Reserved*
46.4 ... 46.5	*Reserved*
47.0 ... 47.7	Scaling factor Default: 1 Min: 1 Max: 10