VOLKTEK

# Quick Installation Guide
# HNS-8605P

## 1. Overview

The HNS-8605P Managed PoE+ Switch is designed for semi-harsh environments to withstand vibration, shock, free fall and power surges. The switch provides layer 2 software features required in security systems such as PD-alive check and PoE scheduling to control remote devices from a central location. The switches are equipped with 4-port 10/100/1000Mbps PoE+ downlink and 1-port 10/100/1000Mbps RJ45 for smart surveillance applications.


## 2. Package Checklist

The Switch is shipped with the following items*.
If any of these are missing or damaged, please contact your customer service representative for assistance.

- The Switch x 1
- DIN-Rail kit x 1
- Quick Installation Guide x 1

* Visit our product webpage to locate your model and download the user manual.
* Contents of the package can be adjusted based on customer demand.

***Panel view***

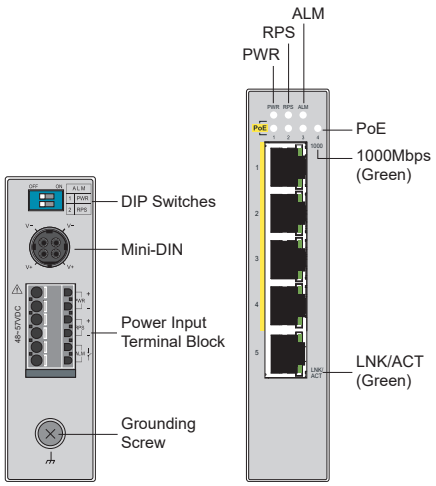


Top View Front View



## 3. Mounting and Dismounting to DIN-Rail


**ATTENTION:**
The Switch is an open type device and shall be DIN-Rail mounted or wall mounted (optional) in the cabinet and the ambient temperature should not exceed the operating temperature.

### *Mounting the switch*


Place the switch on the DIN-Rail from above using the slot, push the front of the switch toward the mounting surface until it snaps into place with a click sound.

### *Dismounting the switch*

Press the switch from top and pull out the lower edge of the switch and then remove the switch from the DIN rail.

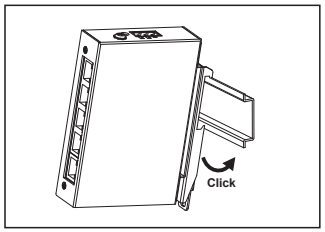


Mounting the Switch (illustration)

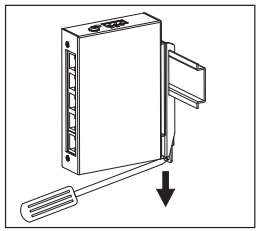

Removing the Switch (illustration)

**ATTENTION:**
A corrosion-free mounting rail is advisable. When installing, make sure to allow for enough space between devices to properly install the cabling. And provide ample space for air flow.

## 4. Grounding the switch

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.

**ATTENTION:**
This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

## 5. Wiring requirements

**WARNING:**

Safety measures should be taken before connecting the power cable. Turn off the power before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct voltage. DO NOT use a voltage greater than what is specified on the product label. Calculate the maximum



possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current exceeds the maximum rating, the wiring can overheat causing serious damage to your equipment.

Please read and follow these guidelines:


- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross make sure the wires are perpendicular at the intersection point.
  **NOTE**: Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- You should separate input wiring from output wiring.
- We advise that you label the wiring to all devices in the system.

### *5.1 Wiring Power Input*


#### *5.1.1 The Switch with terminal block*

You can use either "mini-DIN" or "Terminal Block (PWR)" for primary power and "Terminal Block (RPS)" for secondary power source, to be a Redundant Power Input. Check the polarity while connecting.

Top view of Terminal Block is shown in the figure below:

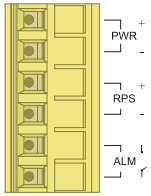


Terminal Block




Mini-DIN

**Caution:**

- Use copper conductors only
- Wiring cable temperature should support at least **105℃**
- The wire gauge for the terminal block should range between **12~18 AWG**

**MISE EN GARDE:**

- Utilisez uniquement des conducteurs en cuivre
- La température maximale du câble ne doit pas dépasser **105˚C**
- Le calibre de fil du bornier doit être compris entre **12 et 18 AWG**


To insert power wire and connect the specified voltage range at a maximum of 2.6A DC power to the power terminal block, follow the steps below:

1. Use a flat-head screwdriver to push in and open the wire clamp.
2. Insert the negative/positive DC wires into the ( - / +) terminals, respectively as shown on the label.
3. Tighten the wire-clamp by releasing the screwdriver to prevent the wires from loosening.

**ATTENTION:**
Please use a power supply from 48~57VDC, the device power shall be supplied by SELV circuit.

**NOTE**: We strongly request that each Industrial PoE switch connects to the individual power supply. Please don't use one power supply to two or more PoE switches at a time.

### *5.2 Wiring the relay contact (ALM)*

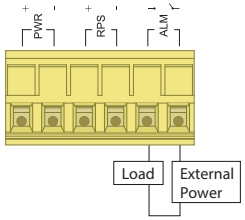


**Relay rating: 24V, 1A**

The switch has one set of relay alarm output. This relay contact uses two contacts of the terminal block on the switch top panel. The two contacts of the terminal block connector are used to detect user-configured events. The two wires attached to the fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

### *5.3 Cabling RJ45*

Connect one end of an Ethernet cable into the Ethernet port of the switch and the other end to the attached networking device.

- Ports 1-5 supports 10/100/1000Mbps speed
- All the RJ45 ports on the switch support auto-negotiation and auto MDI/MDI-X to eliminate the need for crossover cabling.

*Category 5e cable or above should be used.

## 6. DIP Switch Setting




| | | |
|---|---|---|
| 1 | PWR | ON: Primary power alarm reporting is enabled |
| | | OFF: Primary power alarm reporting is disabled |
| 2 | RPS | ON: Redundant power alarm reporting is enabled |
| | | OFF: Redundant power alarm reporting is disabled |

## 7. LED Indicators

| | | |
|---|---|---|
| PWR (Green) | Illuminated | Primary power on |
| | Off | Primary power off or failure |
| RPS (Green) | Illuminated | Redundant power on |
| | Off | Redundant power off or failure |
| ALM (Red) | Illuminated | Alarm triggered for abnormal power status and anomalous features. |
| | Off | Normal operation or DIP switch OFF |



| | | |
|---|---|---|
| PoE (Green) (1~4th RJ45 port) | Illuminated | Supplying power to powered device (PD) |
| | Off | PoE power feeding is off or not supplied |
| 1000 (Green) (1~5th RJ45 port) | Illuminated | Link speed at 1000Mbps |
| | Off | Link speed at 10/100Mbps |
| LNK/ACT (Green) (1~5th port) | Illuminated | Port link-up |
| | Blinking | Activity (receiving or transmitting data) |
| | Off | Port disconnected or link failed |

## 8. Environmental limits

| | |
|---|---|
| Operating Temperature | -10°C~60°C (14°F~140°F) |
| Storage Temperature | -40°C~85°C (-40°F~185°F) |
| Ambient relative humidity | 5 to 95% (non condensing) |

**ATTENTION:**
This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

**ATTENTION:**
If the equipment is used in a manner not specified by the VOLKTEK, the protection provided by the equipment may be impaired.

**ATTENTION:**
Please leave at least 5cm of space at the left and right of the unit for ventilation.

## 9. Configuration

***Connect through Web Browser:***

- Connect your computer to one of the Ethernet ports.
- Use the default IP-address 192.168.0.254 to login to the switch.

| | |
|---|---|
| Default Username | admin |
| Default Password | admin |

**NOTE:** For more details on configuration please refer user manual.



## LIMITED WARRANTY

VOLKTEK Corporation warrants this product against defect in materials and workmanship for a period of THREE (3) YEARS to the original purchaser.

If you discover a defect, VOLKTEK will, at its sole option, repair or replace the product at no additional charge, provided that you contact VOLKTEK technical support to obtain a Return Merchandise Authorization Number (RMA) and instruction on how and where repairs can be made. This warranty does not apply if the product has been damaged by accident, abuse, misuse, misapplication, neglect, fire, water, lightning or other acts of nature, failure to follow supplied instructions, installation or removal, have been repaired or have undergone attempted repair by unauthorized personnel without written consent from VOLKTEK, modified, defaced, or has its serial numbers removed. VOLKTEK reserves the right to use remanufactured, refurbished, or used parts and components in making warranty repairs.

All expressed or implied warranties for this product, including the implied warranties of merchantability and fitness for a particular purpose are limited in duration to the warranty period. No warranties expressed or implied will applied after this period. VOLKTEK shall not be liable for lost profits, damage to other property caused by any defects of this product, or damages based upon inconvenience, loss of product use, loss of time, commercial use, incidental and/or consequential damages for the breach of any expressed or implied warranty, including damages to property, and to the extent permitted by law, damages for personal injury, even if VOLKTEK has been advised of the responsibilities of such damages.

If you have any further questions, please contact Customer Support:

### Address of the manufacturer.

VOLKTEK CORPORATION
4F, 192 Liancheng Rd, Zhonghe, New Taipei 235038, Taiwan
Email: support@volktek.com
Tel: +886-2-8242-1000
Fax: +886-2-8242-3333